

# Load Centers

## Manual Transfer Interlock Kits for Load Centers and Meter Combinations

LOAD CENTERS & CIRCUIT BREAKERS

### 1 Prevents dangerous feedback between two sources of power

#### Manual Transfer Interlock Kits<sup>①</sup>

Catalog number	Usage Information	Utility main breaker types	Standby main breaker types	Interlock Number
<b>ECSBPK01</b> 	For use on load centers or meter combinations that will accept 2-pole circuit breakers opposite one another as shown.	QP, QPH, HQPH	QP, QPH, HQPH	<b>1</b> 
<b>ECSBPK02</b> 	For use on load centers or meter combinations that will accept 2- or 4-pole next to a 2-pole circuit breaker side by side as shown.	QP, QPH, HQPH	QP, QPH, HQPH	<b>2</b> 
<b>ECSBPK03<sup>②</sup></b> 	For use on Ultimate <sup>TM</sup> and Rock Solid load centers, 150 amp and higher, to connect the main breaker to a 2-pole circuit breaker.	MBK150A, MBK200A, OR MBK225A	QP, QPH, HQPH	<b>3</b> 
<b>ECSBPK04<sup>②</sup></b> 	For use on Ultimate and Rock Solid load centers, 125 amp and lower, to connect the main breaker to a 2-pole circuit breaker.	MBK100A or MBK125A	QP, QPH, HQPH	<b>4</b> 
<b>ECSBPK05</b> 	For use on load centers or meter combinations that will accept a QNR (MD-TR) frame circuit breaker next to a 2-pole circuit breaker as shown.	QNR, QNRH, HQNR	QP, QPH, HQPH	<b>5</b> 
<b>CSBPK06<sup>②</sup></b> 	For use on load centers or meter combinations that will accept a QN (MD-T) frame circuit breaker next to a 2-pole circuit breaker as shown.	QN, QNH, HQN	QP, QPH, HQPH	<b>6</b> 
<b>ECSBPK07</b> 	For use on load centers or meter combinations that will accept two QNR (MD--TR) circuit breakers side by side as shown OR will accept two QN (MD--T) circuit breakers side by side as shown.	QNR, QNRH, HQNR, QN, QNH, HQN	QNR, QNRH, HQNR QN, QNH, HQN	<b>7</b> 
<b>ECSBPK08<sup>②</sup></b> 	For use on 8 space, over/under, OH/UG feed meter combinations as shown. Limited application to specific catalog numbers.	QPP, QPPH	QP, QPH, HQPH	<b>8</b> 
<b>ECSBPK09<sup>②</sup></b> 	For use on 20 space, over/under, OH/UG feed meter combinations as shown. Limited application to specific catalog numbers.	QPP, QPPH	QP, QPH, HQPH	<b>9</b> 

① Manual breaker interlock kits are attached to the breakers not the trim of the load center.

② These kits take up 2 spaces adjacent to the 2 pole breaker being interlocked. Those spaces cannot accommodate filler plates.