



USB RECHARGEABLE BEACON™ HARD HAT LIGHT LUMIÈRE DE BEACON™ DE RECHARGEABLE DE USB POUR CASQUE DE PROTECTION LUZ DEL CASCO BEACON™ RECARGABLE CON USB

IMPORTANT SAFETY INSTRUCTIONS

WARNING READ AND UNDERSTAND ALL INSTRUCTIONS. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

1. **SAVE THESE INSTRUCTIONS** - THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR THE REDLITHIUM® USB BATTERY CAT. NO. 48-11-2130 AND USB RECHARGEABLE LIGHT.
2. **USE AND CHARGE ONLY REDLITHIUM® USB BATTERIES IN THIS USB RECHARGEABLE LIGHT. OTHER TYPES OF BATTERIES MAY CAUSE PERSONAL INJURY AND DAMAGE.**
3. **BEFORE USING THE BATTERY AND LIGHT, READ THIS OPERATOR'S MANUAL AND ALL LABELS ON THE BATTERY AND LIGHT.**
4. **USE ONLY WITH LISTED/CERTIFIED ITC POWER SUPPLY.** Others may result in a risk of fire, electric shock or personal injury.
5. **AVOID DANGEROUS ENVIRONMENTS.** Do not charge battery in rain, snow, damp or wet locations. Do not use battery or charger in the presence of explosive atmospheres (gaseous fumes, dust or flammable materials) because sparks may be generated when inserting or removing battery, possibly causing fire.
6. **CHARGE IN A WELL VENTILATED AREA.** Do not block charger vents. Keep them clear to allow proper ventilation. Do not allow smoking or open flames near a charging battery. Vented gases may explode.
7. **MAINTAIN CORD.** When unplugging charger, pull plug rather than cord to reduce the risk of damage to the electrical plug and cord. Never carry charger by its cord. Keep cord from heat, oil and sharp edges. Make sure cord will not be stepped on, tripped over or subjected to damage or stress. Do not use charger with damaged cord or plug. Have a damaged charger replaced immediately.
8. **USE ONLY RECOMMENDED ATTACHMENTS.** Use of an attachment not recommended or sold by the battery charger or battery manufacturer may result in a risk of fire, electric shock or personal injury.
9. **TO REDUCE THE RISK OF ELECTRIC SHOCK,** always unplug charger before cleaning or maintenance.
10. **DO NOT BURN OR INCINERATE BATTERY PACKS.** Battery may explode, causing personal injury or damage. Toxic fumes and materials are created when battery are burned.
11. **DO NOT CRUSH, DROP, OR DAMAGE** battery. Do not use a battery or charger that has received a sharp blow, been dropped, run over, or damaged in any way (e.g., pierced with a nail, hit with a hammer, stepped on).
12. **DO NOT DISASSEMBLE.** Incorrect reassembly may result in the risk of electric shock, fire or exposure to battery chemicals. If it is damaged, take it to a MILWAUKEE service facility.
13. **BATTERY CHEMICALS CAUSE SERIOUS BURNS.** Never allow contact with skin, eyes, or mouth. If a damaged battery leaks battery chemicals, use rubber or neoprene gloves to dispose of it. If skin is exposed to battery fluids, wash with soap and water and rinse with vinegar. If eyes are exposed to battery chemicals, immediately flush with water for 20 minutes and seek medical attention. Remove and dispose of contaminated clothing.
14. **DO NOT SHORT CIRCUIT.** A short-circuited battery pack may cause fire, personal injury, and product damage. A battery pack will short circuit if a metal object makes a connection between the positive and negative contacts on the battery pack. Do not place a battery pack near anything that may cause a short circuit, such as coins, keys or nails in your pocket.
15. **DO NOT ALLOW FLUIDS TO FLOW INTO BATTERY PACK.** Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.
16. **STORE** in a cool, dry place. Do not store battery where temperatures may exceed 120°F (50°C) such as in direct sunlight, a vehicle or metal building during the summer.
17. **TO REDUCE THE RISK OF INJURY, CLOSE SUPERVISION IS NECESSARY** when an appliance is used near children.
18. **STORE IDLE LIGHT OUT OF REACH OF CHILDREN.** Warm lights can become hazardous in the hands of children.
19. **KNOW YOUR LIGHT.** Read this manual carefully to learn your light's applications and limitations as well as potential hazards associated with this type of light.
20. **MAINTAIN LABELS AND NAMEPLATES.** These carry important information. If unreadable or missing, contact a MILWAUKEE service facility for a free replacement.

INSTRUCTIONS FOR FUTURE REFERENCE.

SPECIFICATIONS

Cat. No.	2116-20
USB Input Volts	5 VDC
USB Input Amps	0.1 - 2.1 A
Output Volts	4 VDC
Output Amps	2.1A
Battery Cat. No.	48-11-2130
Volts	4 VDC
Operating Temperature	
Battery and Charger	40°F to 104°F (4°C to 40°C)
Battery and Tool	0°F to 140°F (-18°C to 60°C)
Power Supply Cat. No.	44-66-1202

SYMBOLOLOGY

	Volts		Read Operator's Manual
	Direct Current		Properly Recycle Batteries
	Amps		BFP Backfeed Protected
	Do not stare at the operating light source		California Energy Commission

BATTERY

WARNING To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.

Maintenance and Storage

Do not expose your battery or cordless tools to water or rain, or allow them to get wet. This could damage the tool and battery. Do not use oil or solvents to clean or lubricate your battery. The plastic casing will become brittle and crack, causing a risk of injury.

Store batteries at room temperature away from moisture. Do not store in damp locations where corrosion of terminals may occur. As with other battery types, permanent capacity loss can result if the pack is stored for long periods of time at high temperatures (over 120° F). MILWAUKEE Li-Ion batteries maintain their charge during storage longer than other battery types. After about a year of storage, charge the battery as normal.

WARNING To reduce the risk of injury or explosion, never burn or incinerate a battery pack even if it is damaged, dead or completely discharged. When burned, toxic fumes and materials are created.

Disposing of MILWAUKEE Li-Ion Battery

MILWAUKEE Li-Ion batteries are more environmentally friendly than some other types of power tool batteries. Always dispose of your battery according to federal, state and local regulations. Contact a recycling agency in your area for recycling locations. Even discharged batteries contain some energy. Before disposing, use electrical tape to cover the terminals to prevent the battery from shorting, which could cause a fire or explosion.

RBRC Battery Recycling Seals

The RBRC™ Battery Recycling Seals (see "Symbolology") on your batteries indicate that MILWAUKEE has arranged for the recycling of that battery with the Rechargeable Battery Recycling Corporation (RBRC). At the end of your battery's useful life, return the battery to a MILWAUKEE Branch Office/Service Center or the participating retailer nearest you. For more information, visit the RBRC web site at www.rbrc.org.

USB RECHARGEABLE LIGHT

WARNING Use and charge only REDLITHIUM® USB batteries in this USB rechargeable light. Other types of batteries may cause personal injury and damage.

Inserting the Battery

1. Open the battery door.
2. Line up the battery with the compartment and fully insert the battery.
3. Close the battery door.

Charging the Battery

1. Plug your USB cable into a power source such as an AC wall adaptor, computer or car port.
2. Lift the rubber cover to expose the micro USB port. Insert the micro USB plug into the micro USB port. Users may experience longer charge times from laptops and other power sources.
3. The indicator light will display the charging status:
Red Solid: Charging, 0-79% charged
Green Flashing: Charging, 80-99% charged
Green Solid: 100% Charged
Red/Green Flashing: Damaged or Faulty Battery

If the light indicator flashes red and green, check that the battery is fully seated into the bay. Remove the battery and reinsert. If the light continues to flash red and green, the battery may be extremely hot or cold, or wet. Allow the battery to cool down, warm up, or dry out and then reinsert. If the problem persists, contact a MILWAUKEE service facility.

Operation

WARNING To reduce the risk of injury, do not look directly into the light when the light is on.

Headlamp

Clip the light onto the strap and use the buckle to adjust the strap to the required size. Use the included clips to attach to a hard hat. Rotate the light up or down as needed.

Press the power button to turn the light on and off. Press the mode button to cycle through Spot/Flood, Flood High, Flood Medium, Flood Low, and Spot.

The fuel gauge will display the battery life:

- Green Solid: 50-100% remaining
- Yellow Solid: 11-49% remaining
- Red Solid: 3-10% remaining
- Red Flashing: 0-3% remaining

During use, when the battery charge reaches 3%, the main LED and charge indicator will flash, indicating up to 5 minutes of runtime remains. Prior to immediate shutdown, the main LED will flash 3 times, then the tool will shutdown. Remaining runtime may be less than 5 minutes if the light is turned on when battery capacity is already 0-3%.

BEACON™ LIGHT

Press the power button to cycle through on, strobe and off. Press and hold the power button to turn off without cycling.

WARNING To reduce the risk of injury, always unplug the charger and remove the battery from the charger before performing any maintenance. The charger and battery have no internal serviceable parts. Never disassemble the battery or charger.

Maintenance and Storage

Store your charger in a cool, dry place.

As a general practice, it is best to unplug battery chargers and remove batteries when not in use. No battery damage will occur, however, if the charger and battery are left plugged in.

WARNING To reduce the risk of injury and damage, never immerse your battery or charger in liquid or allow a liquid to flow inside them.

Cleaning

Clean out dust and debris from charger vents and electrical contacts by blowing with compressed air. Use only mild soap and a damp cloth to clean the battery and charger, keeping away from all electrical contacts. Certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include gasoline, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around batteries, charger, or tools.

SERVICE - UNITED STATES

1-800-SAWDUST (1.800.729.3878)

Monday-Friday, 7:00 AM - 6:30 PM CST
or visit www.milwaukeeetool.com

Contact Corporate After Sales Service Technical Support with technical, service/repair, or warranty questions.

Email: metproductsupport@milwaukeeetool.com

Become a Heavy Duty Club Member at www.milwaukeeetool.com to receive important notifications regarding your tool purchases.

SERVICE - CANADA

Milwaukee Tool (Canada) Ltd

1.800.268.4015

Monday-Friday, 7:00 AM - 4:30 PM CST
or visit www.milwaukeeetool.ca

LIMITED WARRANTY - USA & CANADA

Every MILWAUKEE REDLITHIUM USB battery and charger* is warranted to the original purchaser only to be free from defects in material and workmanship. Subject to certain exceptions, MILWAUKEE will repair or replace a REDLITHIUM USB battery or charger* after examination, is determined by MILWAUKEE to be defective in material or workmanship for a period of two (2) years after the date of purchase unless otherwise noted. Return of the REDLITHIUM USB battery or charger to a MILWAUKEE factory Service Center location or MILWAUKEE Authorized Service Station, freight prepaid and insured, is required. For the proper shipping procedure of battery packs, contact 1.800.SAWDUST (1.800.729.3878), or go to www.milwaukeeetool.com. A copy of the proof of purchase should be included with the return product. This warranty does not apply to damage that MILWAUKEE determines to be from repairs made or attempted by anyone other than MILWAUKEE authorized personnel, misuse, alterations, abuse, normal wear and tear, lack of maintenance, or accidents.

Normal Wear: This warranty does not cover repair or replacement when normal use has exhausted the life of a part including, but not limited to charging cables, and wall plugs.

*This warranty does not cover any cordless product sold with the REDLITHIUM USB battery and/or charger. There are separate and distinct warranties available for these products. ACCEPTANCE OF THE EXCLUSIVE REPAIR AND REPLACEMENT REMEDIES DESCRIBED HEREIN IS A CONDITION OF THE CONTRACT FOR THE PURCHASE OF EVERY MILWAUKEE PRODUCT. IF YOU DO NOT AGREE TO THIS CONDITION, YOU SHOULD NOT PURCHASE THE PRODUCT. IN NO EVENT SHALL MILWAUKEE BE LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, OR FOR ANY COSTS, ATTORNEY FEES, EXPENSES, LOSSES OR DELAYS ALLEGED TO BE AS A CONSEQUENCE OF ANY SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES, WRITTEN OR ORAL. TO THE EXTENT PERMITTED BY LAW, MILWAUKEE DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE. TO THE EXTENT SUCH DISCLAIMER IS NOT PERMITTED BY LAW, SUCH IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY AS DESCRIBED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. This warranty applies to product sold in the U.S.A. and Canada only. Please consult the Find a Service Center Search in the Parts & Service section of MILWAUKEE's website www.milwaukeeetool.com or call 1.800.SAWDUST (1.800.729.3878) to locate your nearest MILWAUKEE factory Service Center location.

LIMITED WARRANTY - USA & CANADA

Every MILWAUKEE Personal Lighting Product* (see exceptions below) is warranted to the original purchaser only to be free from defects in material and workmanship. Subject to certain exceptions, MILWAUKEE will repair or replace any part on a personal lighting product which, after examination, is determined by MILWAUKEE to be defective in material or workmanship for the lifetime of the personal lighting product. Return of the personal lighting product to a MILWAUKEE factory Service Center location or MILWAUKEE Authorized Service Station, freight prepaid and insured, is required. A copy of the proof of purchase should be included with the return product. This warranty does not apply to damage that MILWAUKEE determines to be from repairs made or attempted by anyone other than MILWAUKEE authorized personnel, misuse, alterations, abuse, normal wear and tear, lack of maintenance, accidents, or caused by alkaline batteries.

Normal Wear: This warranty does not cover repair or replacement when normal use has exhausted the life of a part including, but not limited to clips, straps, charging cables, wall plugs, and rubber gaskets. This warranty does cover the LED in the personal lighting products, subject to the limitations herein.

*This warranty does not cover Cordless Battery Packs or Chargers. There are separate and distinct warranties available for these products. ACCEPTANCE OF THE EXCLUSIVE REPAIR AND REPLACEMENT REMEDIES DESCRIBED HEREIN IS A CONDITION OF THE CONTRACT FOR THE PURCHASE OF EVERY MILWAUKEE PRODUCT. IF YOU DO NOT AGREE TO THIS CONDITION, YOU SHOULD NOT PURCHASE THE PRODUCT. IN NO EVENT SHALL MILWAUKEE BE LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, OR FOR ANY COSTS, ATTORNEY FEES, EXPENSES, LOSSES OR DELAYS ALLEGED TO BE AS A CONSEQUENCE OF ANY SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES, WRITTEN OR ORAL. TO THE EXTENT PERMITTED BY LAW, MILWAUKEE DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE. TO THE EXTENT SUCH DISCLAIMER IS NOT PERMITTED BY LAW, SUCH IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY AS DESCRIBED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. This warranty applies to product sold in the U.S.A. and Canada only. Please consult the Find a Service Center Search in the Parts & Service section of MILWAUKEE's website www.milwaukeeetool.com or call 1.800.SAWDUST (1.800.729.3878) to locate your nearest MILWAUKEE factory Service Center location.

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT LIRE ET COMPRENDRE TOUTES LES INSTRUCTIONS. Le non-respect des instructions ci-après peut entraîner des chocs électriques, des incendies et/ou des blessures graves.

CONSERVER CES INSTRUCTIONS

1. **GARDEZ CES INSTRUCTIONS** – CE MANUEL CONTIENT DES INSTRUCTIONS D'OPÉRATION ET SÉCURITÉ IMPORTANTES À PROPOS DE LA PILE RECHARGEABLE PAR USB REDLITHIUM® N.º 48-11-2130 AINSI QUE LA LAMPE RECHARGEABLE PAR USB.
2. **N'UTILISEZ NI NE CHARGEZ QUE LES PILES RECHARGEABLES PAR USB REDLITHIUM® DANS CETTE LAMPE DE POCHE RECHARGEABLE PAR USB. D'AUTRES TYPES DE PILES POURRONT ENTRAÎNER DES BLESSURES ET DOMMAGES.**
3. **AVANT D'UTILISER LA PILE ET LA LAMPE DE POCHE, LISEZ CE MANUEL DE L'OPÉRATEUR AINSI QUE TOUTES LES ÉTIQUETTES QUI SE TROUVERONT SUR LA LAMPE DE POCHE ET LA PILE.**
4. **N'UTILISEZ QUE D'ALIMENTATION ÉLECTRIQUE LISTÉE/CERTIFIÉE TI.** D'autres pourront entraîner des risques d'incendie, chocs électriques ou blessures.
5. **ÉVITEZ DES MILIEUX DANGEREUX.** Ne chargez pas la pile dans des milieux ayant de la pluie, neige, humidité ni d'environnements mouillés. N'utilisez pas la pile ni le chargeur dans des atmosphères explosives (ayant des vapeurs gazeuses, poudre ou matériel inflammable) parce que des étincelles pourront être créées lorsque la pile est insérée ou retirée, pouvant bien provoquer des incendies.
6. **CHARGEZ-LA DANS UN ESPACE BIEN AÉRÉ.** Ne bloquez pas les bouches du chargeur. Préservez-les propres pour assurer une bonne aération. Ne laissez pas de fumées ni flammes déconstruites près d'une pile du chargeur. Les gaz aérés pourront exploser.
7. **PRÉSERVEZ LE FIL.** Lorsque le chargeur est débranché, tirez de la fiche en lieu du fil afin de réduire les risques de dommages sur tous les deux. Ne portez jamais le chargeur par son fil. Ne laissez pas que le fil soit exposé à chaleur, huile ni aux bords tranchants. Assurez-vous de laisser le fils dans un endroit où il ne pourra pas être marché, trébuché ou endommagé ni sous contrainte. N'utilisez pas le chargeur avec une fiche ou un fil endommagés. Demandez que le chargeur endommagé soit remplacé immédiatement.
8. **N'UTILISEZ QUE LES ACCESSOIRES RECOMMANDÉS.** L'utilisation d'un accessoire que ne soit pas recommandé ou vendu par le fabricant de la pile ou le chargeur pourra entraîner des risques d'incendies, chocs électriques ou blessures.
9. **AFIN DE RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE,** débranchez toujours le chargeur avant de le nettoyer ou l'entretenir.
10. **NE BRÛLEZ PAS NI N'INCINÉREZ PAS LES BLOC-PILES.** La pile pourra exploser, entraînant des dommages ou blessures. Des vapeurs ou matériaux toxiques sont créés lorsque la pile est brûlée.
11. **N'ÉCRASEZ PAS la pile, NE LA LAISSEZ PAS TOMBER NI NE L'ENDOMMAGEZ PAS.** N'utilisez pas une pile ni un chargeur qui ait reçu un coup sec, été marché, écrasé ou endommagés de n'importe quelle forme (par exemple, percé par un clou, frappé par un marteau, marché).
12. **NE LE DÉASSEMBLEZ PAS.** Le démantèlement incorrect peut entraîner un risque de chocs électriques, incendie ou exposition à produits chimiques. Si l'outil est endommagé, amenez-le au centre de service MILWAUKEE.
13. **LES PRODUITS CHIMIQUES ENTRAÎNENT DES BRÛLURES GRAVES.** Ne permettez pas qu'ils entrent en contact avec la peau, les yeux ni la bouche. Si de la pile endommagée des produits chimiques se coulent, utilisez des gants en caoutchouc ou néoprène pour se débarrasser d'elle. Si la peau est exposée à des fluides de la pile, lavez-la avec du savon et de l'eau et rincez-la avec du vinaigre. Si les yeux sont exposés aux produits chimiques de la pile, lavez-les avec pleine de l'eau pendant 20 minutes et consultez un médecin. Retirez les vêtements contaminés et se débarrassez d'eux.
14. **NE PAS COURT-CIRCUITER.** Un bloc-piles court-circuité pourra mener un incendie, des blessures physiques et endommager le produit. Un bloc-piles court-circuitera si un objet métallique établit une connexion entre les contacts positif et négatif du bloc-piles. Mettre le bloc-piles à l'écart de tout ce qui pourra causer un court-circuit, tel que des pièces de monnaie, des clés ou des clous dans votre poche.
15. **NE PAS LAISSER LES FLUIDES ENTRER DANS LE BLOC-PILES.** Les fluides corrosifs et conducteurs, tels que l'eau de mer, quelques produits chimiques industriels et solutions d'eau de Javel ou d'autres produits ayant de l'hypochlorite, etc., pourront provoquer des courts-circuits.
16. **L'ENTROPOSEZ** dans un endroit sec et bien aéré. Ne mettez la pile où les températures pourront dépasser les 50 °C (120 °F), tels que la lumière du soleil, un véhicule ou un bâtiment en acier en été.
17. **AFIN DE RÉDUIRE LE RISQUE DE BLESSURES, SUPERVISION ÉTROITE EST REQUISE** quand un appareil est utilisé près d'enfants.
18. **TENEZ L'INDICATEUR DE REPOS HORS DE LA PORTÉE DES ENFANTS.** Des lumières chaudes peuvent être dangereuses dans la portée des enfants.
19. **CONNAISSEZ VOTRE LAMPE.** Lisez attentivement ce manuel de l'opérateur pour savoir à propos des applications et limitations de la lampe ainsi que les dangers possibles liés à ce type de lampe.
20. **PRÉSERVEZ LES ÉTIQUETTES ET PLAQUES NOMINATIVES.** Elles montrent d'information importante. Si elle est illisible ou manquante, contactez un centre de service MILWAUKEE afin de recevoir un outil substitutif gratuit.

LIRE ET CONSERVER TOUTES LES INSTRUCTIONS POUR RÉFÉRENCE FUTURE.

SPECIFICATIONS

No de Cat.	2116-20
Voltage d'entrée par USB	5 VDC
Amprage d'entrée par USB	0,1 - 2,1 A
Voltage de sorti	4 VDC
Amprage de sorti	2,1A
Cat. de la pile	48-11-2130
Voltage	4 VDC
Température opérative	
Pile et chargeur	4°C to 40°C (40°F to 104°F)
Pile et outil	-18°C to 60°C (0°F to 140°F)
No de Cat. de la prise d'alimentation	44-66-1202

PICTOGRAPHIE

	Volts		Lisez le manuel de l'opérateur
	Courant direct		Recyclage correct des batteries
	Ampères		BFP Rétro-alimentation protégée
	No mire fijamente la fuente de luz operativa		Commission à l'Énergie de la Californie

BLOC-PILES

AVERTISSEMENT Pour réduire le risque d'incendie, de blessures corporelles et de dommages causés par un court-circuit, ne jamais immerger l'outil, le bloc-piles ou le chargeur dans un liquide ou laisser couler un fluide à l'intérieur de celui-ci. Les fluides corrosifs ou conducteurs, tels que l'eau de mer, certains produits chimiques industriels, les produits de blanchiment ou de blanchiment, etc., peuvent provoquer un court-circuit.

Entretien et entreposage

Ne pas exposer votre bloc-piles ni vos outils sans fil à l'eau ou la pluie, ou les laisser prendre l'humidité. Cela pourrait endommager l'outil et le bloc-piles. Ne pas utiliser d'huile ou solvants pour nettoyer ou lubrifier votre bloc-piles. Le boîtier du bloc-piles risque de devenir cassant ou de se fendiller, causant un risque de blessure. Entreposer les blocs-piles à température ambiante à l'abri de l'humidité. Ne pas les entreposer dans un endroit humide où la corrosion des bornes peut survenir. Comme pour d'autres types de batteries, une perte permanente de capacité peut survenir si le bloc-piles est entreposé pendant longtemps à haute température (48°C/120°F). Les piles Li-ion MILWAUKEE maintiennent leur charge pendant plus longtemps que les autres types de piles. Après un an d'entreposage, rechargez le bloc-piles comme d'habitude.

AVERTISSEMENT Pour réduire le risque d'explosion, ne jamais brûler un bloc-piles, même s'il est endommagé ou complètement déchargé. Lorsqu'il est brûlé, des matières et vapeurs toxiques sont produites.

