

AIR CONDITIONER

Wall mounted type

DESIGN & TECHNICAL MANUAL

INDOOR



ASUH09LPAS
ASUH12LPAS

OUTDOOR



AOUH09LPAS1



AOUH12LPAS1

FUJITSU GENERAL LIMITED

Notices:

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

Trademarks

FGLair™ is trademark of Fujitsu General Limited in the United States, other countries or both.

Google Play™ is trademark of Google LLC.

App Store® is a service mark of Apple Inc., registered in the U.S. and other countries.

CONTENTS

Part 1. INDOOR UNIT	1
1. Specifications	2
2. Dimensions	4
2-1. Models: ASUH09LPAS and ASUH12LPAS	4
2-2. Installation space requirement	5
3. Wiring diagrams	6
3-1. Models: ASUH09LPAS and ASUH12LPAS	6
4. Capacity table	7
4-1. Cooling capacity.....	7
4-2. Heating capacity	9
5. Fan performance	10
5-1. Air velocity distributions.....	10
5-2. Airflow	12
6. Operation noise (sound pressure)	14
6-1. Noise level curve.....	14
6-2. Sound level check point	15
7. Safety devices	16
8. External input and output	17
8-1. External input.....	18
8-2. External output.....	20
8-3. Combination of external input and output.....	22
8-4. Details of function	24
9. Group connection	46
10. Remote controller	47
10-1. Wireless remote controller	47
11. Function settings	49
11-1. Function settings by using remote controller.....	49
11-2. Custom code setting for wireless remote controller.....	58
12. Accessories	59
12-1. Models: ASUH09LPAS and ASUH12LPAS	59
13. Optional parts	60
13-1. Controllers	60
13-2. Others	61

CONTENTS (continued)

Part 2. OUTDOOR UNIT	63
1. Specifications	64
2. Dimensions	65
2-1. Model: AOUH09LPAS1.....	65
2-2. Model: AOUH12LPAS1.....	66
3. Installation space	67
3-1. Models: AOUH09LPAS1 and AOUH12LPAS1.....	67
4. Refrigerant circuit	70
4-1. Models: AOUH09LPAS1 and AOUH12LPAS1.....	70
5. Wiring diagrams	71
5-1. Models: AOUH09LPAS1 and AOUH12LPAS1.....	71
6. Capacity compensation rate for pipe length and height difference	72
6-1. Model: AOUH09LPAS1.....	72
6-2. Model: AOUH12LPAS1.....	73
7. Additional charge calculation	74
7-1. Model: AOUH09LPAS1.....	74
7-2. Model: AOUH12LPAS1.....	74
8. Airflow	75
8-1. Model: AOUH09LPAS1.....	75
8-2. Model: AOUH12LPAS1.....	75
9. Operation noise (sound pressure)	76
9-1. Noise level curve.....	76
9-2. Sound level check point.....	77
10. Electrical characteristics	78
11. Safety devices	79
12. Accessories	80
12-1. Models: AOUH09LPAS1 and AOUH12LPAS1.....	80

Part 1. INDOOR UNIT

WALL MOUNTED TYPE:

ASUH09LPAS

ASUH12LPAS

1. Specifications

Type				Wall mounted		
				Inverter heat pump		
Model name				ASUH09LPAS	ASUH12LPAS	
Power supply				208/230 V ~ 60 Hz		
Power supply intake				Outdoor unit		
Available voltage range				187—253 V		
Capacity	Cooling	Rated	kW	2.64	3.52	
			Btu/h	9,000	12,000	
		Min.—Max.	kW	0.97—3.16	1.00—3.72	
				Btu/h	3,300—10,800	3,400—12,700
	Heating	Rated	kW	2.93	4.10	
			Btu/h	10,000	14,000	
		Min.—Max.	kW	0.77—3.66	0.91—4.98	
				Btu/h	2,600—12,500	3,100—17,000
	Heating (17°F)*1	Rated	kW	1.82	2.58	
			Btu/h	6,200	8,800	
		Max.	kW	2.49	3.34	
			Btu/h	8,500	11,400	
Heating (5°F)*2	Rated	kW	1.96	2.99		
		Btu/h	6,700	10,200		
	Max.	kW	1.96	3.00		
		Btu/h	6,700	10,240		
Input power	Cooling	Rated	kW	0.72	1.09	
				Min.—Max.	0.14—1.18	0.14—1.33
	Heating	Rated	kW	0.74	1.10	
				Min.—Max.	0.13—1.23	0.14—1.61
	Heating (17°F)*1	Rated	kW	0.65	0.85	
				Max.	1.09	1.34
	Heating (5°F)*1	Rated	kW	0.95	1.30	
				Max.	0.95	1.30
Current	Cooling	Rated	A	3.5	4.9	
	Heating			3.7	4.9	
EER2	Cooling		kW/kW	3.66	3.22	
				Btu/hW	12.50	11.0
COP2	Heating		kW/kW	3.96	3.72	
				Btu/hW	13.50	12.70
SEER2	Cooling			20.0		
HSPF2	Heating			10.5		
Power factor	Cooling		%	89.4	96.7	
	Heating			86.9	97.6	
Moisture removal			pints/h (L/h)	2.7 (1.3)	3.8 (1.8)	
Maximum operating current*3	Cooling		A	6.4	6.9	
	Heating			7.9		
Fan	Airflow rate	Cooling	HIGH	412 (700)	453 (770)	
			MED	330 (560)	353 (600)	
			LOW	253 (430)	265 (450)	
			QUIET	159 (270)	147 (250)	
			Heating	HIGH	441 (750)	453 (770)
				MED	359 (610)	377 (640)
		LOW		277 (470)	306 (520)	
		QUIET		194 (330)	182 (310)	
		Type × Qty	Crossflow fan × 1			
		Motor output	W			
				49		
Sound pressure level*4	Cooling	HIGH	dB (A)	40	43	
		MED		34	36	
		LOW		29	30	
		QUIET		19		
	Heating	HIGH	42	43		
		MED	36	38		
		LOW	31	33		
		QUIET	21			
Heat exchanger type	Dimensions (H × W × D)		in (mm)	Main1: 8-1/4 × 26-5/16 × 1-1/16 (210 × 688 × 26.6) Main2: 4-7/16 × 26-5/16 × 13/16 (112 × 688 × 20)	Main1: 8-1/4 × 26-5/16 × 1-1/16 (210 × 688 × 26.6) Main2: 4-7/16 × 26-5/16 × 13/16 (112 × 688 × 20) Sub: 3-5/16 × 26-5/16 × 1/2 (84 × 688 × 13.3)	
	Fin pitch		FPI	Main1: 21 Main2: 23	Main1: 21 Main2: 23 Sub: 18	
	Rows × Stages			Main1: 2 × 10 Main2: 2 × 7	Main1: 2 × 10 Main2: 2 × 7 Sub: 1 × 4	
	Pipe type			Copper		
	Fin type			Aluminum		
	Material			Polystyrene		
Enclosure	Color		White			
	Approximate color of Munsell N 9.25/					
Dimensions (H × W × D)	Net		in (mm)	10-5/8 × 32-13/16 × 8-3/4 (270 × 834 × 222)		
	Gross			10-7/8 × 36 × 13-1/16 (277 × 914 × 332)		
Weight	Net		lb (kg)	21 (9.5)	22 (10.0)	
	Gross			26 (12.0)	29 (13.0)	
Connection pipe	Size	Liquid	in (mm)	Ø1/4 (Ø6.35)		
		Gas		Ø3/8 (Ø9.52)		
	Method	Flare				
Drain hose	Material		PP+HDPE			
	Tip diameter		in (mm)	Ø17/32 (Ø13.8) (I.D.), Ø19/32 to 21/32 (Ø15.0 to 16.8) (O.D.)		
Operation range	Cooling			°F (°C)		
				64 to 90 (18 to 32)		
	Heating			%RH		
			80 or less			
			°F (°C)			
			60 to 86 (16 to 30)			

Type	Wall mounted	
	Inverter heat pump	
Model name	ASUH09LPAS	ASUH12LPAS
Remote controller type	Wireless (Wired, Mobile app ^{*5} [FGLair™] [option])	
NOTES:		
<ul style="list-style-type: none"> Specifications are based on the following conditions: <ul style="list-style-type: none"> Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°FWB (23.9°CWB). Heating: Indoor temperature of 70°FDB (21.11°CDB)/60°FWB (15.56°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°FWB (6.11°CWB). *1: Heating (17°F): Indoor temperature of 70°FDB (21.11°CDB)/60°FWB (15.56°CWB), and outdoor temperature of 17°FDB (-8.33°CDB)/15°FWB (-9.44°CWB). *2: Heating (5°F): Indoor temperature of 70°FDB (21.11°CDB)/60°FWB (15.56°CWB), and outdoor temperature of 5°FDB (-15.0°CDB)/4°FWB (-15.56°CWB). Test conditions are based on AHRI 210/240 2023. Pipe length: 25 ft (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.) Protective function might work when using it outside the operation range. *3: Maximum current is maximum value when operated within the operation range. *4: Sound pressure level: <ul style="list-style-type: none"> Measured values in manufacturer's anechoic chamber. Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here. *5: Available on Google Play™ store or on App Store®. Optional WLAN Adapter is also required. For details, refer to the setting manual. 		


M condition						
Model name			ASUH09LPAS	ASUH12LPAS		
Capacity	Cooling	Rated	kW	2.64	3.52	
			Btu/h	9,000	12,000	
		Min.—Max.	kW	0.97—3.16	1.00—3.72	
			Btu/h	3,300—10,800	3,400—12,700	
		Heating	Rated	kW	2.93	4.10
				Btu/h	10,000	14,000
	Min.—Max.		kW	0.77—3.66	0.91—4.98	
			Btu/h	2,600—12,500	3,100—17,000	
	Heating (17°F)*	Rated	kW	1.82	2.58	
			Btu/h	6,200	8,800	
		Max.	kW	2.49	3.34	
			Btu/h	8,500	11,400	
Input power	Cooling	Rated	kW	0.72	1.09	
				Min.—Max.	0.14—1.18	0.14—1.33
	Heating	Rated	kW	0.74	1.10	
				Min.—Max.	0.13—1.23	0.14—1.61
	Heating (17°F)*	Rated	kW	0.65	0.85	
				Max.	1.09	1.34
	Current	Cooling	Rated	A	3.5	4.9
		Heating			3.7	4.9
EER	Cooling	kW/kW	3.66	3.22		
		Btu/hW	12.5	11.0		
COP	Heating	kW/kW	3.96	3.72		
		Btu/hW	13.50	12.70		
SEER	Cooling	Btu/hW		20.0		
HSPF	Heating	Btu/hW		11.0		
Power factor	Cooling	%	89.4	96.7		
	Heating		86.9	97.6		

NOTES:					
Specifications are based on the following conditions:					
<ul style="list-style-type: none"> Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°FWB (23.9°CWB). Heating: Indoor temperature of 70°FDB (21.11°CDB)/59°FWB (15.56°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°FWB (6.11°CWB). *: Heating (17°F): Indoor temperature of 70°FDB (21.11°CDB) /60°FWB (15.56°CWB), and outdoor temperature of 17°FDB (-8.33°CDB)/15°FWB (-9.44°CWB). Test conditions are based on AHRI 210/240 2017. Pipe length: 25 ft (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.) 					

2. Dimensions



2-1. Models: ASUH09LPAS and ASUH12LPAS

Unit: in (mm)

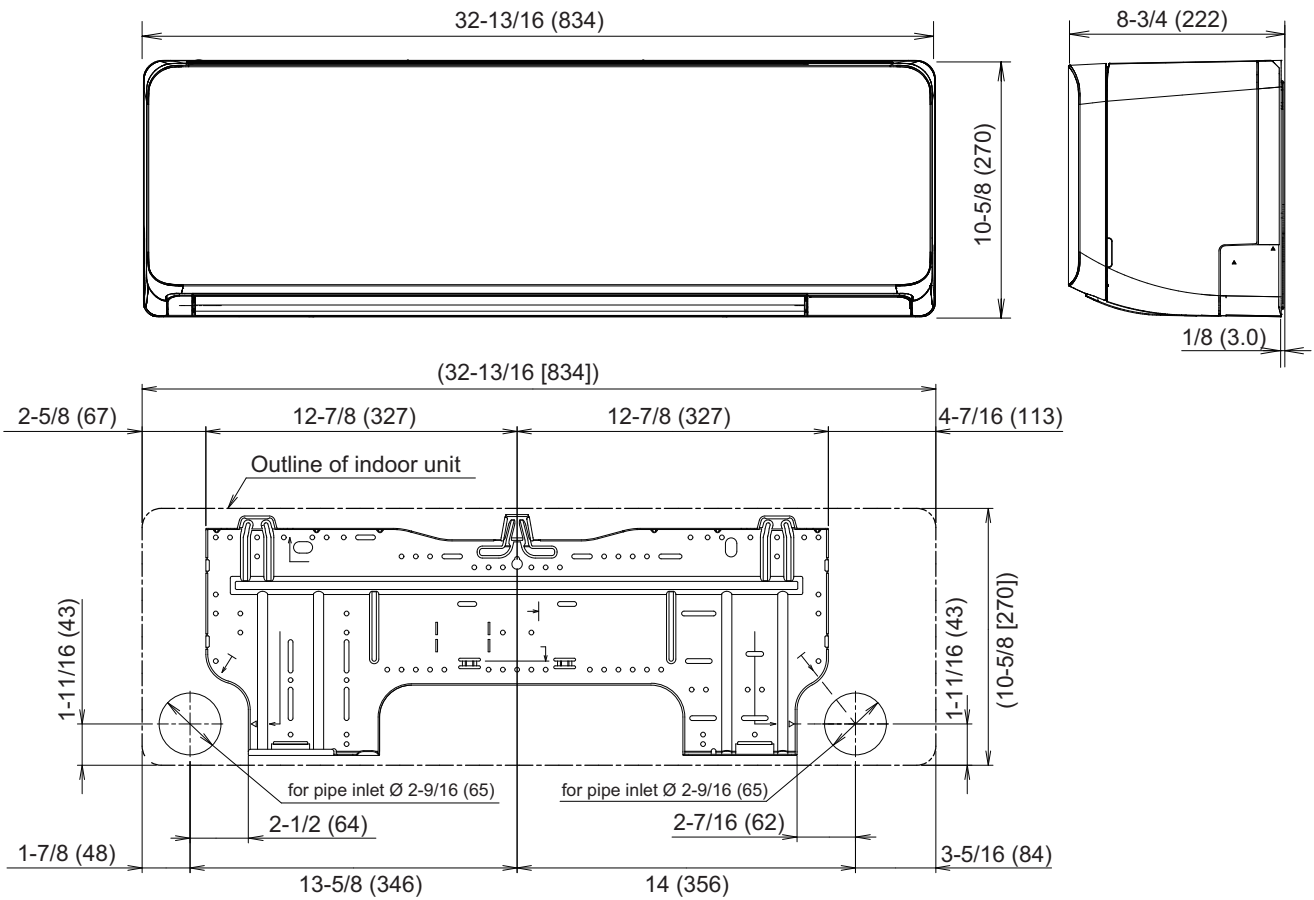


2-2. Installation space requirement

Provide sufficient installation space for product safety.

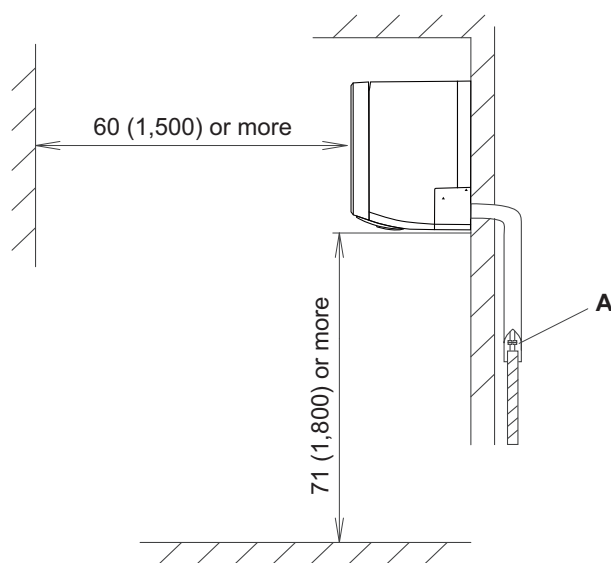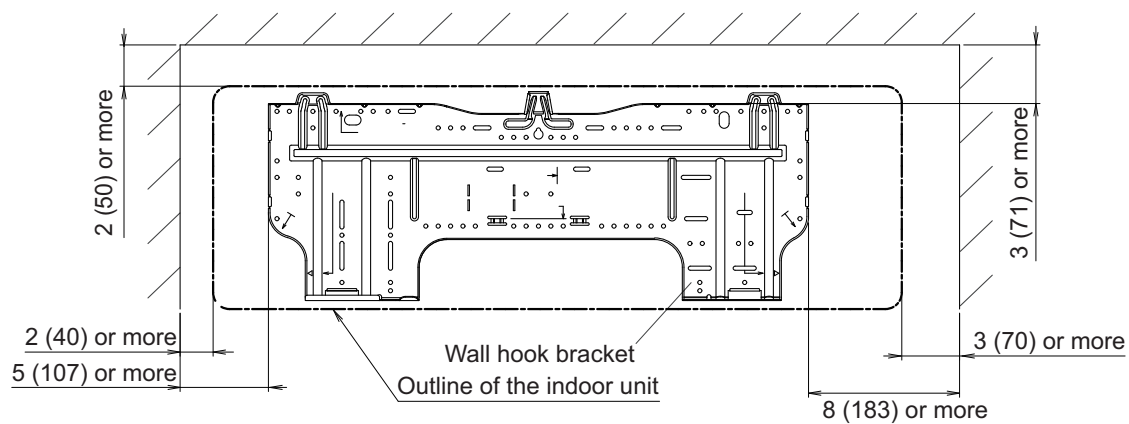

3. Wiring diagrams

3-1. Models: ASUH09LPAS and ASUH12LPAS

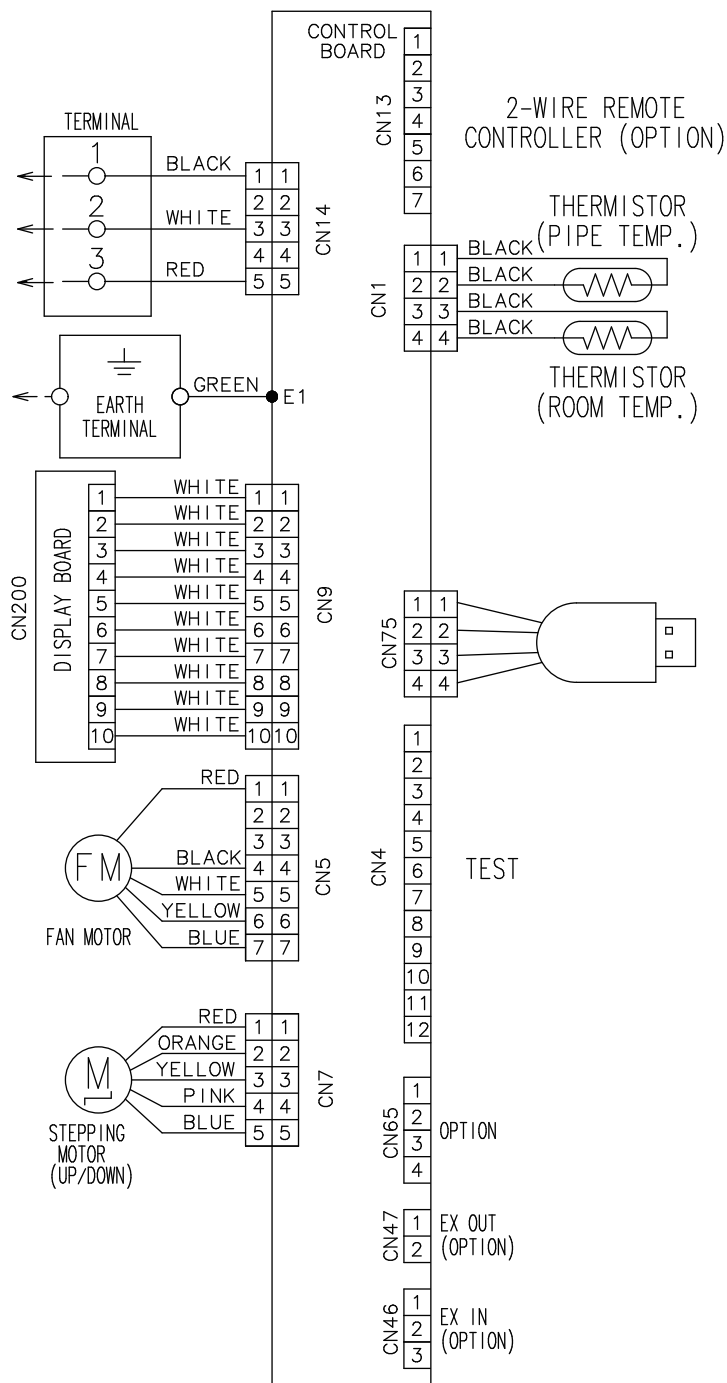

4. Capacity table

Capacity tables show each of following values calculated based on the outdoor temperature and the indoor temperature, under given Airflow Rate (AFR):

For cooling capacity: Total Capacity (TC), Sensible Heat Capacity (SHC), and Input Power (IP)

For heating capacity: Total Capacity (TC) and Input Power (IP)

4-1. Cooling capacity

■ Model: ASUH09LPAS

AFR		CFM															412		
Outdoor temperature °FDB	Indoor temperature																		
	°FDB	64			70			75			80			85			90		
	°FWB	54			60			63			67			71			73		
		TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	kBTu		kW	kBTu		kW	kBTu		kW	kBTu		kW	kBTu		kW	kBTu		kW	
14	8.55	5.70	0.31	9.36	6.23	0.31	10.25	6.83	0.32	10.57	7.04	0.32	11.26	7.50	0.32	12.01	8.00	0.33	
23	8.15	5.43	0.28	8.92	5.94	0.29	9.78	6.51	0.29	10.08	6.71	0.30	10.74	7.15	0.30	11.45	7.62	0.30	
32	7.76	5.16	0.26	8.49	5.65	0.26	9.30	6.19	0.27	9.59	6.38	0.27	10.22	6.80	0.27	10.89	7.25	0.28	
41	7.36	4.90	0.26	8.06	5.36	0.26	8.83	5.88	0.27	9.10	6.06	0.27	9.70	6.46	0.27	10.34	6.88	0.28	
50	6.97	4.64	0.24	7.62	5.07	0.24	8.35	5.56	0.25	8.61	5.73	0.25	9.17	6.11	0.25	9.78	6.51	0.26	
59	6.57	4.64	0.24	7.19	5.07	0.24	7.88	5.56	0.25	8.12	5.73	0.25	8.65	6.11	0.25	9.22	6.51	0.26	
67	8.75	5.08	0.56	9.58	5.56	0.56	10.50	6.09	0.57	10.82	6.28	0.58	11.53	6.69	0.59	12.29	7.13	0.59	
77	8.26	4.98	0.60	9.04	5.45	0.61	9.91	5.97	0.62	10.21	6.15	0.63	10.88	6.56	0.63	11.60	6.99	0.64	
87	7.77	4.88	0.65	8.50	5.33	0.65	9.32	5.85	0.67	9.61	6.03	0.67	10.24	6.42	0.68	10.91	6.85	0.69	
95	7.28	4.77	0.69	7.97	5.22	0.70	8.73	5.72	0.71	9.00	5.90	0.72	9.59	6.29	0.73	10.22	6.70	0.73	
104	6.04	4.44	0.77	6.61	4.86	0.78	7.25	5.33	0.79	7.47	5.49	0.80	7.96	5.85	0.81	8.49	6.24	0.82	
115	5.54	4.08	0.76	6.06	4.46	0.77	6.65	4.89	0.78	6.85	5.04	0.79	7.30	5.37	0.80	7.78	5.73	0.81	

AFR		m ³ /h															700		
Outdoor temperature °CDB	Indoor temperature																		
	°CDB	17.8			21.1			23.9			26.7			29.4			32.2		
	°CWB	12.2			15.6			17.2			19.4			21.7			22.8		
		TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	kW			kW			kW			kW			kW			kW			
-10.0	2.51	1.67	0.31	2.74	1.83	0.31	3.01	2.00	0.32	3.10	2.06	0.32	3.30	2.20	0.32	3.52	2.34	0.33	
-5.0	2.39	1.59	0.28	2.62	1.74	0.29	2.87	1.91	0.29	2.95	1.97	0.30	3.15	2.10	0.30	3.36	2.23	0.30	
0.0	2.27	1.51	0.26	2.49	1.66	0.26	2.73	1.81	0.27	2.81	1.87	0.27	3.00	1.99	0.27	3.19	2.12	0.28	
5.0	2.16	1.44	0.26	2.36	1.57	0.26	2.59	1.72	0.27	2.67	1.78	0.27	2.84	1.89	0.27	3.03	2.02	0.28	
10.0	2.04	1.36	0.24	2.23	1.49	0.24	2.45	1.63	0.25	2.52	1.68	0.25	2.69	1.79	0.25	2.87	1.91	0.26	
15.0	1.93	1.36	0.24	2.11	1.49	0.24	2.31	1.63	0.25	2.38	1.68	0.25	2.54	1.79	0.25	2.70	1.91	0.26	
19.4	2.57	1.49	0.56	2.81	1.63	0.56	3.08	1.79	0.57	3.17	1.84	0.58	3.38	1.96	0.59	3.60	2.09	0.59	
25.0	2.42	1.46	0.60	2.65	1.60	0.61	2.90	1.75	0.62	2.99	1.80	0.63	3.19	1.92	0.63	3.40	2.05	0.64	
30.6	2.28	1.43	0.65	2.49	1.56	0.65	2.73	1.71	0.67	2.82	1.77	0.67	3.00	1.88	0.68	3.20	2.01	0.69	
35.0	2.13	1.40	0.69	2.33	1.53	0.70	2.56	1.68	0.71	2.64	1.73	0.72	2.81	1.84	0.73	3.00	1.96	0.73	
40.0	1.77	1.30	0.77	1.94	1.42	0.78	2.12	1.56	0.79	2.19	1.61	0.80	2.33	1.71	0.81	2.49	1.83	0.82	
46.1	1.62	1.19	0.76	1.78	1.31	0.77	1.95	1.43	0.78	2.01	1.48	0.79	2.14	1.57	0.80	2.28	1.68	0.81	

Model: ASUH12LPAS

AFR	CFM	453
-----	-----	-----

		Indoor temperature																	
		64			70			75			80			85			90		
		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	°FWB	kWh			kWh			kWh			kWh			kWh			kWh		
		kBtu	kW		kBtu	kW		kBtu	kW		kBtu	kW		kBtu	kW		kBtu	kW	
	14	11.51	7.94	0.37	12.60	8.69	0.38	13.80	9.53	0.39	14.23	9.82	0.39	15.16	10.46	0.39	16.17	11.16	0.40
	23	10.91	7.53	0.41	11.94	8.24	0.42	13.08	9.03	0.43	13.49	9.31	0.43	14.37	9.92	0.43	15.32	10.57	0.44
	32	10.31	7.11	0.45	11.28	7.78	0.46	12.36	8.53	0.47	12.74	8.79	0.47	13.58	9.37	0.47	14.47	9.99	0.48
	41	9.71	6.70	0.45	10.62	7.33	0.46	11.64	8.03	0.47	12.00	8.28	0.47	12.79	8.82	0.47	13.63	9.41	0.48
	50	9.10	6.29	0.43	9.96	6.88	0.44	10.91	7.54	0.45	11.25	7.77	0.45	11.99	8.28	0.45	12.78	8.83	0.46
	59	8.50	6.08	0.46	9.30	6.65	0.47	10.20	7.29	0.48	10.51	7.51	0.48	11.20	8.00	0.48	11.94	8.53	0.49
	67	11.71	7.15	0.74	12.81	7.83	0.75	14.04	8.58	0.76	14.47	8.84	0.77	15.42	9.42	0.78	16.44	10.04	0.79
	77	11.04	6.90	0.84	12.08	7.55	0.85	13.24	8.28	0.87	13.65	8.53	0.88	14.54	9.09	0.89	15.50	9.69	0.89
87	10.37	6.66	0.94	11.35	7.28	0.95	12.44	7.98	0.97	12.82	8.23	0.98	13.66	8.77	0.99	14.57	9.35	1.00	
95	9.71	6.41	1.05	10.62	7.01	1.06	11.64	7.68	1.08	12.00	7.92	1.09	12.79	8.44	1.10	13.63	9.00	1.11	
104	8.25	6.08	0.99	9.03	6.65	1.00	9.89	7.29	1.02	10.20	7.51	1.03	10.87	8.00	1.04	11.59	8.53	1.05	
115	5.80	4.94	0.78	6.35	5.41	0.79	6.96	5.93	0.80	7.17	6.11	0.81	7.64	6.51	0.82	8.15	6.94	0.83	

AFR	m³/h	770
-----	------	-----

		Indoor temperature																	
		17.8			21.1			23.9			26.7			29.4			32.2		
		12.2			15.6			17.2			19.4			21.7			22.8		
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	°CWB	kW			kW			kW			kW			kW			kW		
		kWh	kW		kWh	kW		kWh	kW		kWh	kW		kWh	kW		kWh	kW	
	-10.0	3.37	2.33	0.37	3.69	2.55	0.38	4.05	2.79	0.39	4.17	2.88	0.39	4.44	3.07	0.39	4.74	3.27	0.40
	-5.0	3.20	2.21	0.41	3.50	2.41	0.42	3.83	2.65	0.43	3.95	2.73	0.43	4.21	2.91	0.43	4.49	3.10	0.44
	0.0	3.02	2.08	0.45	3.31	2.28	0.46	3.62	2.50	0.47	3.73	2.58	0.47	3.98	2.75	0.47	4.24	2.93	0.48
	5.0	2.85	1.96	0.45	3.11	2.15	0.46	3.41	2.35	0.47	3.52	2.43	0.47	3.75	2.59	0.47	4.00	2.76	0.48
	10.0	2.67	1.84	0.43	2.92	2.02	0.44	3.20	2.21	0.45	3.30	2.28	0.45	3.51	2.43	0.45	3.75	2.59	0.46
	15.0	2.49	1.78	0.46	2.73	1.95	0.47	2.99	2.14	0.48	3.08	2.20	0.48	3.28	2.35	0.48	3.50	2.50	0.49
	19.4	3.43	2.10	0.74	3.75	2.29	0.75	4.11	2.51	0.76	4.24	2.59	0.77	4.52	2.76	0.78	4.82	2.94	0.79
	25.0	3.24	2.02	0.84	3.54	2.21	0.85	3.88	2.43	0.87	4.00	2.50	0.88	4.26	2.67	0.89	4.54	2.84	0.89
30.6	3.04	1.95	0.94	3.33	2.13	0.95	3.65	2.34	0.97	3.76	2.41	0.98	4.00	2.57	0.99	4.27	2.74	1.00	
35.0	2.85	1.88	1.05	3.11	2.05	1.06	3.41	2.25	1.08	3.52	2.32	1.09	3.75	2.47	1.10	4.00	2.64	1.11	
40.0	2.42	1.78	0.99	2.65	1.95	1.00	2.90	2.14	1.02	2.99	2.20	1.03	3.19	2.35	1.04	3.40	2.50	1.05	
46.1	1.70	1.45	0.78	1.86	1.59	0.79	2.04	1.74	0.80	2.10	1.79	0.81	2.24	1.91	0.82	2.39	2.03	0.83	

4-2. Heating capacity

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

■ Model: ASUH09LPAS

AFR	CFM	441
-----	-----	-----

Outdoor temperature		Indoor temperature											
		°FDB	°FDB	60		65		70		72		75	
				TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW
5	3	7.07	0.91	6.89	0.93	6.70	0.95	6.51	0.97	6.33	0.99		
14	12	8.41	1.01	8.19	1.03	7.97	1.05	7.75	1.07	7.53	1.09		
23	19	9.82	1.06	9.57	1.08	9.31	1.10	9.05	1.12	8.80	1.14		
32	28	11.22	1.11	10.92	1.14	10.63	1.16	10.34	1.18	10.04	1.20		
41	37	12.63	1.16	12.30	1.18	11.97	1.21	11.64	1.23	11.31	1.26		
47	43	13.19	1.18	12.85	1.20	12.50	1.23	12.15	1.25	11.81	1.28		
50	47	13.27	1.19	12.93	1.21	12.58	1.24	12.23	1.26	11.89	1.29		
59	50	13.41	1.12	13.06	1.15	12.71	1.17	12.36	1.19	12.01	1.21		
68	59	12.64	0.87	12.31	0.89	11.98	0.91	11.65	0.93	11.32	0.94		
75	64	13.06	0.91	12.72	0.93	12.38	0.95	12.04	0.97	11.70	0.99		

AFR	m ³ /h	750
-----	-------------------	-----

Outdoor temperature		Indoor temperature											
		°CDB	°CWB	15.6		18.3		21.1		22.2		23.9	
				TC kW	IP kW	TC kW	IP kW	TC kW	IP kW	TC kW	IP kW	TC kW	IP kW
-15.0	-16.1	2.07	0.91	2.02	0.93	1.96	0.95	1.91	0.97	1.86	0.99		
-10.0	-11.1	2.46	1.01	2.40	1.03	2.34	1.05	2.27	1.07	2.21	1.09		
-5.0	-7.2	2.88	1.06	2.80	1.08	2.73	1.10	2.65	1.12	2.58	1.14		
0.0	-2.2	3.29	1.11	3.20	1.14	3.12	1.16	3.03	1.18	2.94	1.20		
5.0	2.8	3.70	1.16	3.61	1.18	3.51	1.21	3.41	1.23	3.31	1.26		
8.3	6.1	3.87	1.18	3.76	1.20	3.66	1.23	3.56	1.25	3.46	1.28		
10.0	8.3	3.89	1.19	3.79	1.21	3.69	1.24	3.59	1.26	3.48	1.29		
15.0	10.0	3.93	1.12	3.83	1.15	3.73	1.17	3.62	1.19	3.52	1.21		
20.0	15.0	3.71	0.87	3.61	0.89	3.51	0.91	3.41	0.93	3.32	0.94		
24.0	18.0	3.83	0.91	3.73	0.93	3.63	0.95	3.53	0.97	3.43	0.99		

■ Model: ASUH12LPAS

AFR	CFM	453
-----	-----	-----

Outdoor temperature		Indoor temperature											
		°FDB	°FDB	60		65		70		72		75	
				TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW	TC kBtu	IP kW
5	3	10.81	1.25	10.52	1.27	10.24	1.30	9.96	1.32	9.67	1.35		
14	12	11.17	1.26	10.88	1.28	10.59	1.31	10.30	1.34	10.01	1.36		
23	19	13.15	1.33	12.80	1.36	12.46	1.39	12.12	1.42	11.77	1.44		
32	28	14.93	1.43	14.54	1.46	14.15	1.49	13.76	1.52	13.37	1.55		
41	37	16.53	1.53	16.09	1.56	15.66	1.59	15.23	1.62	14.79	1.65		
47	43	17.94	1.55	17.47	1.58	17.00	1.61	16.53	1.64	16.06	1.67		
50	47	18.03	1.56	17.56	1.60	17.09	1.63	16.62	1.66	16.15	1.69		
59	50	18.22	1.47	17.75	1.50	17.27	1.53	16.79	1.56	16.32	1.59		
68	59	17.19	1.15	16.74	1.17	16.29	1.20	15.84	1.22	15.39	1.25		
75	64	17.75	1.20	17.28	1.22	16.82	1.25	16.36	1.27	15.89	1.30		

AFR	m ³ /h	770
-----	-------------------	-----





Outdoor temperature		Indoor temperature											
		°CDB	°CWB	15.6		18.3		21.1		22.2		23.9	
				TC kW	IP kW	TC kW	IP kW	TC kW	IP kW	TC kW	IP kW	TC kW	IP kW
-15.0	-16.1	3.17	1.25	3.08	1.27	3.00	1.30	2.92	1.32	2.84	1.35		
-10.0	-11.1	3.28	1.26	3.19	1.28	3.10	1.31	3.02	1.34	2.93	1.36		
-5.0	-7.2	3.85	1.33	3.75	1.36	3.65	1.39	3.55	1.42	3.45	1.44		
0.0	-2.2	4.38	1.43	4.26	1.46	4.15	1.49	4.03	1.52	3.92	1.55		
5.0	2.8	4.84	1.53	4.72	1.56	4.59	1.59	4.46	1.62	4.34	1.65		
8.3	6.1	5.26	1.55	5.12	1.58	4.98	1.61	4.84	1.64	4.71	1.67		
10.0	8.3	5.29	1.56	5.15	1.60	5.01	1.63	4.87	1.66	4.73	1.69		
15.0	10.0	5.34	1.47	5.20	1.50	5.06	1.53	4.92	1.56	4.78	1.59		
20.0	15.0	5.04	1.15	4.91	1.17	4.77	1.20	4.64	1.22	4.51	1.25		
24.0	18.0	5.20	1.20	5.07	1.22	4.93	1.25	4.79	1.27	4.66	1.30		

5. Fan performance

5-1. Air velocity distributions

Model: ASUH09LPAS

Measuring conditions	Fan speed	Operation mode
	HIGH	FAN

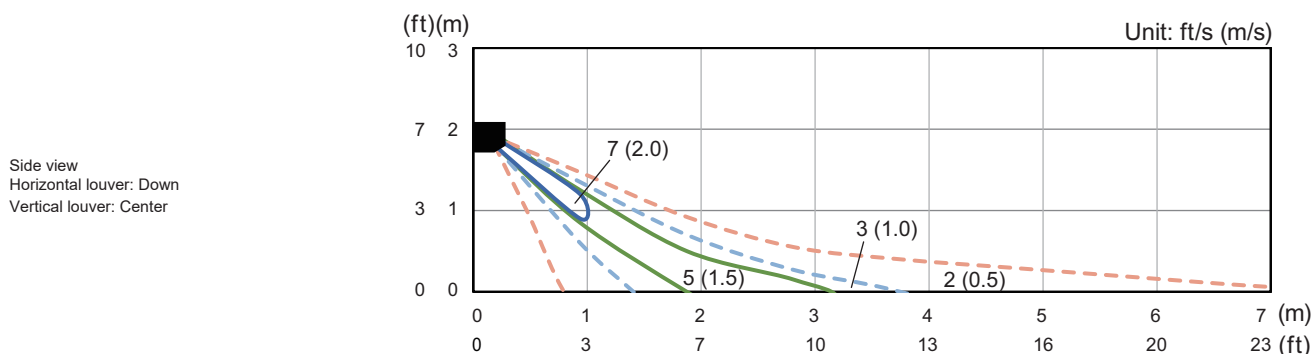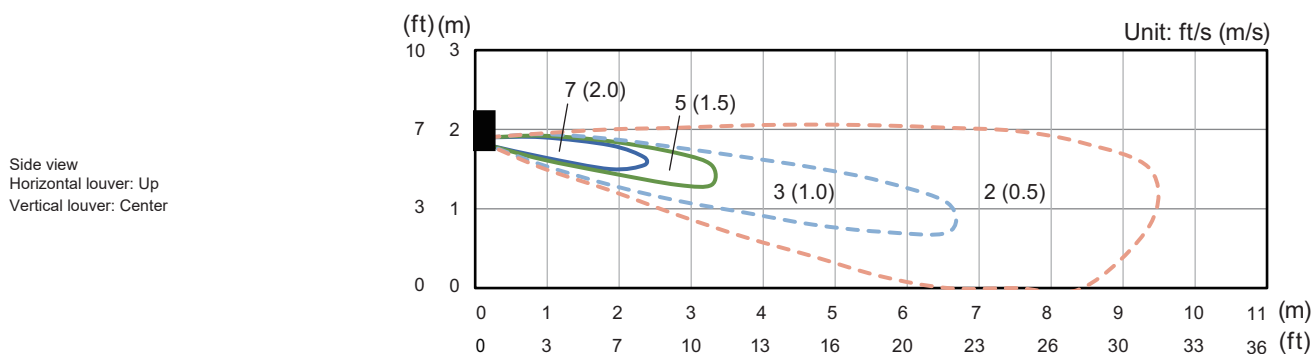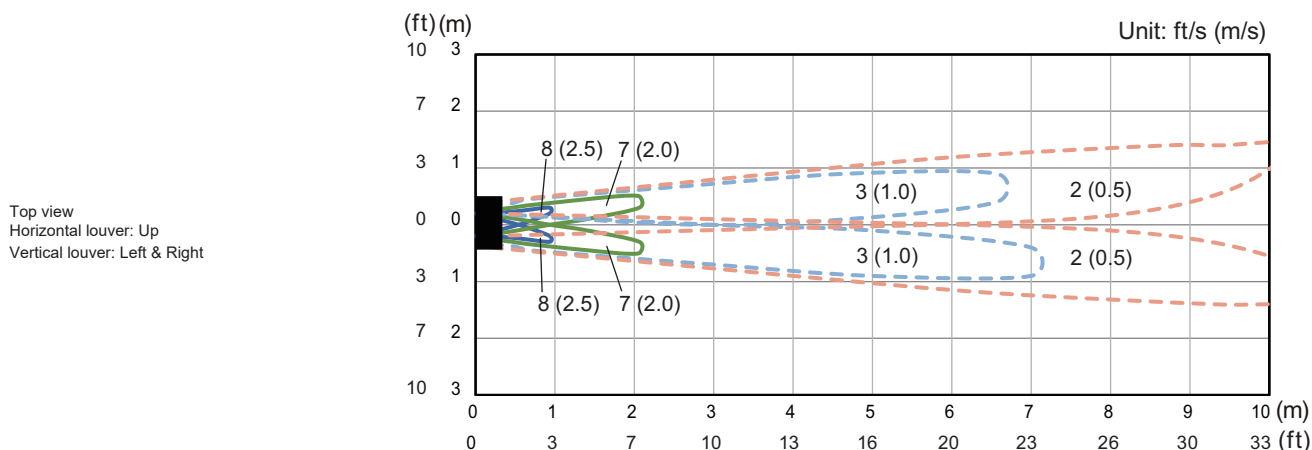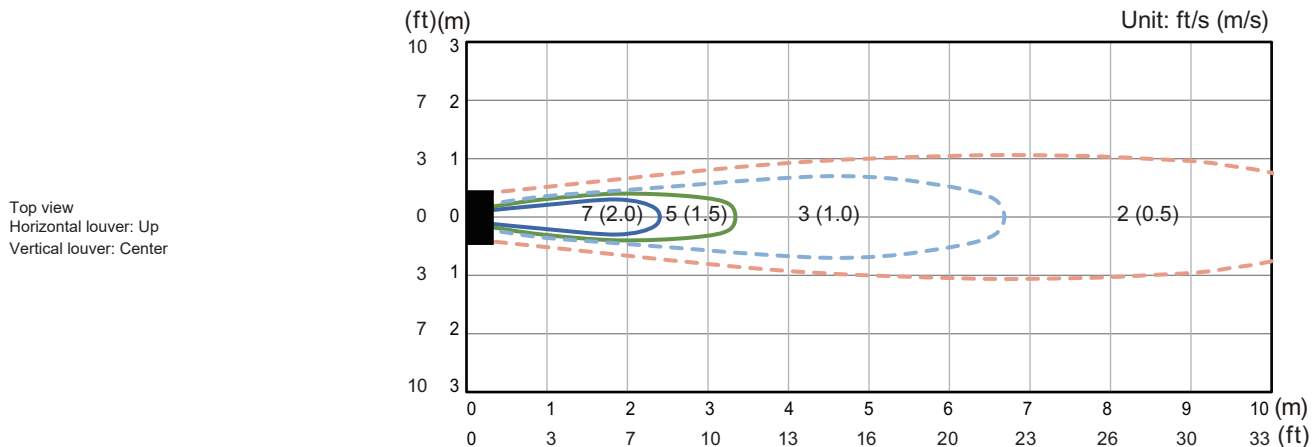


Model: ASUH12LPAS

WALL MOUNTED
ASUH09-12LPAS


WALL MOUNTED
ASUH09-12LPAS

Measuring conditions	Fan speed	Operation mode
	HIGH	FAN


Top view
Horizontal louver: Up
Vertical louver: Center

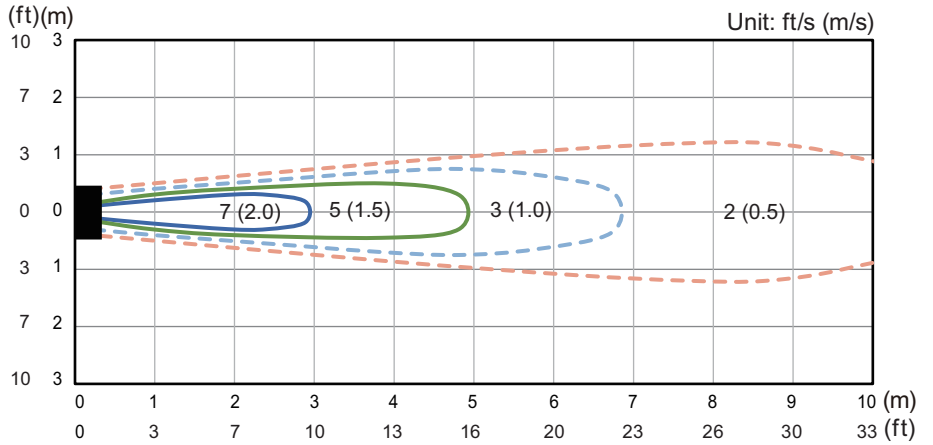


Top view
Horizontal louver: Up
Vertical louver: Left & Right

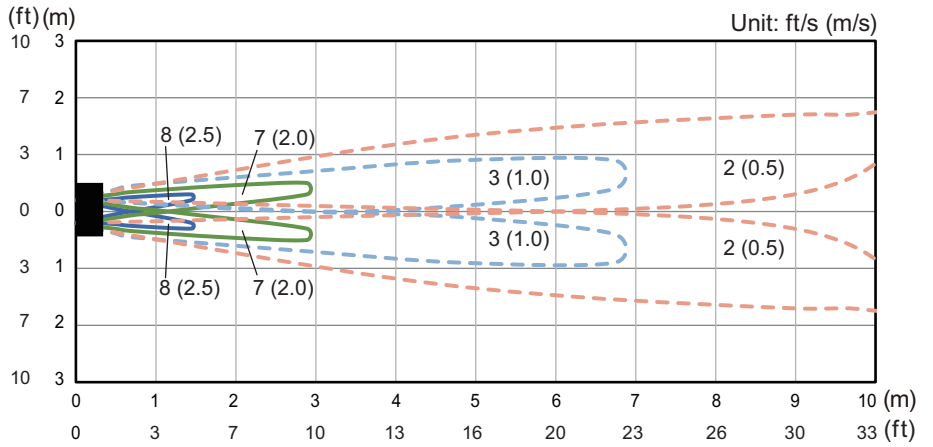

Side view
Horizontal louver: Up
Vertical louver: Center

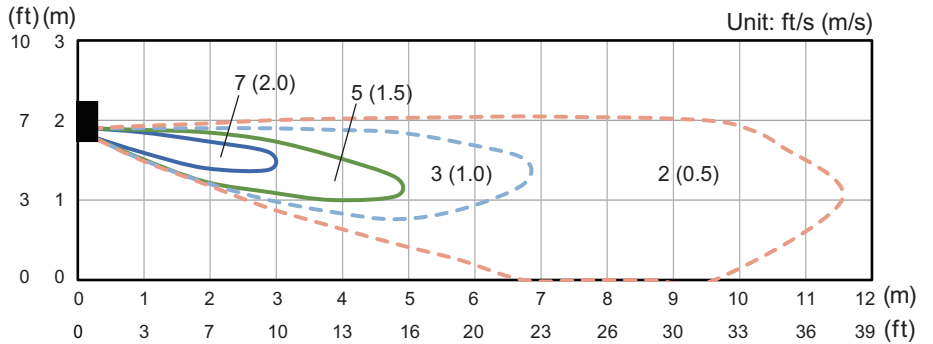

Side view
Horizontal louver: Down
Vertical louver: Center

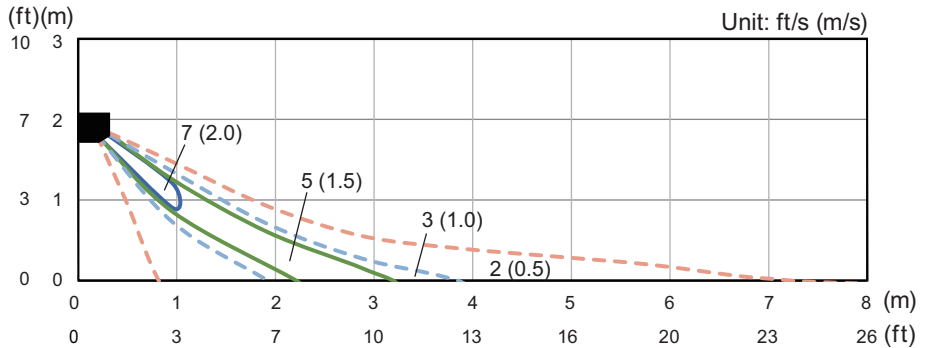

5-2. Airflow

■ Model: ASUH09LPAS

● Cooling

Fan speed	Airflow	
HIGH	m ³ /h	700
	l/s	194
	CFM	412
MED	m ³ /h	560
	l/s	156
	CFM	330
LOW	m ³ /h	430
	l/s	119
	CFM	253
QUIET	m ³ /h	270
	l/s	75
	CFM	159

● Heating

Fan speed	Airflow	
HIGH	m ³ /h	750
	l/s	208
	CFM	441
MED	m ³ /h	610
	l/s	169
	CFM	359
LOW	m ³ /h	470
	l/s	131
	CFM	277
QUIET	m ³ /h	330
	l/s	92
	CFM	194

■ Model: ASUH12LPAS

● Cooling

Fan speed	Airflow	
HIGH	m ³ /h	770
	l/s	214
	CFM	453
MED	m ³ /h	600
	l/s	167
	CFM	353
LOW	m ³ /h	450
	l/s	125
	CFM	265
QUIET	m ³ /h	250
	l/s	69
	CFM	147

● Heating


Fan speed	Airflow	
HIGH	m ³ /h	770
	l/s	214
	CFM	453
MED	m ³ /h	640
	l/s	178
	CFM	377
LOW	m ³ /h	520
	l/s	144
	CFM	306
QUIET	m ³ /h	310
	l/s	86
	CFM	182

6. Operation noise (sound pressure)


6-1. Noise level curve

Model: ASUH09LPAS

● Cooling

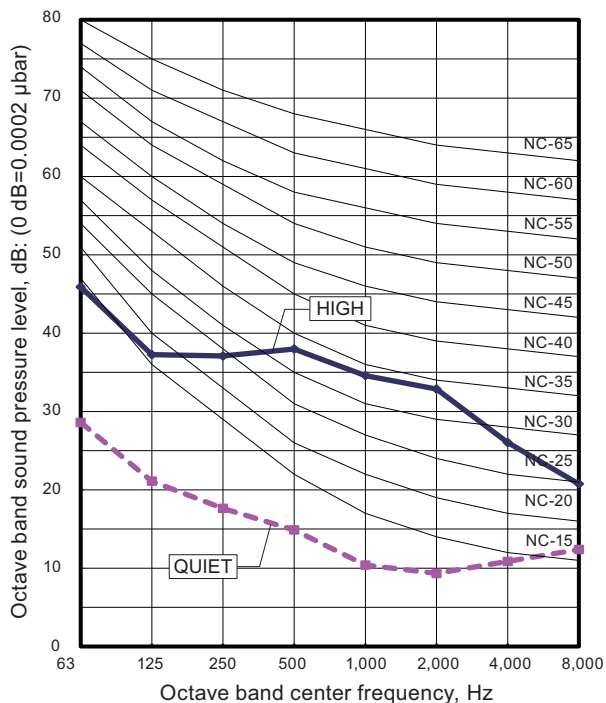


● Heating

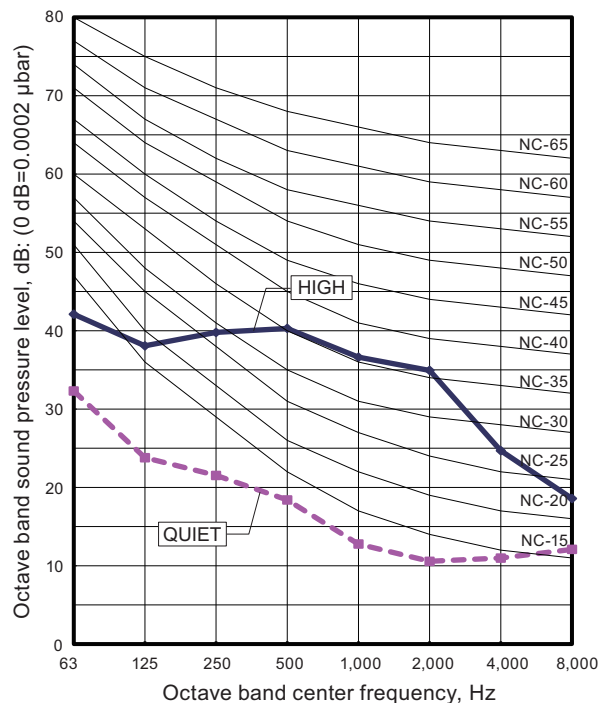


Model: ASUH12LPAS


● Cooling

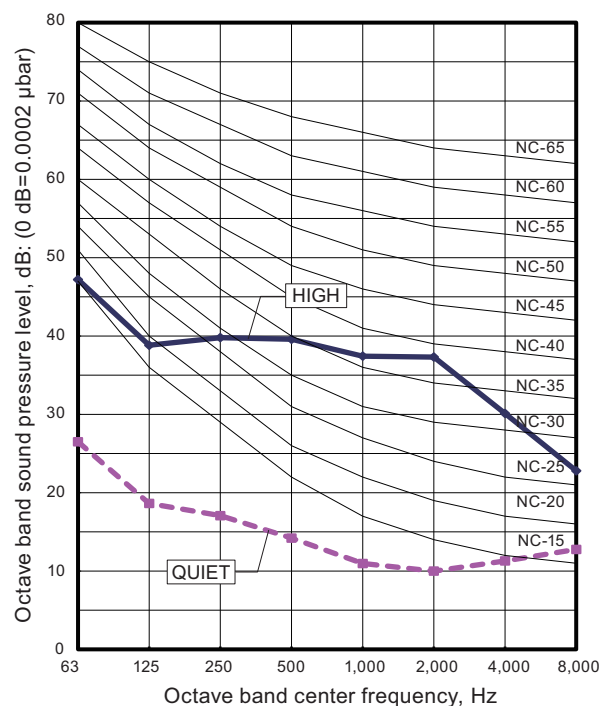

● Heating

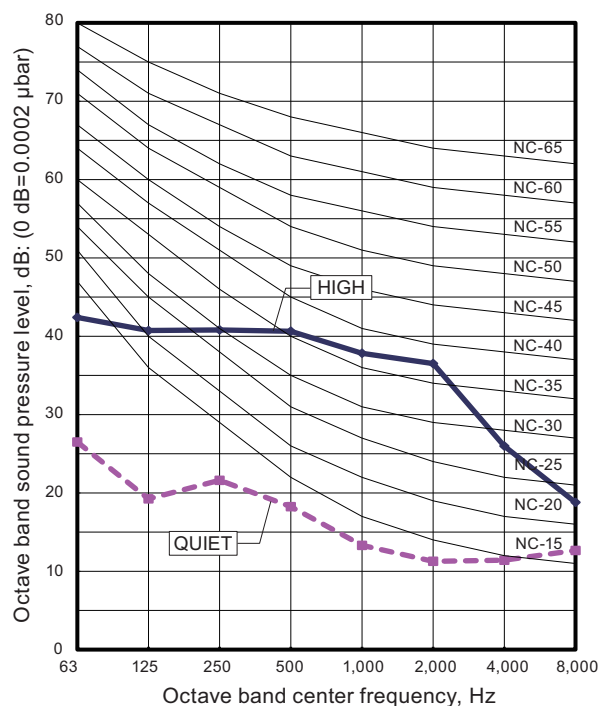

6-2. Sound level check point

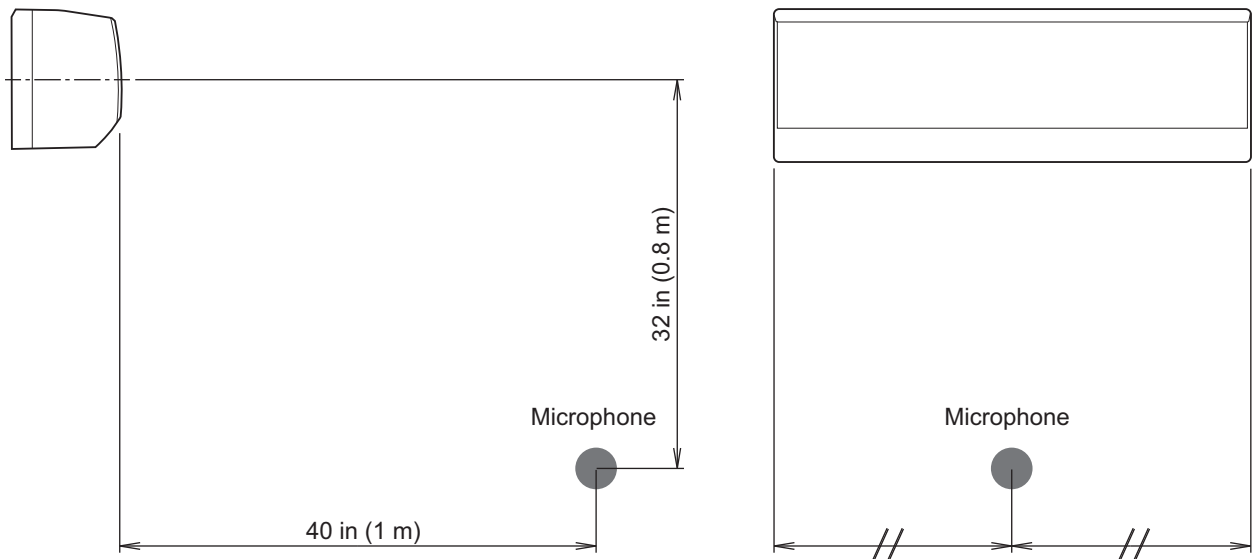


NOTE: Detailed shape of the actual indoor unit might be slightly different from the one illustrated above.

7. Safety devices

Type of protection	Protection form		Model
			ASUH09LPAS and ASUH12LPAS
Circuit protection	Current fuse (PCB*)		250 V, 3.15 A
Fan motor protection	Power IC thermal shutdown protection	Activate	257 ±18°F (125 ±10°C) Fan motor stop
		Reset	212 ±18°F (100 ±10°C) Fan motor restart

*PCB: Printed Circuit Board

8. External input and output

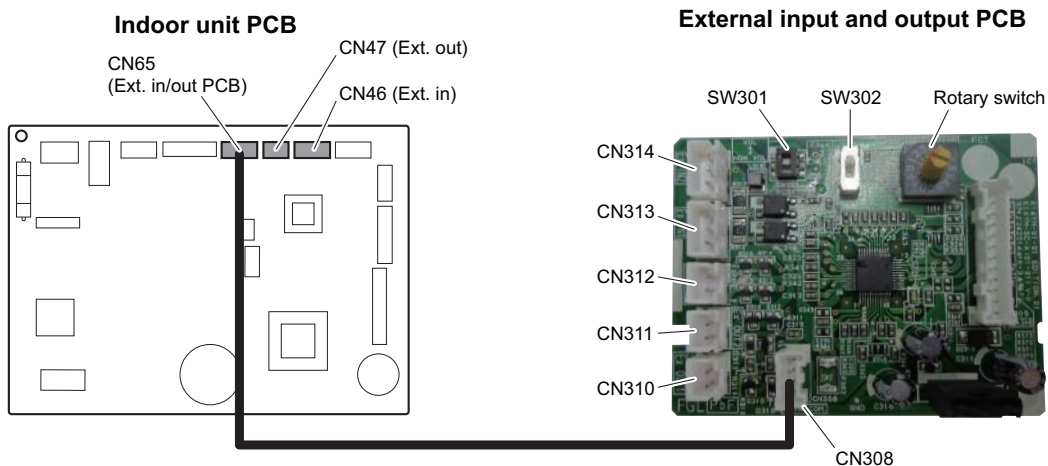

PCB	External input	External output	Connector	Input select	Input signal
Indoor unit	Operation/Stop	-	CN46	Dry contact	Edge
	Forced stop				
	-	Operation status	CN47	-	-
		Error status			
		Indoor unit fan operation status			
		Cooling thermostat On			
-	Heating thermostat On	-	-	-	
	External heater output				
External input and output (UTY-XCSXZ2)	Operation/Stop	-	CN313/ CN314	Dry contact/ Apply voltage	Edge/Pulse
	Forced stop		CN313		-
	Forced thermostat off			CN310/ CN311/ CN312	
	-	Operation status			
		Error status			
		Indoor unit fan operation status			
		External heater output			
		Remote controller output			
		Cooling high/low output			
		Heating thermostat On			


8-1. External input

With using external input function, some functions on this product can be controlled from an external device.

- "Operation/Stop" mode or "Forced stop" mode can be selected with function setting of indoor unit.
- A twisted pair cable (22AWG) should be used. Maximum length of cable is 492 ft (150 m).
- The wire connection should be separate from the power cable line.

■ Indoor unit

Indoor unit functions such as Operation/Stop can be done by using indoor unit connectors.

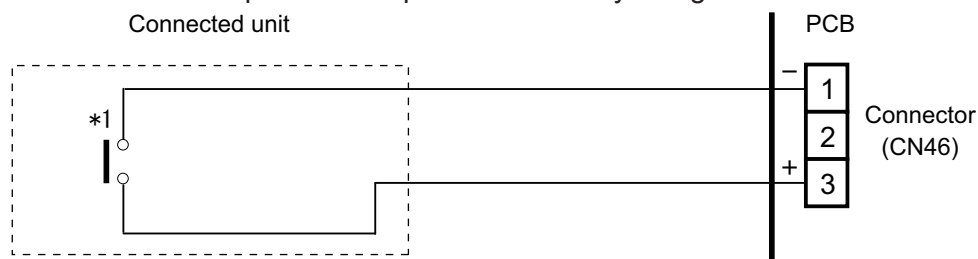

*1: The switch can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

External Input and Output PCB


The indoor unit Operation/Stop can be set by using the input connector on the PCB.

• Input select:

Use either one of these types of connectors according to the application. (Both types of connectors cannot be used simultaneously.)

– Dry contact


In case of internal power supply, set the slide switch of SW301 to "NON VOL" side.

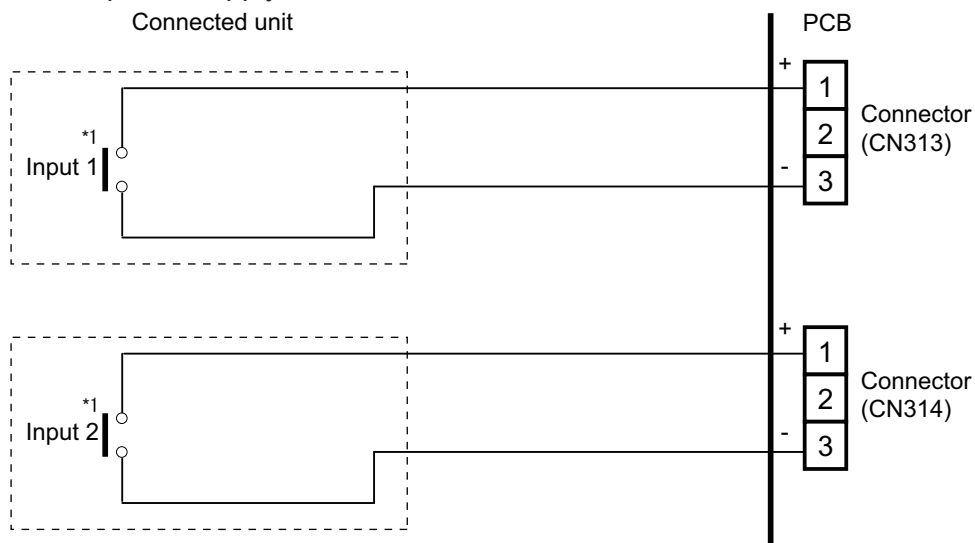

*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

– Apply voltage

In case of external power supply, set the slide switch of SW301 to "VOL" side.

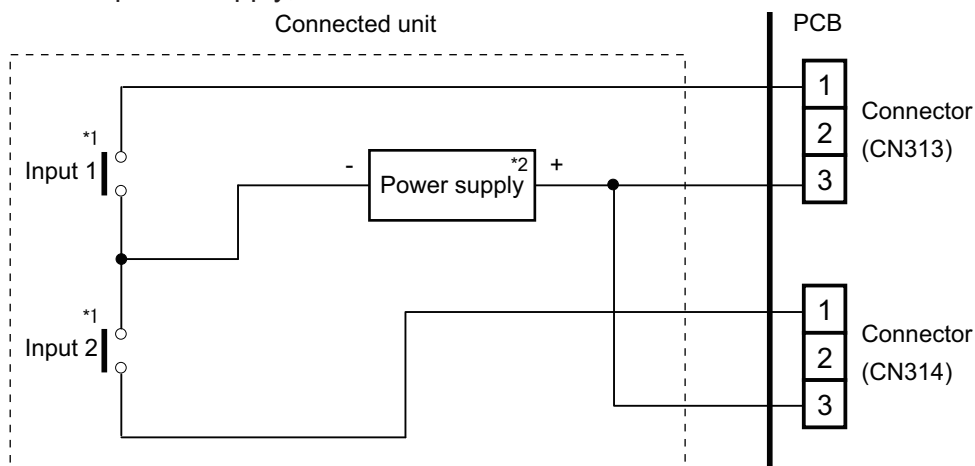

*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

*2: Make the power supply DC 12 to 24 V, 10 mA or more.

8-2. External output


Use an external output cable with appropriate external dimension, depending on the number of cables to be installed.

■ Indoor unit

- A twisted pair cable (22AWG) should be used. Maximum length of cable is 82 ft (25 m).
- Output voltage: High DC 12 V \pm 2 V, Low 0 V.
- Permissible current: 50 mA
- For details, refer to ["Combination of external input and output"](#) on page 22.


● When indicator or other components are connected directly

Example: Function setting 60 is set to "00"

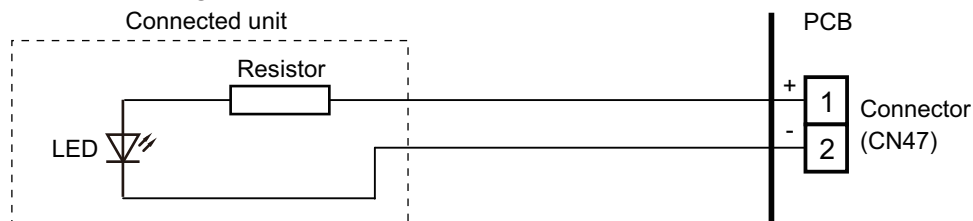


● When connecting with a device equipped with a power supply

Example: Function setting 60 is set to "00"

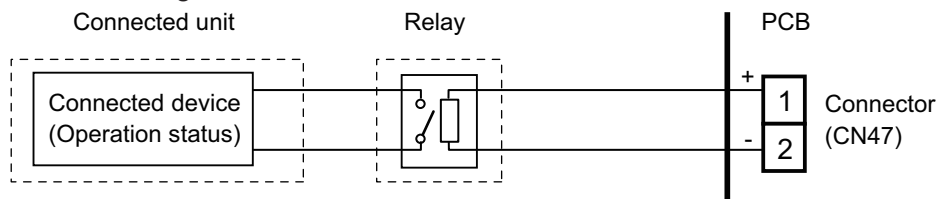


External Input and Output PCB

- A twisted pair cable (22AWG) should be used. Maximum length of cable is 82 ft (25 m).
 - Output voltage: High DC 12 V±2 V, Low 0 V.
 - Permissible current: 50 mA
 - For details, refer to "[Combination of external input and output](#)" on page 22.
- **When indicator or other components are connected directly:**
Example: Rotary SW on External Input and Output PCB is set to "1".

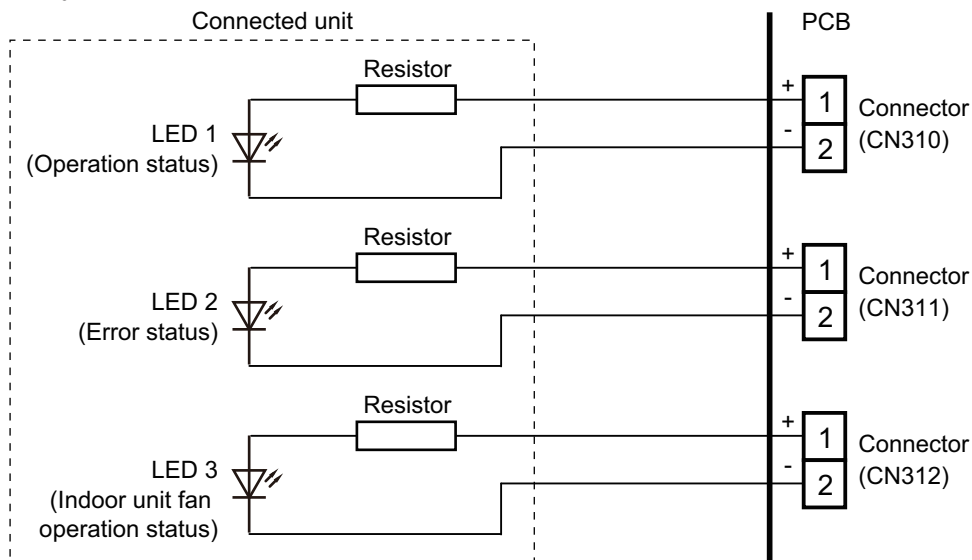

- **When connecting with a device equipped with a power supply:**
Example: Rotary SW on External Input and Output PCB is set to "1".

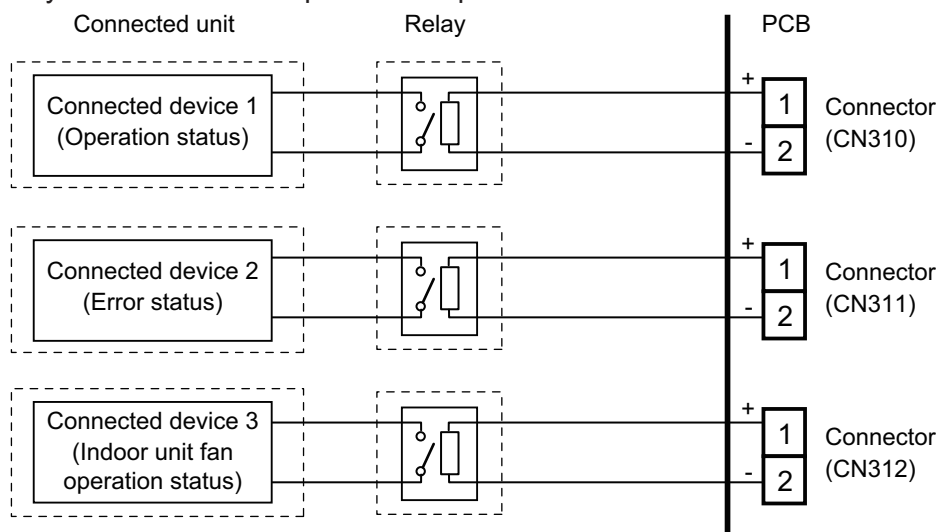

8-3. Combination of external input and output

By combining the function setting of the indoor unit and rotary switch setting of the External Input and Output PCB, you can select various combinations of functions.

Combination examples of external input and output are as follows:

Mode	Function setting	Rotary SW	External input		
			Indoor unit	External Input and Output PCB	
			CN46	1 CN313	2 CN314
0-1	60—00	1	Operation/Stop (Function setting 46-00) or Forced stop (Function setting 46-02)	Operation/Stop	Not available
0-2	60-00	2		Operation	Stop
1	60-01	3		Forced thermostat Off	Not available
2	60-02	4		Mechanical cooling Off	
3	60-03	5		Forced thermostat Off	
4	60-04	6		Mechanical cooling On	
5	60-05	7		Mechanical cooling On	
6	60-06	8		Forced thermostat Off	
7	60-07	9		Forced thermostat Off	
8	60-08	A		Mechanical cooling Off	
9	60-09	B		Forced thermostat Off	
10	60-10	C	Forced thermostat Off		
11	60-11	D	Forced thermostat Off		

Mode	Function setting	Rotary SW	External output			
			Indoor unit	External Input and Output PCB		
			CN47	1 CN310	2 CN311	3 CN312
0-1	60-00	1	Operation/Stop	Operation/Stop	Error status	Indoor unit fan operation status
0-2	60-00	2	Operation/Stop	Error status	Indoor unit fan operation status	External heater output
1	60-01	3	Cooling thermostat On	Error status	Indoor unit fan operation status	External heater output
2	60-02	4	Cooling thermostat On	Error status	Remote controller output	External heater output
3	60-03	5	Cooling thermostat On	Cooling high/low output	Remote controller output	External heater output
4	60-04	6	Cooling thermostat On	Error status	Remote controller output	Cooling high/low output
5	60-05	7	Heating thermostat On	Error status	Indoor unit fan operation status	External heater output
6	60-06	8	Operation/Stop	Error status	Indoor unit fan operation status	Heating thermostat On
7	60-07	9	Cooling thermostat On	Error status	Heating thermostat On	External heater output
8	60-08	A	Cooling thermostat On	Heating thermostat On	Remote controller output	External heater output
9	60-09	B	Error status	Operation/Stop	Indoor unit fan operation status	External heater output
10	60-10	C	Indoor unit fan operation status	Operation/Stop	Error status	External heater output

Mode	Function setting	Rotary SW	External output			
			Indoor unit	External Input and Output PCB		
			CN47	1 CN310	2 CN311	3 CN312
11	60-11	D	External heater output	Operation/Stop	Indoor unit fan operation status	Error status

NOTE: Input of Operation/Stop depends on the setting of function setting 46.


- 00: Operation/Stop mode 1 (R.C. enabled)
- 01: (Setting prohibited)
- 02: Forced stop
- 03: Operation/Stop mode 2 (R.C. disabled)

■ Input signal type

External Input and Output PCB:

The input signal type can be selected.

Signal type (edge or pulse) can be switched by the DIP switch SW302 on the External Input and Output PCB.

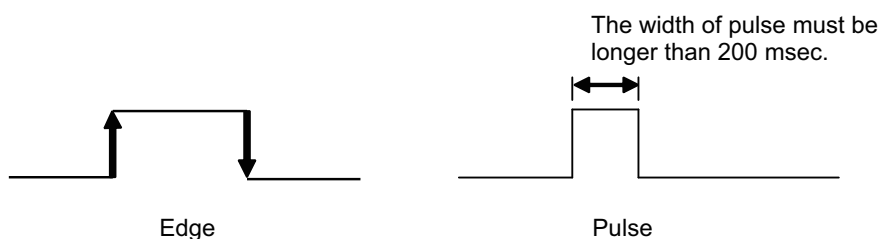


8-4. Details of function

■ Control input function


- When function setting is “Operation/Stop” mode 1
 - In the case of “Edge” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
		External Input and Output PCB	CN313		
46-00	1			Off → On	Operation
				On → Off	Stop

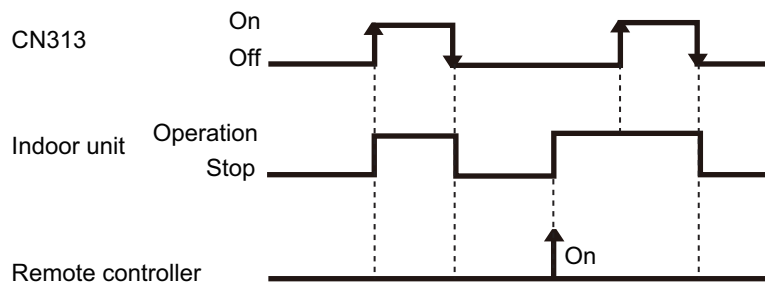

- In the case of “Pulse” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
		External Input and Output PCB	CN313		
46-00	1		CN313	Pulse	Operation
			CN314	Pulse	Stop

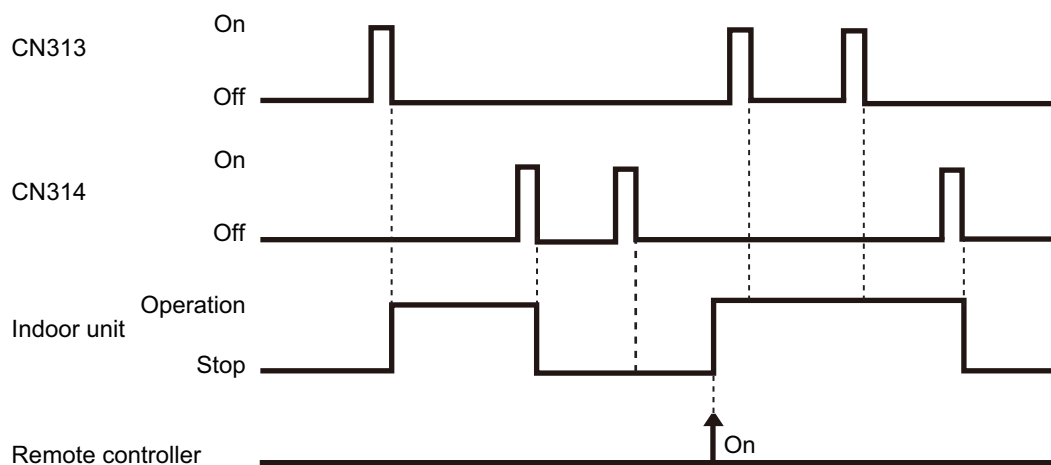


NOTES:

- The last command has priority.
- The indoor units within the same remote controller group operates in the same mode.

• When function setting is “Forced stop” mode


– In the case of “Edge” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
		External Input and Output PCB	CN313		
46-02	1			Off → On	Forced stop
				On → Off	Normal

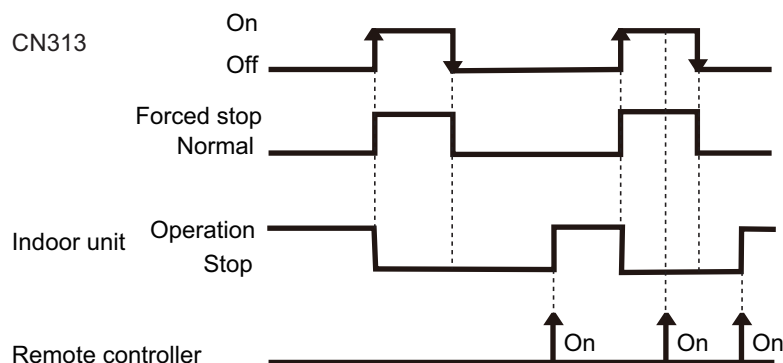

– In the case of “Pulse” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
		External Input and Output PCB	CN313 CN314		
46-02	1		CN313	Pulse	Forced stop
			CN314	Pulse	Normal

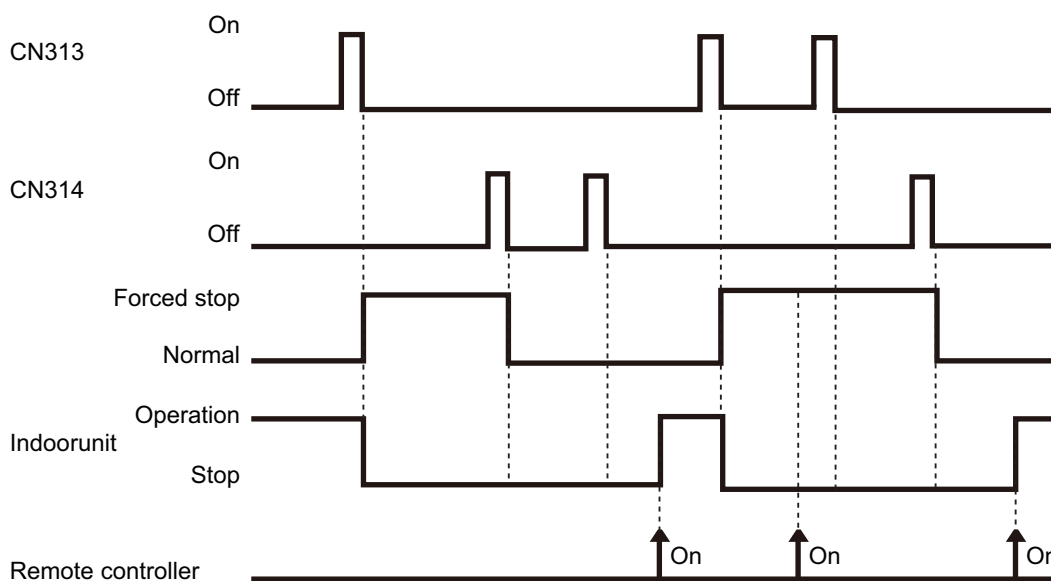


NOTES:

- When the forced stop is triggered, indoor unit stops and Operation/Stop operation by the remote controller is restricted.
- When forced stop function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

• When function setting is “Operation/Stop” mode 2


– In the case of “Edge” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
46-03	1	External Input and Output PCB	CN313	Off → On	Operation
				On → Off	Stop (Remote controller disabled)

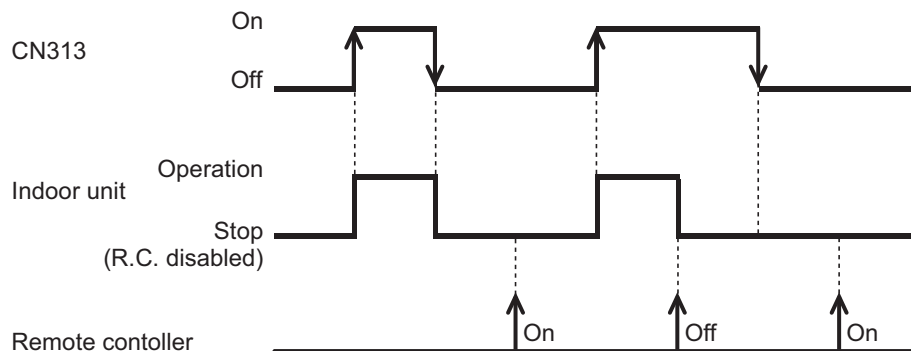

– In the case of “Pulse” input:


Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
46-03	1	External Input and Output PCB	CN313	Pulse	Operation
			CN314	Pulse	Stop (Remote controller disabled)

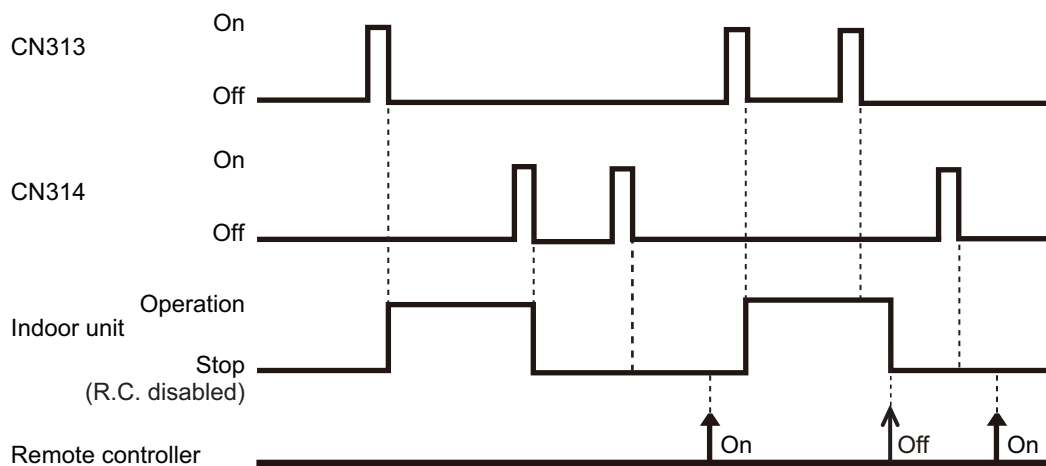

NOTE: When “Operation/Stop” mode 2 function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

• Forced thermostat off function

Rotary SW on External Input and Output PCB	External input		Input signal	Command
2 B C	External Input and Output PCB	CN313	Off → On	Thermostat off
On → Off			Normal operation	

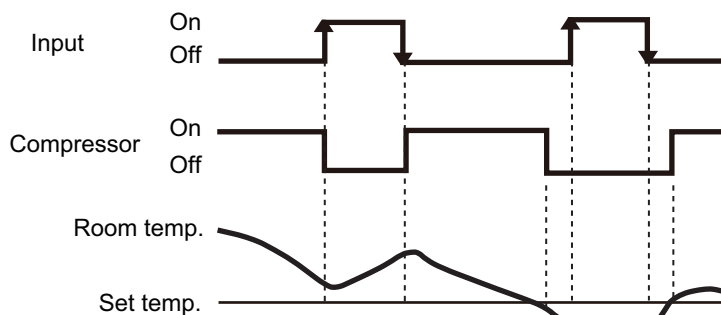


■ Control output function

• Operation/Stop status

Rotary SW on External Input and Output PCB	External output		Output signal	Command
1 B C D	External Input and Output PCB	CN310	Off → On	Operation
On → Off			Stop	


The output is low when the unit is stopped.

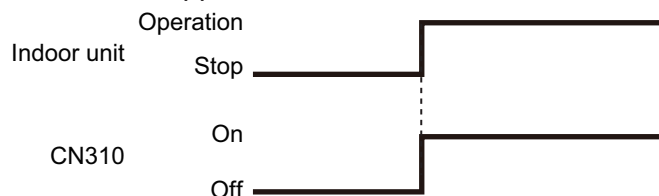

• Error status

Rotary SW on External Input and Output PCB	External output		Output signal	Command
1 C	External Input and Output PCB	CN311	Off → On	Error
			On → Off	Normal
D		CN312	Off → On	Error
			On → Off	Normal


The output is ON when an error is generated for the indoor unit.

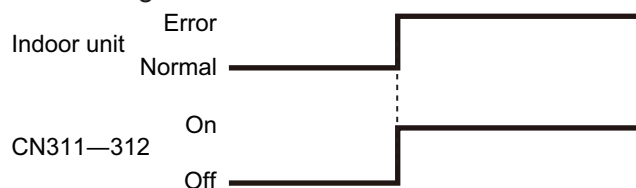

- Indoor unit fan operation status

Rotary SW on External Input and Output PCB	External output		Output signal	Command
1	External Input and Output PCB	CN312	Off → On	Fan run
2 B D			CN311	On → Off
		Off → On		Fan run
On → Off		Fan stop		

Output signal	Condition
On Low → High	The indoor unit fan is operating.
Off High → Low	The fan is stopped or during cold air prevention. During thermostat off when in dry mode operation.

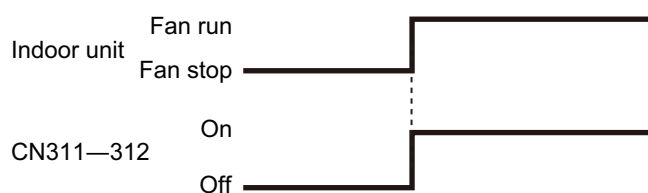

- External heater output

Rotary SW on External Input and Output PCB	External output		Output signal	Command
2 B C	External Input and Output PCB	CN312	Off → On	Heater on
On → Off			Heater off	

External heater output


Control	Primary heater	Auxiliary heater	Function setting	
			Indoor unit	Wired R. C.
			Control switching external heaters No. 61	Sensor activation*2
Auxiliary heater control 1	Heat pump	External device*1	61-00	—
Auxiliary heater control 2	Heat pump	External device	61-01	—
Heat pump prohibition control	External device	None	61-02	On (Enabled)
Auxiliary heater control by outdoor temperature 1	Heat pump	External device	61-03	On (Enabled)
Auxiliary heater control by outdoor temperature 2	Heat Pump	External device	61-04	On (Enabled)
Auxiliary heater control by outdoor temperature 3	Heat Pump	External device	61-05	On (Enabled)
Auxiliary heat pump control	External device	Heat pump	61-06	On (Enabled)
Auxiliary heat pump control by outdoor temperature 1	External device	Heat pump	61-07	On (Enabled)
Auxiliary heat pump control by outdoor temperature 2	External device	Heat pump	61-08	On (Enabled)
Auxiliary heat pump control by outdoor temperature 3	External device	Heat pump	61-09	On (Enabled)

NOTES:

- After turning off the heater, 3 minutes of standby time is required by next power-on of the heater.
- For items marked “—” in the table, any of validate or invalidate of the setting are acceptable.
- *1: External device means Hot water, Electrical heater, etc.
- *2: Sensor activation:
 - Setting change from the factory setting is required.
 - Indoor unit fan setting will be on for safety reason without sensor activation of wired remote controller.

Installation configuration of individual connection

External heating device is installed individually. (No use of indoor unit fan)

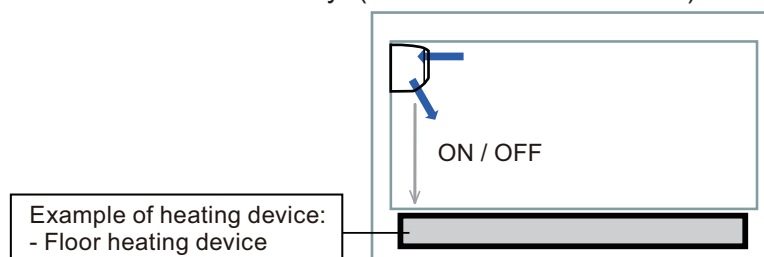


⚠ WARNING

- Design and install external heater appropriately with considering its protection.
- Inappropriate designing and installation of external heater may cause a fire by emitted heat from the external heater.
- Fujitsu General Ltd. is not responsible for inappropriate designing or installation of external heating device.

● Auxiliary heater control 1

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off • Fan stop protection

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting “Thon”.

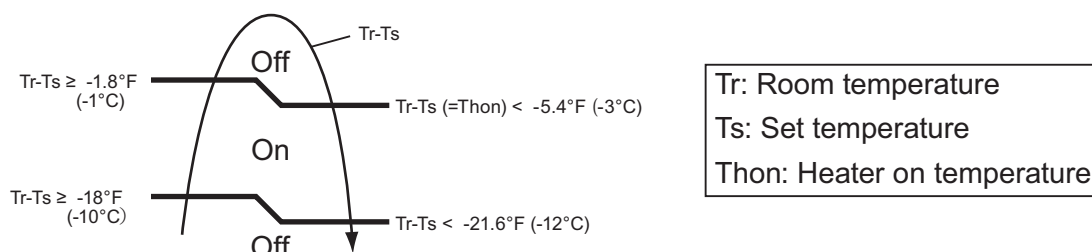


Example: When set temperature (Ts) is 72°F (22°C) (Factory setting),

- and room temperature (Tr) increases above 53.6°F (12°C), signal output is on.
- and room temperature (Tr) increases above 69.8°F (21°C), signal output is off.
- and room temperature (Tr) decreases below 66.2°F (19°C), signal output is on.
- and room temperature (Tr) decreases below 50°F (10°C), signal output is off.

● Auxiliary heater control 2

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off • Fan stop protection

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting “Thon”.

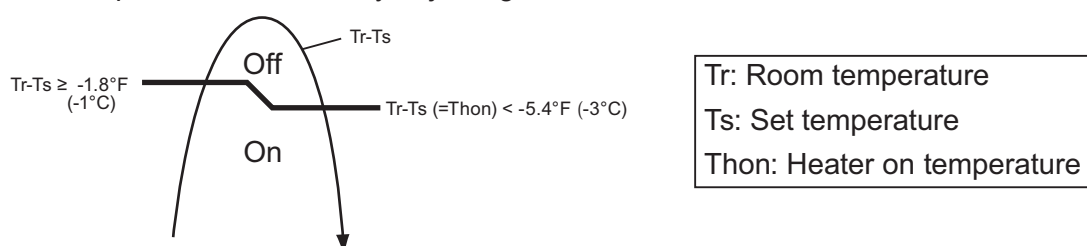


● Heat pump prohibition control


Perform heating by external heater only. Indoor unit is continuous thermostat off.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting “Thon”.

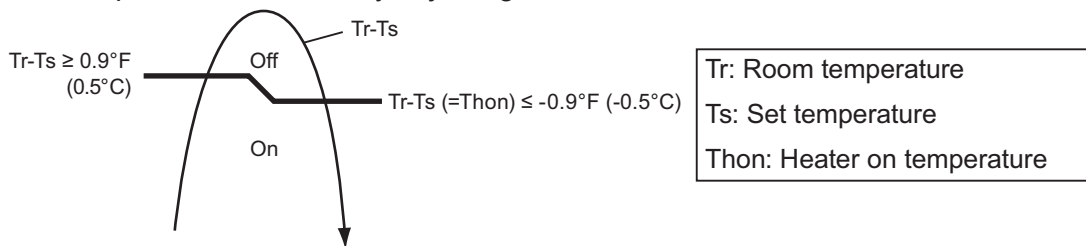

• Operation status

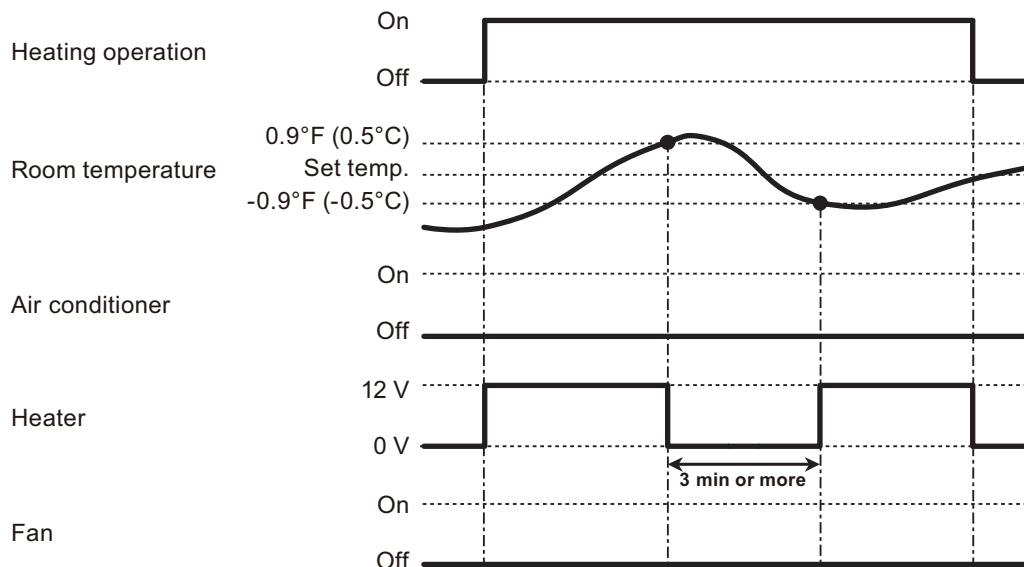

NOTE: In following operations, compressor will be on.

- Other than heating
- Test run


● Auxiliary heater control by outdoor temperature 1

This control selects heat pump or external heater according to the outdoor temperature. When outdoor temperature is high, the heating is performed by using heat pump only.


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off • Heat pump only zone

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A and B: Adjustable individually by function setting number 66 and 67.

• External heater output

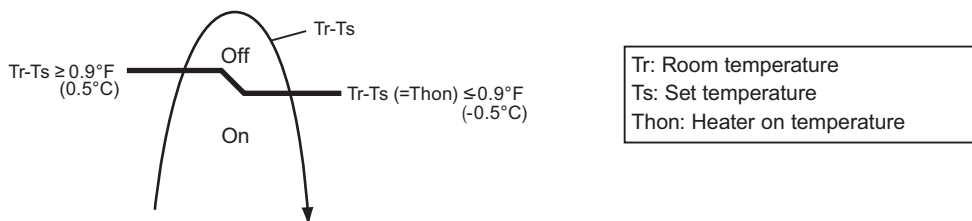


• Outdoor temperature zone

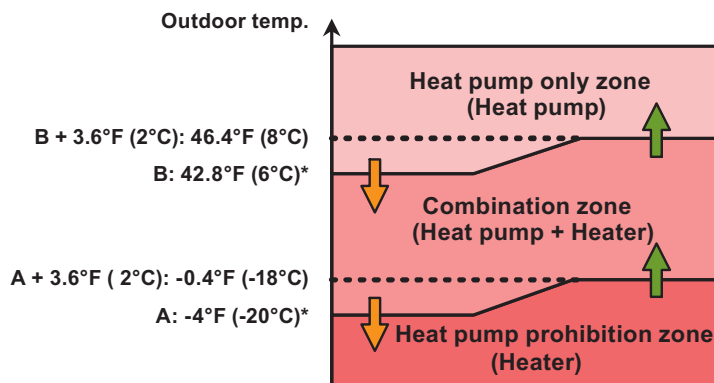

*: Adjustable by function setting 66 and 67

• Operation status

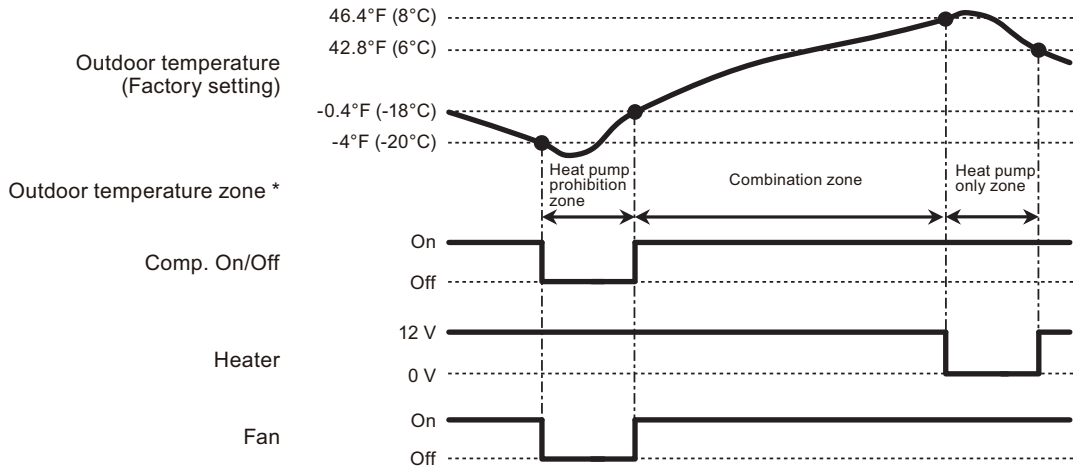

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


● Auxiliary heater control by outdoor temperature 2

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A: Adjustable by function setting number 66.

• External heater output

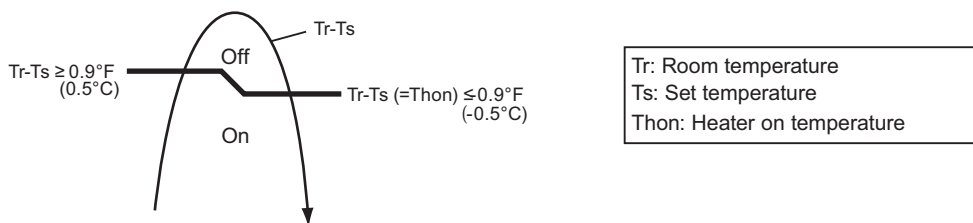


• Outdoor temperature zone

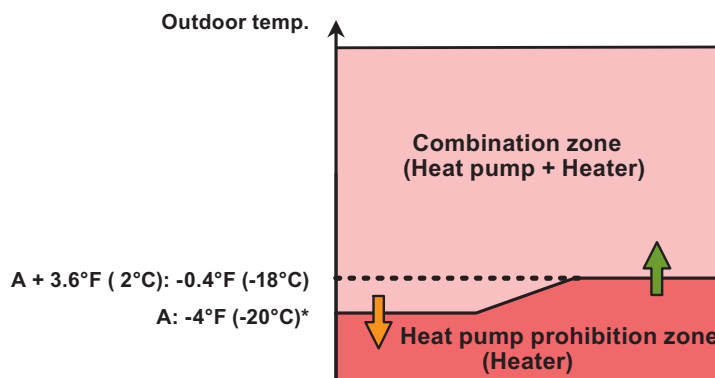

*: Adjustable by function setting 66

• Operation status

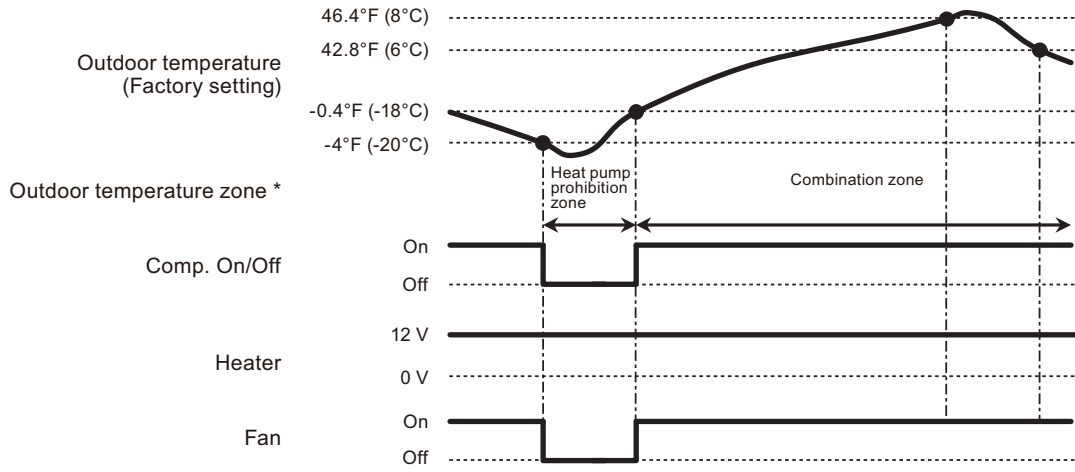

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


● Auxiliary heater control by outdoor temperature 3

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> Heater is off as shown in following diagram of heating temperature. Other than heating mode Error occurred Forced thermostat off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting “Thon”.
- Outdoor temperature zone boundary B: Adjustable by function setting number 67.

• External heater output

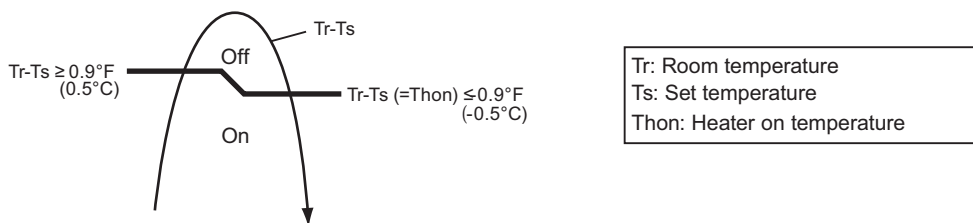


• Outdoor temperature zone

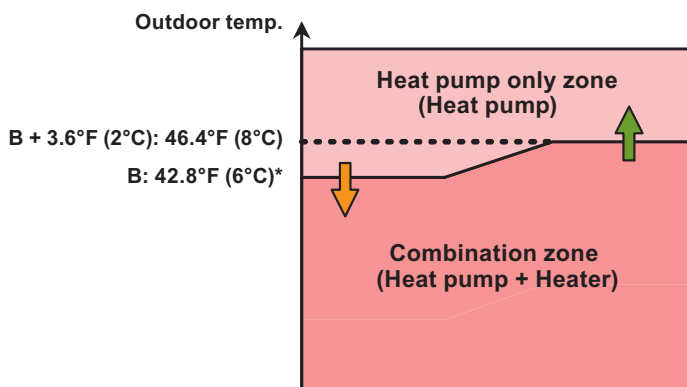

*: Adjustable by function setting 67

• Operation status

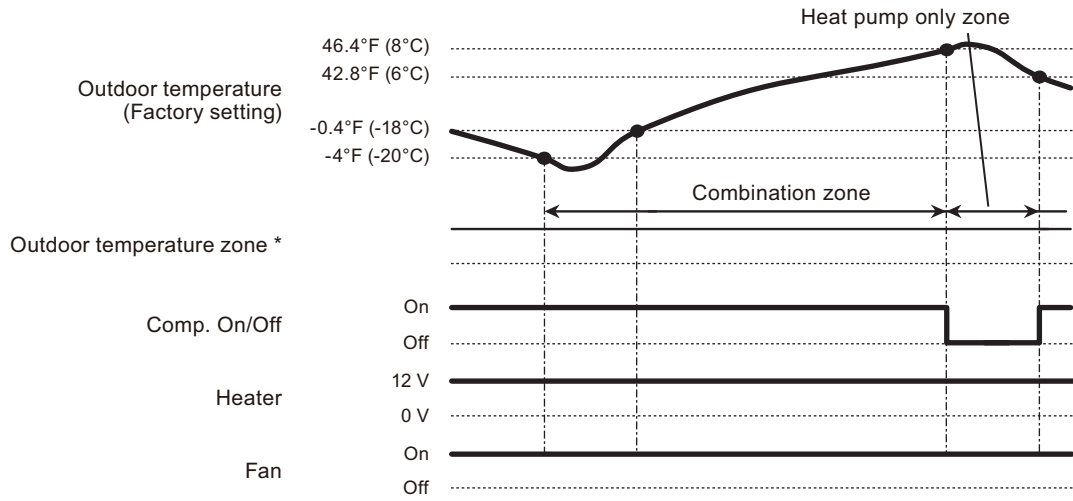

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

● Auxiliary heat pump control

• External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off

- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

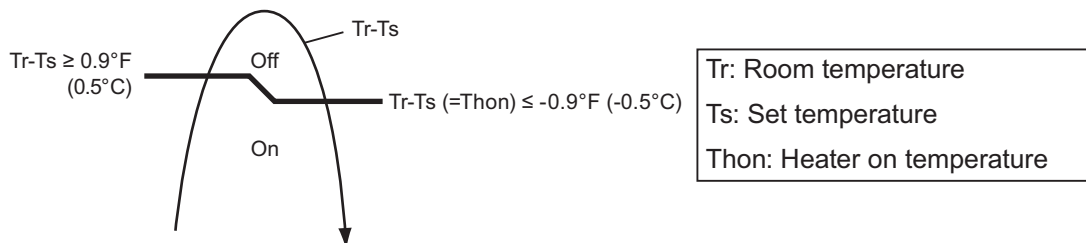

• Auxiliary heat pump On/Off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

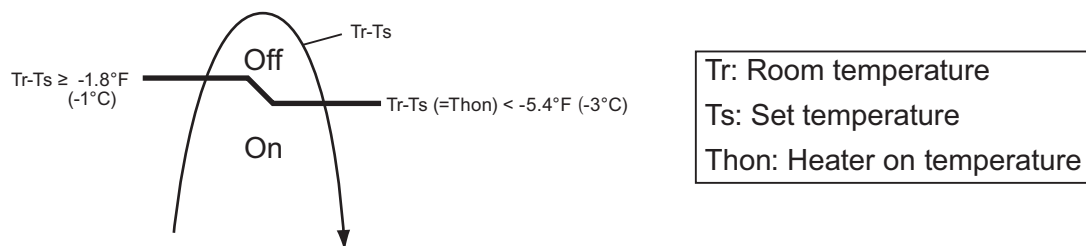


● Auxiliary heat pump control by outdoor temperature 1

• External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off

- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

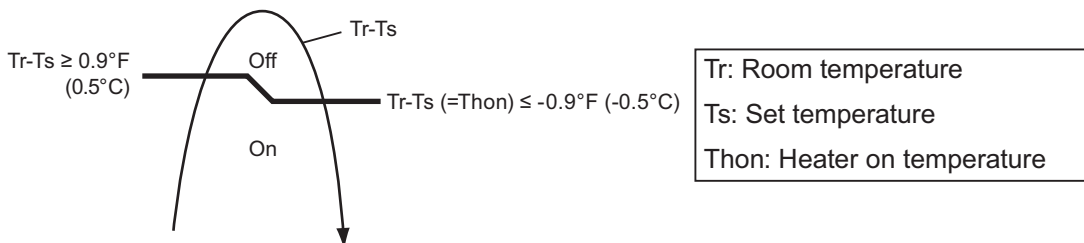


• Auxiliary heat pump On/Off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

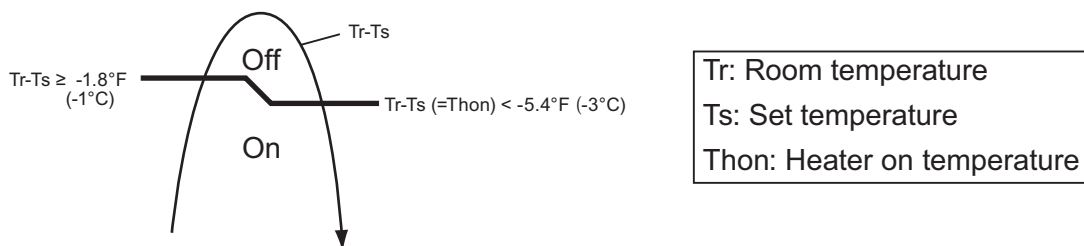


• Outdoor temperature zone

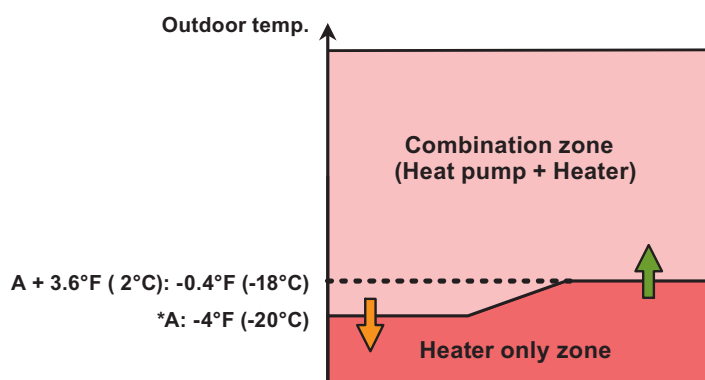

*: Adjustable by function setting 66

• Operation status

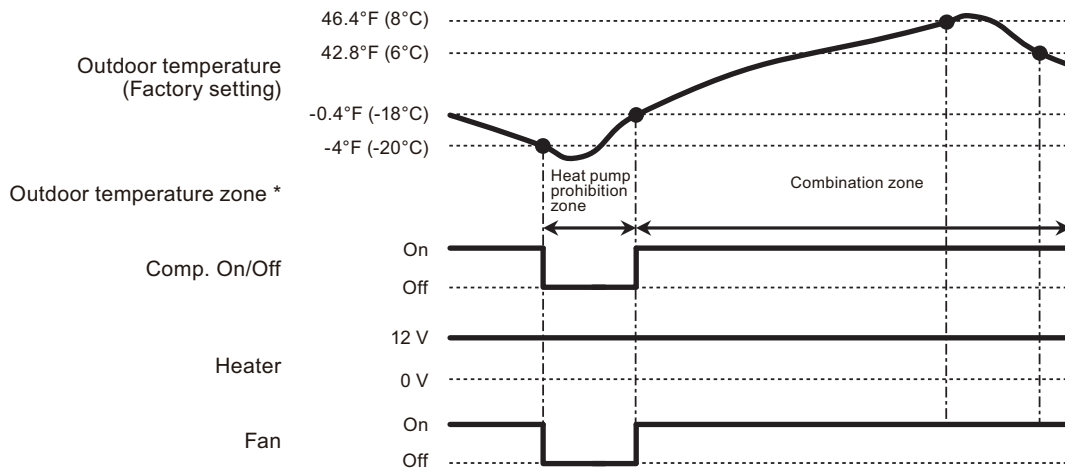

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

● Auxiliary heat pump control by outdoor temperature 2

• External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off

- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

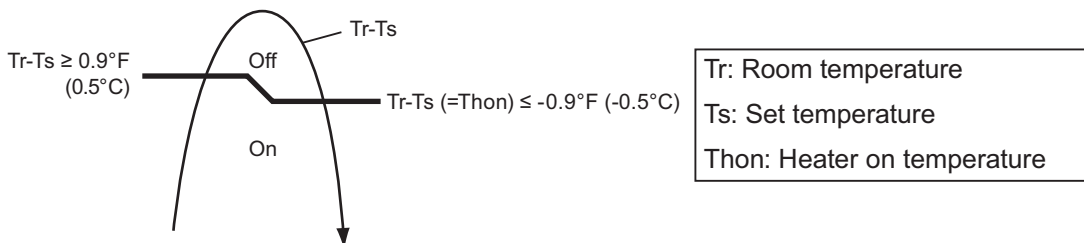


• Auxiliary heat pump On/Off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

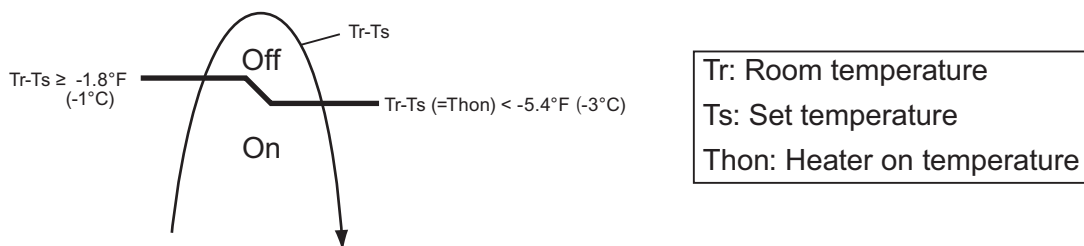


• Outdoor temperature zone

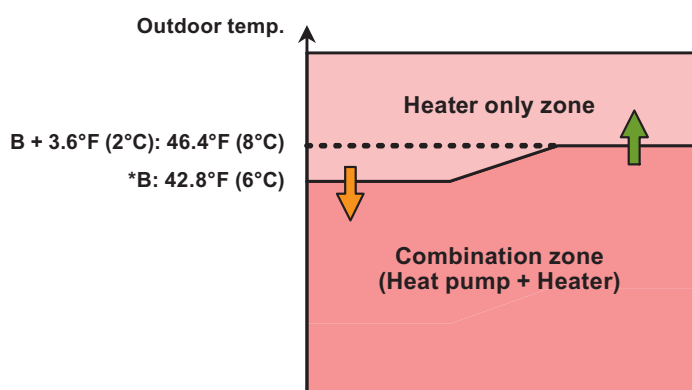

*: Adjustable by function setting 67

• Operation status

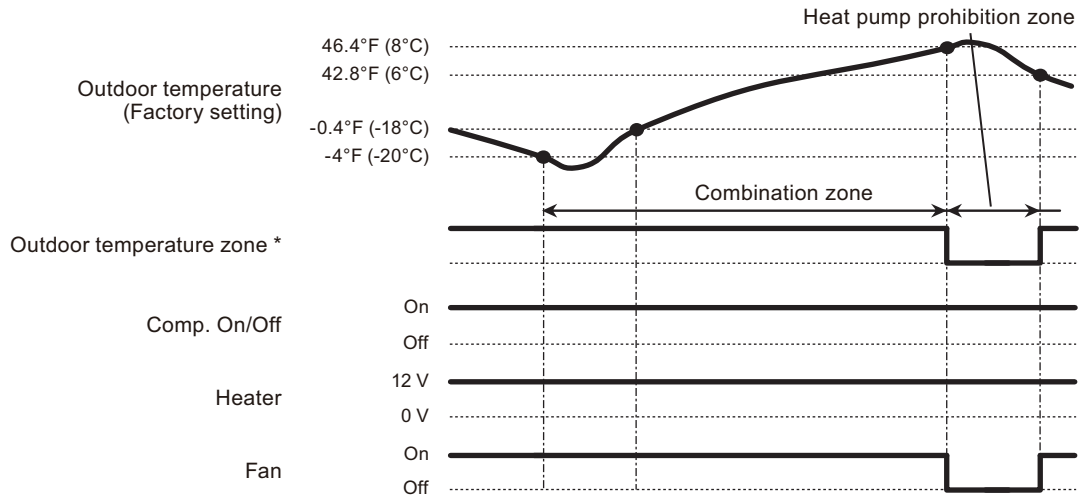

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

NOTE: In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

● Auxiliary heat pump control by outdoor temperature 3

• External heater output


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> • Heater is off as shown in following diagram of heating temperature. • Other than heating mode • Error occurred • Forced thermostat off

- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

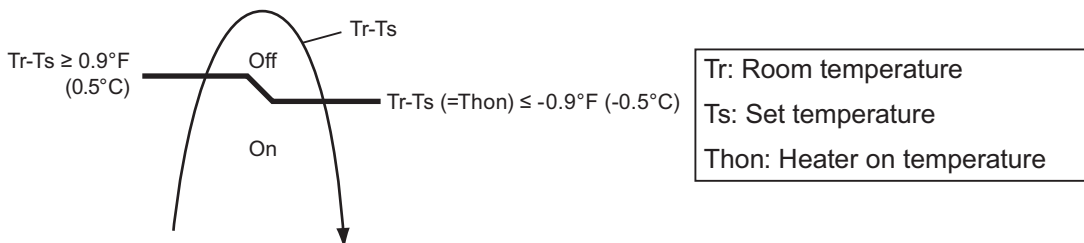


• Auxiliary heat pump On/Off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

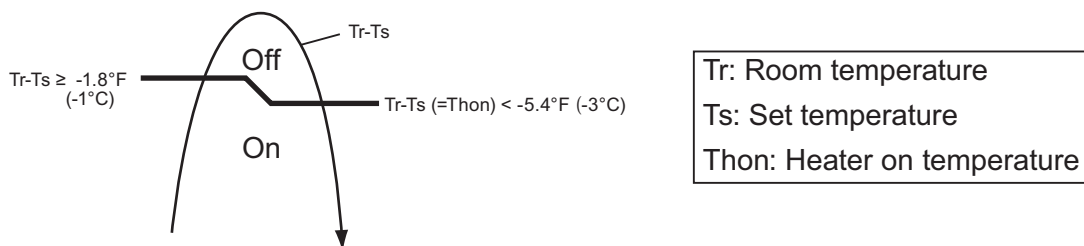


• Outdoor temperature zone

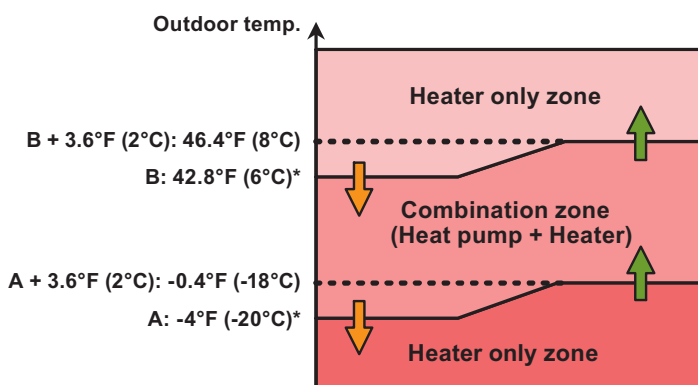

*: Adjustable by function setting 66 and 67

• Operation status

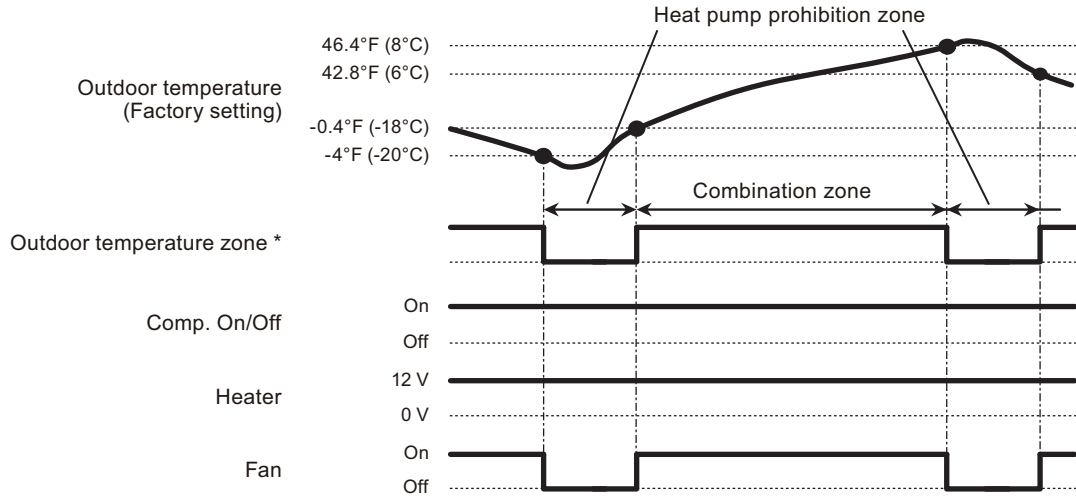

* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.


NOTE: In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run

■ Heating thermostat on for humidifier

Situation	Indoor unit				
	Mode	Function setting	Rotary SW	External output	
		Heating thermostat on no. 60		Heating thermostat on	Indoor unit fan operation status
Example of individual connection	5	60-05	7	CN47	Not used
	6	60-06	8	CN312	
	7	60-07	9	CN311	
	8	60-08	A	CN310	


- **Example of individual connection**

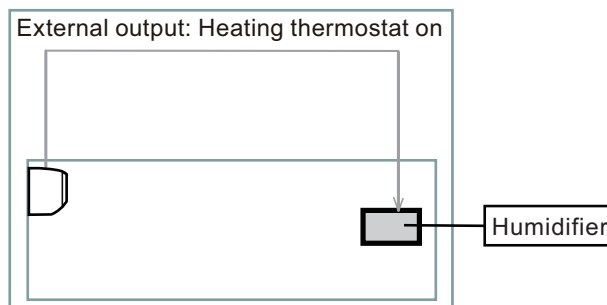

- **Operation status**

The heating thermostat output for CNB01 (1-2 or 1-3 or 1- or 1-5) will be on when comp on or external heater on.

The heating thermostat output will be off when comp off and external heater off.

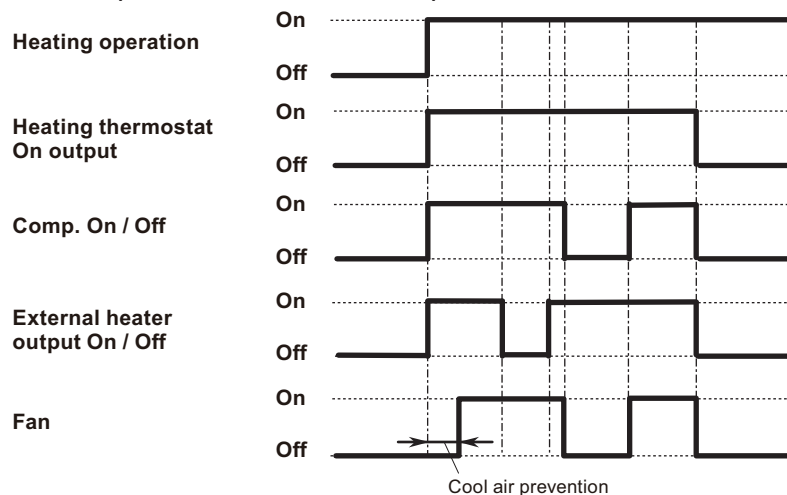

9. Group connection


NOTE: Group control cannot be used together with Wireless LAN adapter.

Installation procedure for group control system:

A number of indoor units can be operated at the same time using a single remote controller.


NOTE: When different type of indoor units (such as wall mounted type and cassette type, cassette type and duct type, or other combinations) are connected using group control system, some functions may no longer be available.

1. Connect up to 16 indoor units in a system.

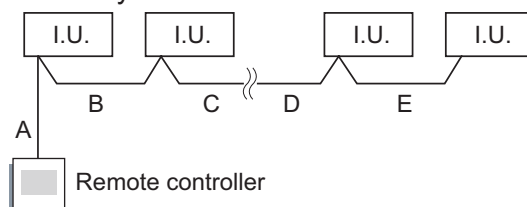

A, B, C, D, E: Remote controller cable	
Wiring length limitation	$A + B + C + D + E \leq 546.8 \text{ yd (500 m)}$

Example of wiring method

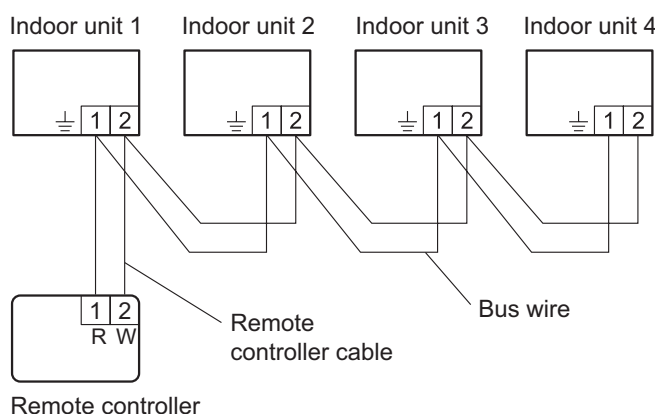

2. Set the R.C. address. (Function setting)

- Addresses will be automatically set when initially starting up this unit. In such a case, do not change the remote controller address for the indoor unit, and keep it at the initial setting of "00".
- Only set addresses manually when using different numbers for addresses. Set the R.C. address of each indoor unit using the function setting. (Refer to "Remote controller address setting" in ["Contents of function setting"](#) on page 51.)


NOTES:

- Do not use the same setting value.
- Setting is reflected after the power is turned on again.

Also set the R.C. address for the remote controller. For details, refer to the remote controller installation manual.

NOTE: In manual setting, connect up to 15 indoor units in a system.


Example of wiring method

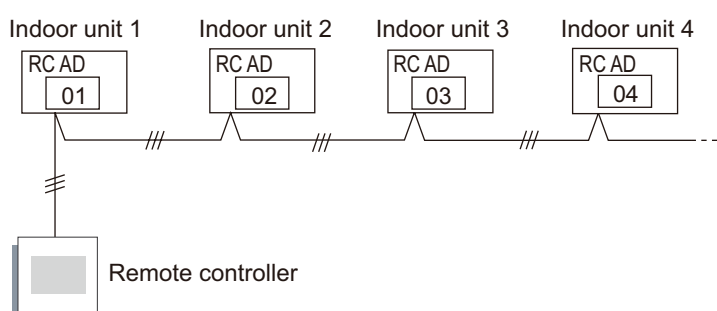

10. Remote controller

10-1. Wireless remote controller

Overview

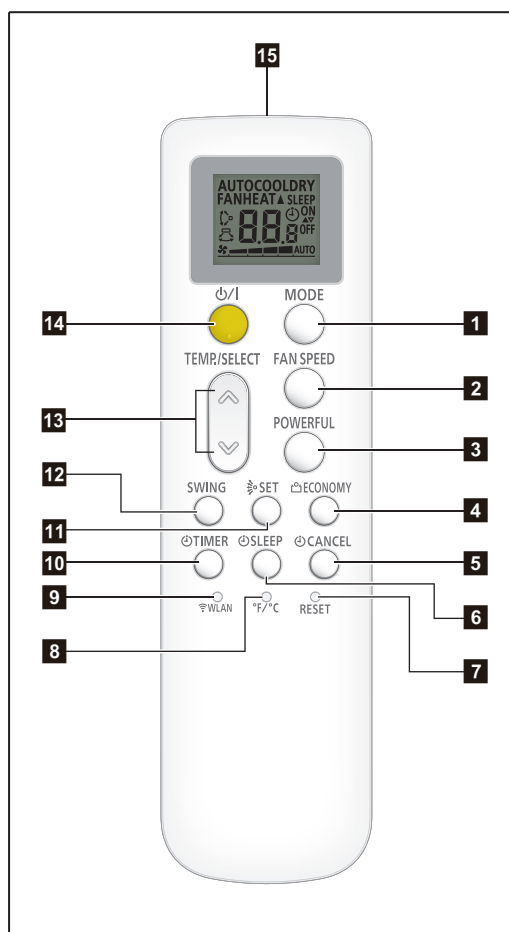

1 MODE button

- Switches operation mode (AUTO, COOL, DRY, FAN, and HEAT).
- Starts/ends the remote controller custom code (max. 4 types) change.

2 FAN SPEED button

- Press the FAN SPEED button while the air conditioner is operating, to control fan speed.
- Press and hold the FAN SPEED button for more than 5 seconds while the air conditioner is stopped, switch the energy saving fan control.

3 POWERFUL button

4 ECONOMY button

5 CANCEL button

6 SLEEP TIMER button

7 RESET button

8 °F/°C button

- Switches the temperature unit on the remote controller display.
- Press and hold the °F/°C button for more than 5 seconds to enter Service check mode.
 - Do not use Service check mode in normal use.
 - If there seems to be a problem, check the error code by referring to the Operation manual.

9 WLAN button

- Starts the wireless LAN setting.
- Press and hold the WLAN button for more than 5 seconds while the air conditioner is operating, to enter test run mode.

10 TIMER button

11 SET button (Up/down airflow)

12 SWING button

13 TEMP./SELECT button

- Adjusts the setting temperature.
- Adjusts the value of the timer settings.
- Sets the remote controller code.

14 START/STOP button

15 Signal transmitter

16 Temperature and time indicator

- Displays set temperature.
- In timer setting, it displays the timer time. After finishing the timer setting, set temperature will reappear.

17 Signal transmit indicator


18 Timer mode indicator

19 Fan speed indicator

20 Swing indicator

21 Operating mode indicator

Display panel

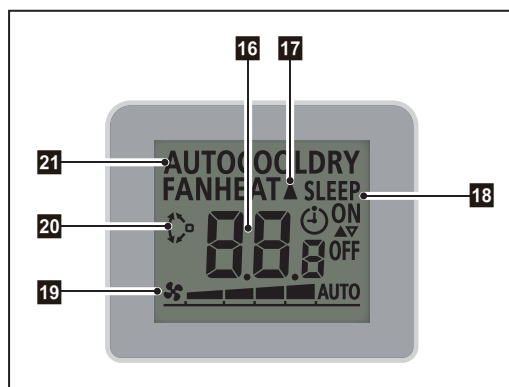


NOTE: Functions may differ by type of the indoor unit. For details, refer to the operation manual.

To facilitate explanation, the accompanying illustration has been drawn to show all possible indicators; in actual operation, however, the display will only show those indicators appropriate to the current operation.

■ Specifications

● Controller


Unit: in (mm)

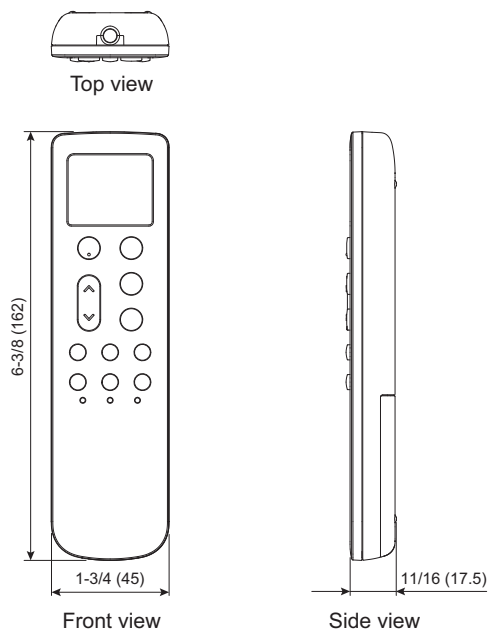

Size (H × W × D)	in (mm)	6-3/8 × 1-3/4 × 11/16 (162 × 45 × 17)
Weight	oz (g)	2.3 (65.5) (without batteries)

● Holder

Unit: in (mm)

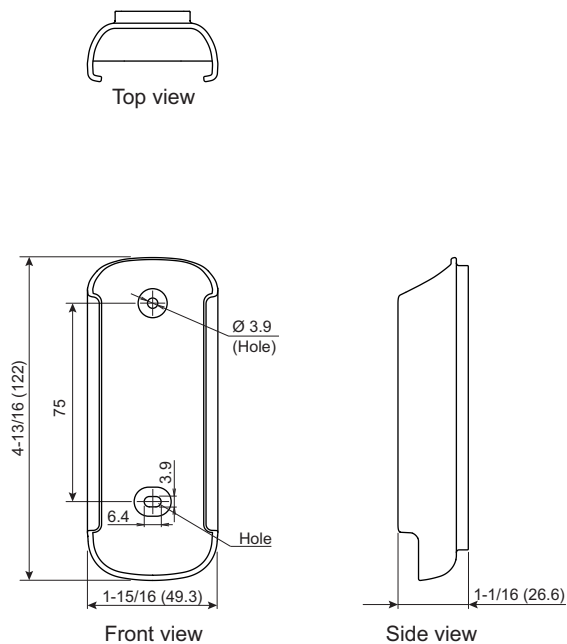

Size (H × W × D)	in (mm)	4-13/16 × 1-15/16 × 1-1/16 (122 × 49.3 × 26.6)
Weight	oz (g)	1 (23.5)

11. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.

NOTE: Incorrect settings can cause a product malfunction.

11-1. Function settings by using remote controller

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

■ Setting procedure by using wireless remote controller

The function number and the associated setting value are displayed on the LCD of the remote controller. Follow the instructions written in the local setup procedure supplied with the remote controller, and select appropriate setting according to the installation environment.

Before connecting the power supply of the indoor unit, reconfirm following items:

- Piping air tight test and vacuuming have been performed firmly.
- There is no wiring mistake.

Then, connect the power supply of the indoor unit.

Entering function setting mode:

While pressing the FAN SPEED button and TEMP./SELECT (^) button simultaneously, press the RESET button to enter the function setting mode.

STEP 1: Setting the remote controller custom code

Use the following steps to select the custom code of the remote controller. (Note that the air conditioner cannot receive a custom code if the air conditioner has not been set for the custom code.)

The custom codes that are set through this process are applicable only to the signal in the function setting.

For details on how to set the custom codes through the normal process, refer to “Custom code setting for wireless remote controller” on page 1.

1. Press the TEMP./SELECT (^) (v) buttons to change the custom code between \overline{A} → \overline{B} → \overline{C} → \overline{D} . Match the code on the display to the air conditioner custom code. (Initially set to \overline{A} .) If the custom code does not need to be selected, press the MODE button, and proceed to **STEP 2**.
2. Press the MODE button to accept the custom code, and proceed to **STEP 2**.



NOTES:

- The air conditioner custom code is set to \overline{A} prior to shipment.
- The remote controller resets to custom code \overline{A} when the batteries on the remote controller are replaced. If you use a custom code other than code \overline{A} , reset the custom code after replacing the batteries.
- If you do not know the air conditioner custom code setting, try each of the custom codes (\overline{A} → \overline{B} → \overline{C} → \overline{D}) until you find the code that operates the air conditioner.

STEP 2: Selecting the function number and setting value

1. Press the TEMP./SELECT (^) (v) buttons to select the function number. To switch between the left and right digits, press the MODE button.
2. Press the FAN SPEED button to proceed the setting value. To return the function number selection, press the FAN SPEED button again.
3. Press the TEMP./SELECT (^) (v) buttons to select the setting value. To switch between the left and right digits, press the MODE button.
4. Press the TIMER button, and when the indoor unit beeps, press the ϕ /I (START/STOP) button to confirm the settings.
5. Press the RESET button to cancel the function setting mode.
6. After completing the function setting, be sure to disconnect the power supply and then reconnect it.

Function number



Setting value

**⚠ CAUTION**

- After disconnecting the power supply, wait 30 seconds or more before reconnecting it. The function setting will not become active unless the power supply is disconnected and then reconnected.
- When using a custom code other than A, press [RESET] and then press and hold [MODE] again for 5 seconds or more to set the custom code.

■ Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

NOTE: Setting will not be changed if invalid numbers or setting values are selected.

● Function setting list

	Function no.	Functions
1)	11	Filter sign
2)	30/31	Room temperature control for indoor unit sensor
3)	35/36	Room temperature control for wired remote controller sensor
4)	40	Auto restart
5)	42	Room temperature sensor switching
6)	44	Remote controller custom code
7)	46	External input control
8)	48	Room temperature sensor switching (Aux.)
9)	49	Indoor unit fan control for energy saving for cooling
10)	60	Switching functions for external output terminal
11)	61	Control switching of external heaters
12)	62	Operating temperature switching of external heaters
13)	66	Outdoor temperature zone boundary temperature A
14)	67	Outdoor temperature zone boundary temperature B
15)	71	Standby time for auxiliary equipment operation
16)	72	Heat pump backup setting
17)	73	Emergency heat for external output terminal
18)	95	Heat insulation condition (building insulation)

1) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (400 hours)	
	01	Long interval (1,000 hours)	
	02	Short interval (200 hours)	
	03	No indication	◆

2) Room temperature control for indoor unit sensor

NOTE: Before performing this setting, refer to Function 95.

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment.

The temperature of the room temperature sensor is corrected as follows:

Corrected temp. = Temp. of the room temp. sensor - Correction temp. value

Example of correction:

When the temperature of the room temp. sensor is 78°F and the setting value is "03" (-2°F), the corrected temp. will be 80°F (78°F - [-2°F]).

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

*When Function 95-01 (High insulation) is set, the Standard setting "00" will be the same as "No correction 0.0 °F (0.0 °C)" (01).

Function number		Setting value	Setting description	Factory setting	
30 (For cooling)	31 (For heating)	00	Standard setting*	◆	
		01	No correction 0.0 °F (0.0 °C)		
		02	-1 °F (-0.5 °C)	More cooling Less heating	
		03	-2 °F (-1.0 °C)		
		04	-3 °F (-1.5 °C)		
		05	-4 °F (-2.0 °C)		
		06	-5 °F (-2.5 °C)		
		07	-6 °F (-3.0 °C)		
		08	-7 °F (-3.5 °C)		
		09	-8 °F (-4.0 °C)		
		10	+1 °F (+0.5 °C)	Less cooling More heating	
		11	+2 °F (+1.0 °C)		
		12	+3 °F (+1.5 °C)		
		13	+4 °F (+2.0 °C)		
		14	+5 °F (+2.5 °C)		
		15	+6 °F (+3.0 °C)		
		16	+7 °F (+3.5 °C)		
17	+8 °F (+4.0 °C)				

3) Room temperature control for wired remote controller sensor

NOTE: Before performing this setting, refer to Function 95.

Depending on the installed environment, correction of the wire remote temperature sensor may be required. Select the appropriate control setting according to the installed environment.

To change this setting, set Function 42 to "Both" (01).

Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

*When Function 95-01 (High insulation) is set, the Standard setting "00" will be the same as "No correction 0.0 °C" (01).

Function number		Setting value	Setting description	Factory setting	
35 (For cooling)	36 (For heating)	00	Standard setting*	◆	
		01	No correction 0.0 °F (0.0 °C)		
		02	-1 °F (-0.5 °C)	More cooling Less heating	
		03	-2 °F (-1.0 °C)		
		04	-3 °F (-1.5 °C)		
		05	-4 °F (-2.0 °C)		
		06	-5 °F (-2.5 °C)		
		07	-6 °F (-3.0 °C)		
		08	-7 °F (-3.5 °C)		
		09	-8 °F (-4.0 °C)		
		10	+1 °F (+0.5 °C)	Less cooling More heating	
		11	+2 °F (+1.0 °C)		
		12	+3 °F (+1.5 °C)		
		13	+4 °F (+2.0 °C)		
		14	+5 °F (+2.5 °C)		
		15	+6 °F (+3.0 °C)		
		16	+7 °F (+3.5 °C)		
17	+8 °F (+4.0 °C)				

4) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	◆
	01	Disable	

NOTE: Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

5) Room temperature sensor switching

(Only for wired remote controller)

When using the wired remote controller temperature sensor, change the setting to "Both" (01).

Function number	Setting value	Setting description	Factory setting
42	00	Indoor unit	◆
	01	Both	

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

NOTE: Remote controller sensor must be turned on by using the remote controller.

6) Remote controller custom code

(Only for wireless remote controller)

The indoor unit custom code can be changed. Select the appropriate custom code.

Function number	Setting value	Setting description	Factory setting
44	00	A	◆
	01	B	
	02	C	
	03	D	

7) External input control

"Operation/Stop" mode or "Forced stop" mode can be selected.

Function number	Setting value	Setting description	Factory setting
46	00	Operation/Stop mode 1 (R.C. enabled)	◆
	01	(Setting prohibited)	
	02	Forced stop mode	
	03	Operation/Stop mode 2 (R.C. disabled)	

8) Room temperature sensor switching (Aux.)

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01).

When the setting value is set to "Both" (00), more suitable control of the room temperature is possible by setting function setting 30 and 31 too.

Function number	Setting value	Setting description	Factory setting
48	00	Both	◆
	01	Wired remote controller	

9) Indoor unit fan control for energy saving for cooling

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

Function number	Setting value	Setting description	Factory setting
49	00	Disable	
	01	Enable	
	02	Remote controller	◆

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

NOTES:

- As the factory setting, this setting is initially invalidated.
- Set to "00" or "01" when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter.
To confirm if the remote controller has this setting, refer to the operating manual of each remote controller.

10) Switching functions for external output terminal

Functions of the external output terminal can be switched. For details, refer to “External input and output”.

Function number	Setting value	Setting description	Factory setting
60	00	Operation status	◆
	01—04	Cooling thermostat On	
	05	Heating operation	
	06	Operation/Stop	
	07—08	Cooling thermostat On	
	09	Error status	
	10	Indoor unit fan operation status	
	11	External heater	

11) Control switching of external heaters

Sets the control method for external heater to be used.

For details, refer to “External heater output” in Chapter 8-4. ["Details of function"](#) on page 24.

Function number	Setting value	Setting description	Factory setting
61	00	Auxiliary heater control 1	◆
	01	Auxiliary heater control 2	
	02	Heat pump prohibition control	
	03	Auxiliary heater control by outdoor temperature 1	
	04	Auxiliary heater control by outdoor temperature 2	
	05	Auxiliary heater control by outdoor temperature 3	
	06	Auxiliary heat pump control	
	07	Auxiliary heat pump control by outdoor temperature 1	
	08	Auxiliary heat pump control by outdoor temperature 2	
	09	Auxiliary heat pump control by outdoor temperature 3	

12) Operating temperature switching of external heaters

Sets the temperature conditions when the external heater is ON.

For details, refer to “External heater output” in Chapter 8-4. ["Details of function"](#) on page 24.

Function number	Setting value	Setting description		Factory setting
		Heater: On	Heater: Off	
62	00	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	◆
	01	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	
	02	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	
	03	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	
	04	-7.2 °F (-4 °C)	-1.8 °F (-1 °C)	
	05	-9.0 °F (-5 °C)	-1.8 °F (-1 °C)	

13) Outdoor temperature zone boundary temperature A

Setting required if changing of the outdoor temperature setting for heat pump prohibition zone is required when auxiliary heater control by outdoor temperature 1 and 2 are performed on the indoor unit. For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 24.

Function number	Setting value	Setting description	Factory setting
66	00	-4.0 °F (-20 °C)	◆
	01	-0.4 °F (-18 °C)	
	02	3.2 °F (-16 °C)	
	03	6.8 °F (-14 °C)	
	04	10.4 °F (-12 °C)	
	05	14.0 °F (-10 °C)	
	06	17.6 °F (-8 °C)	
	07	21.2 °F (-6 °C)	
	08	24.8 °F (-4 °C)	

14) Outdoor temperature zone boundary temperature B

Setting required if changing of the outdoor temperature setting for heat pump only zone is required when auxiliary heater control by outdoor temperature 1 is performed on the indoor unit. For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 24.

Function number	Setting value	Setting description	Factory setting
67	00	42.8 °F (6 °C)	◆
	01	14.0 °F (-10 °C)	
	02	17.6 °F (-8 °C)	
	03	21.2 °F (-6 °C)	
	04	24.8 °F (-4 °C)	
	05	28.4 °F (-2 °C)	
	06	32.0 °F (0 °C)	
	07	35.6 °F (2 °C)	
	08	39.2 °F (4 °C)	
	09	42.8 °F (6 °C)	
	10	46.4 °F (8 °C)	
	11	50.0 °F (10 °C)	
	12	53.6 °F (12 °C)	
	13	57.2 °F (14 °C)	
	14	60.8 °F (16 °C)	
	15	64.4 °F (18 °C)	

15) Standby time for auxiliary equipment operation

Sets the standby time until the auxiliary equipment operation starts during primary equipment operation.

For details, refer to Chapter 8-4. ["Details of function"](#) on page 24.

Function number	Setting value	Setting description	Factory setting
71	00	Disable	◆
	01	1 minute	
	02	2 minutes	
	•	•	
	•	•	
	•	•	
	98	98 minutes	
	99	99 minutes	

16) Heat pump backup setting

Enables or disables the heat pump backup instruction from the outdoor unit.

This function will be usable provided that the corresponding outdoor unit is connected.

Function number	Setting value	Setting description	Factory setting
72	00	Disable	◆
	01	Enable	

17) Emergency heat for external output terminal

Enables or disables emergency heat input.

Function number	Setting value	Setting description	Factory setting
73	00	Disable	◆
	01	Enable	

NOTE: When this function is used, IR Receiver Unit is necessary.

18) Heat insulation condition (building insulation)

Heat insulation conditions differ according to the installed environment.

"Standard insulation" (00) allows system to rapidly respond to the cooling or heating load changes.

"High insulation" (01) is when the heat insulation structure of the building is high and does not require system to rapidly respond to cooling or heating load changes.

When "High insulation" (01) is selected:

- Overheating (overcooling) is prevented at the start-up.
- All room-temperature control settings (Function 30, 31, 35, and 36) will reset to "No correction 0.0 °F (0.0 °C)".

Function number	Setting value	Setting description	Factory setting
95	00	Standard insulation	◆
	01	High insulation	

NOTE: When changing Function 95, perform this setting before other room-temperature control settings (Function 30, 31, 35, and 36). If Function 95 is not set first, room-temperature control settings (Function 30, 31, 35, and 36) will be reset and you must re-do them again.

11-2. Custom code setting for wireless remote controller

To interconnect the air conditioner and the wireless remote controller, assignment of the custom code for the wireless remote controller is required.

NOTE: Air conditioner cannot receive a signal if the air conditioner has not been set for the custom code.

When 2 or more air conditioners are installed in a room, and the remote controller is operating an air conditioner other than the one you wish to set, change the custom code of the remote controller to operate only the air conditioner you wish to set. (4 selections possible.)

Confirm the setting of the remote controller custom code and the function setting. If these do not match, the remote controller cannot be used to operate for the air conditioner.

1. Press the $\phi/1$ (START/STOP) button until the indicators on the remote controller turn off.
2. Press the MODE button for at least 5 seconds to display the current custom code. (Initially set to \overline{A} .)
3. Press the TEMP./SELECT (\wedge) (\vee) buttons to change the custom code between $\overline{A} \rightarrow \overline{B} \rightarrow \overline{C} \rightarrow \overline{D}$. Match the code on the display to the air conditioner custom code. (Initially set to \overline{A} .)
4. Press the MODE button again to return to the original display. The custom code will be changed.


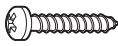





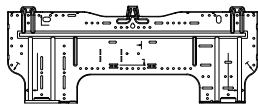
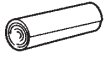





NOTES:

- If no button is pressed within 30 seconds after the custom code is displayed, the system returns to the original display. In this case, start again from step 1.
- The air conditioner custom code is set to \overline{A} prior to shipment. To change the custom code, contact your retailer.
- If you do not know the assigned code for the air conditioner, try each of the custom code ($\overline{A} \rightarrow \overline{B} \rightarrow \overline{C} \rightarrow \overline{D}$) until you find the code which operates the air conditioner.


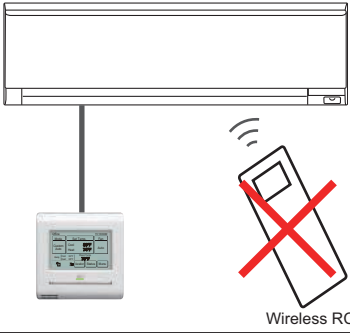
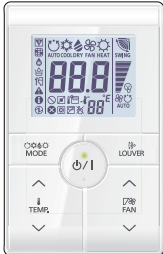

12. Accessories

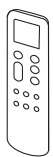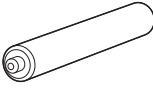12-1. Models: ASUH09LPAS and ASUH12LPAS

Part name	Exterior	Q'ty	Part name	Exterior	Q'ty
Operating manual		1	Tapping screw (large)		5
Installation manual		1	Tapping screw (small)		2
Remote controller		1	Battery		2
Remote controller holder		1	Wall hook bracket		1
Cloth tape		1	Ion deodorization filter		1
Filter holder		2	Apple-catechin filter		1

13. Optional parts




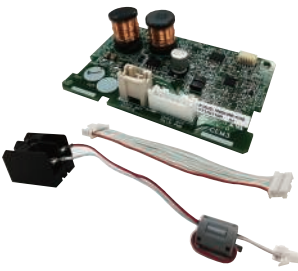




13-1. Controllers

Exterior	Part name	Model name	Summary
	Wired Remote Controller	UTY-RNRUZ*	<p>Easy finger touch operation with LCD panel. Backlit LCD enables easy operation in a dark room. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.</p> <p>NOTE: When this remote controller is connected, wireless remote controller cannot be used.</p>  <p style="text-align: center;">Wireless RC</p>
	Simple Remote Controller	UTY-RSRY	<p>Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, temperature setting, and operation mode. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.</p>
	Simple Remote Controller	UTY-RHRY	<p>Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, and temperature setting. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.</p>

NOTES:

- Available functions may differ by the remote controller. For details, refer to the operation manual.
- When using the group controlling system of the Wired Remote Controller, using Wireless LAN adapter is prohibited.

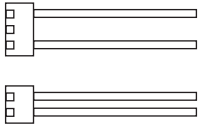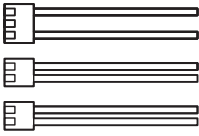13-2. Others

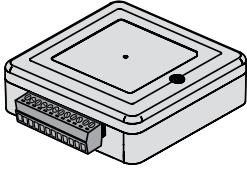Exterior	Part name	Model name	Summary
	External Connect Kit	UTY-XWZX	Use to connect with various peripheral devices and air conditioner PCB.
	External Connect Kit	UTY-XWZXZ5	Required when external device is connected.
	External Input and Output PCB	UTY-XCSXZ2	Use to connect with external devices and air conditioner PCB. Optional External Connect Kit is necessary for installation.
	Communication Kit	UTY-TWRXZ2	Use to connect Non-polar 2-core wired remote controller.
	Wireless LAN adapter	UTY-TFSXF1	Remotely manage an air conditioning system using mobile devices such as smartphones and tablets. Appropriate application for each region is required to use this option. For details, contact FGL sales company.
	Modbus Converter	UTY-VMSX	For connection between indoor unit with UART interface and a Modbus open network.
	Thermostat Converter	UTY-TTRX	This converter can control Fujitsu General products using a third-party thermostat controller.
	Network Converter	UTY-VTGX	This converter is required when connecting single split system to VRF network system.

Part 2. OUTDOOR UNIT

SINGLE TYPE:

AOUH09LPAS1

AOUH12LPAS1

1. Specifications

OUTDOOR UNIT
AOUH09-12LPAS1

OUTDOOR UNIT
AOUH09-12LPAS1

Type			Inverter heat pump		
Model name			AOUH09LPAS1	AOUH12LPAS1	
Power supply			208/230 V ~ 60 Hz		
Power supply intake			Outdoor unit		
Available voltage range			187—253 V		
Starting current			A		
Fan	Airflow rate	Cooling	CFM (m ³ /h)	3.7	4.9
		Heating		959 (1,630)	989 (1,680)
	Type × Q'ty			959 (1,630)	989 (1,680)
Motor output			W	Propeller fan × 1	
				23	
Sound pressure level *1				47	
				48	
Heat exchanger type	Dimensions (H × W × D)		in (mm)	19-13/16 × 25-9/16 × 11/16 (504 × 650 × 18.2)	Main1: 19-13/16 × 34-15/16 × 11/16 (504 × 888 × 18.19) Main2: 19-13/16 × 20-1/16 × 11/16 (504 × 510 × 18.19)
	Fin pitch		FPI	20	
	Rows × Stages			1 × 24	Main1: 1 × 24 Main2: 1 × 24
	Pipe type	Copper			
	Fin type	Type (Material)	Aluminum		
		Surface treatment			PC fin
Compressor	Type	DC rotary			
	Motor output	W	550	900	
Refrigerant	Type	R410A			
	Charge	lb oz	1 lb 9 oz	2 lb 2 oz	
		g	700	950	
Refrigerant oil	Type	VG74			
	Amount	in ³ (cm ³)	14.6 (240)	20.7 (340)	
Enclosure	Material	Steel sheet			
	Color	Beige Approximate color of Munsell 10YR 7.5/1.0			
Dimensions (H × W × D)	Net		in (mm)	21-5/16 × 26-1/8 × 11-7/16 (541 × 663 × 290)	21-5/16 × 31-7/16 × 11-7/16 (542 × 799 × 290)
	Gross			23-11/16 × 31-5/8 × 14-3/4 (602 × 804 × 375)	23-11/16 × 37 × 14-3/4 (602 × 940 × 375)
Weight	Net			51 (23)	68 (31)
	Gross			57 (26)	75 (34)
Connection pipe	Size	Liquid	in (mm)	Ø 1/4 (Ø 6.35)	
		Gas		Ø 3/8 (Ø 9.52)	
	Method	Flare			
	Pre-charge length			49 (15)	
	Max. length			66 (20)	
Max. height difference			49 (15)		
Operation range	Cooling	°F (°C)	14 to 115 (-10 to 46)		
	Heating		5 to 75 (-15 to 24)		
Drain hose	Material	PP			
	Tip diameter	in (mm)	Ø 1/2 (Ø 13.0) (I. D.), Ø 5/8 to 11/16 (Ø 16.0 to 16.8) (O. D.)		

NOTES:

- Specifications are based on the following conditions:
 - Cooling: Indoor temperature of 80 °FDB (26.67 °CDB) / 67 °FWB (19.44 °CWB), and outdoor temperature of 95 °FDB (35 °CDB) / 75 °FWB (23.9 °CWB).
 - Heating: Indoor temperature of 70 °FDB (21.11 °CDB) / 60 °FWB (15.56 °CWB), and outdoor temperature of 47 °FDB (8.33 °CDB) / 43 °FWB (6.11 °CWB).
 - Pipe length: 25 ft (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)
- Protective function might work when using it outside the operation range.
- *1: Sound pressure level
 - Measured values in manufacturer's anechoic chamber.
 - Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.


2. Dimensions

2-1. Model: AOUH09LPAS1


Unit: in (mm)

OUTDOOR UNIT
AOUH09-12LPAS1


OUTDOOR UNIT
AOUH09-12LPAS1

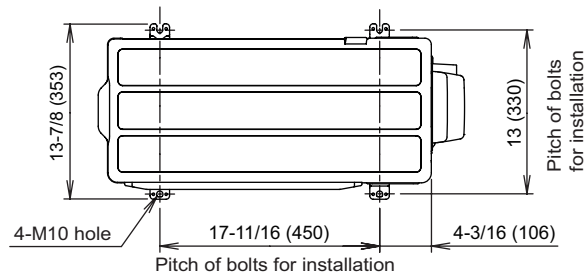


Top view

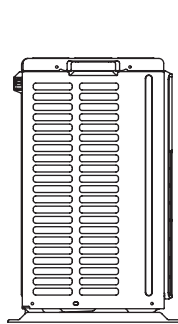


Side view

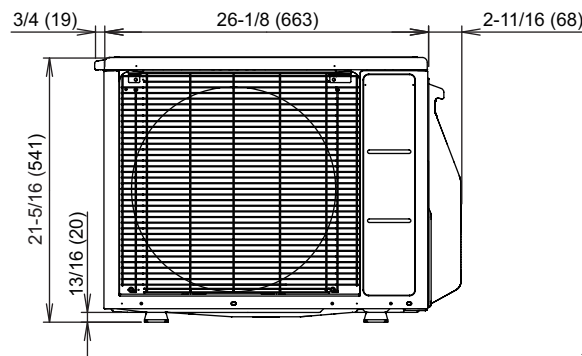


Front view

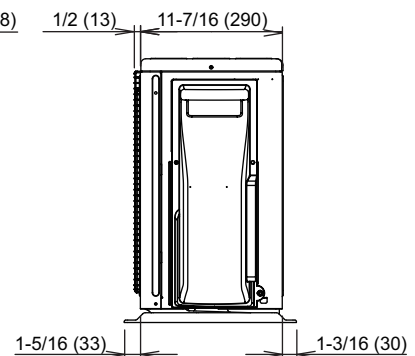

Side view

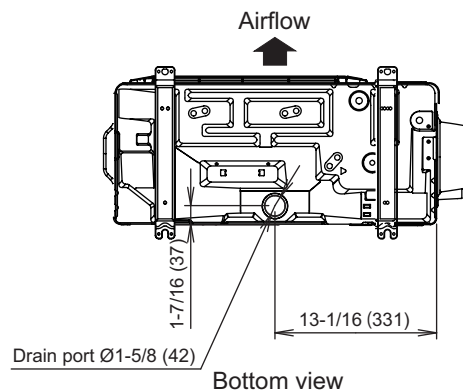

Bottom view

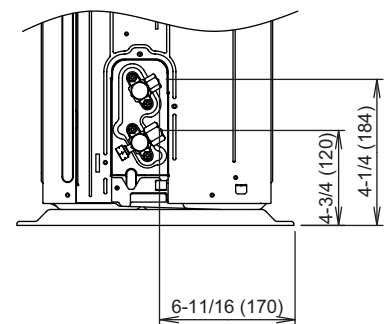


Side view (Valve part)

2-2. Model: AOUH12LPAS1


Unit: in (mm)

OUTDOOR UNIT
AOUH09-12LPAS1


OUTDOOR UNIT
AOUH09-12LPAS1

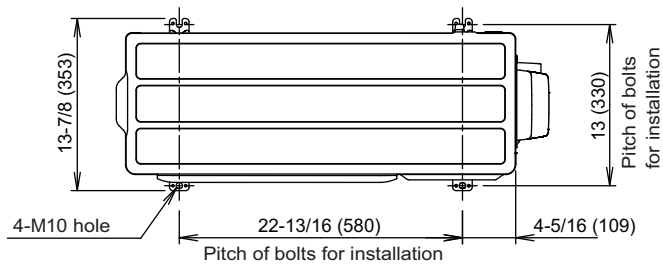

Top view

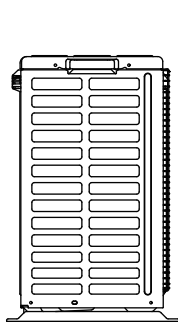


Side view

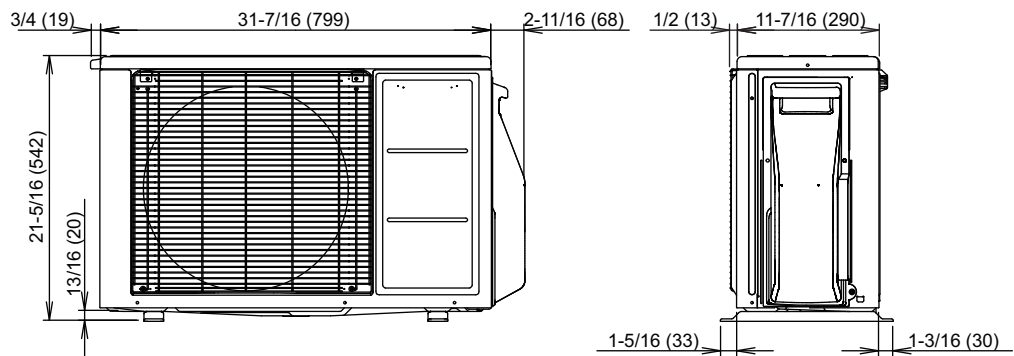


Front view

Side view

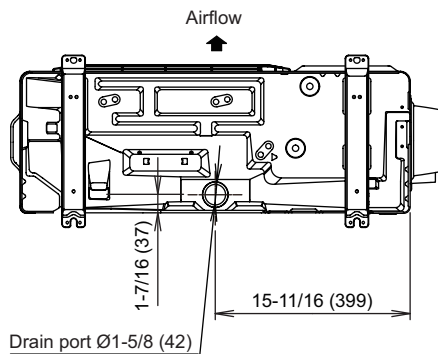

Bottom view

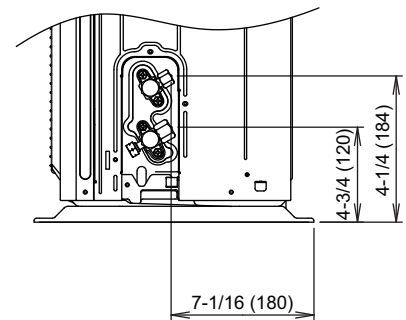

Side view (Valve part)

3. Installation space

3-1. Models: AOUH09LPAS1 and AOUH12LPAS1

■ Space requirement

Provide sufficient installation space for product safety.

⚠ CAUTION

Keep the space shown in the installation examples.


If the installation is not performed accordingly, it could cause a short circuit and result in a lack of operating performance.

● Single outdoor unit installation


- When the upper space is open:

Unit: in (mm)


Obstacles at rear only

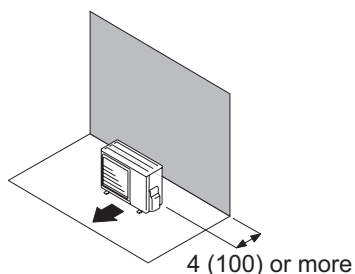


Obstacles at rear and sides

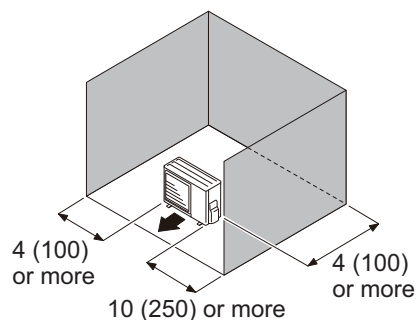

Obstacles at front

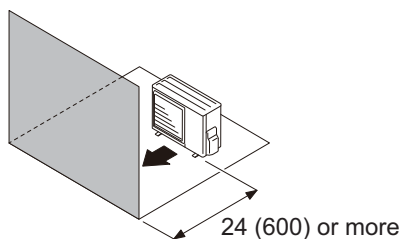


Obstacles at front and rear

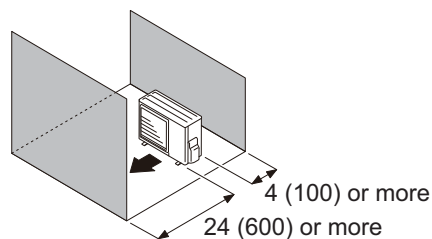


- When an obstruction in the upper space:

Unit: in (mm)

Obstacles at rear and above

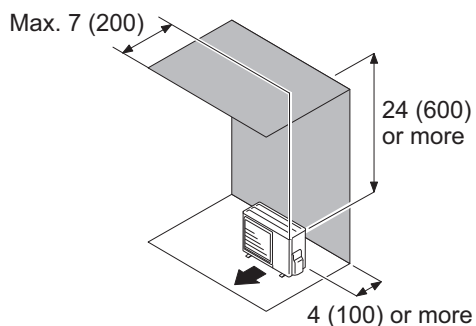

Obstacles at rear, sides, and above

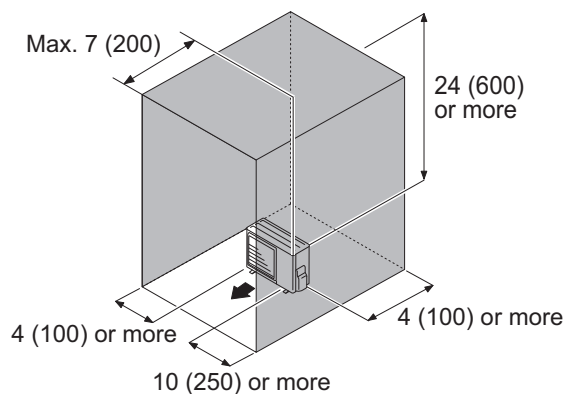


● Multiple outdoor unit installation


- Provide at least 10 in (250 mm) of space between the outdoor units if multiple units are installed.
- When routing the piping from the side of an outdoor unit, provide space for piping.
- No more than 3 units must be installed side by side. When 4 units or more are arranged in a line, provide the space as shown in the following example **“When an obstruction in the upper space:”**.
- **When the upper space is open:**

Unit: in (mm)


Obstacles at rear only

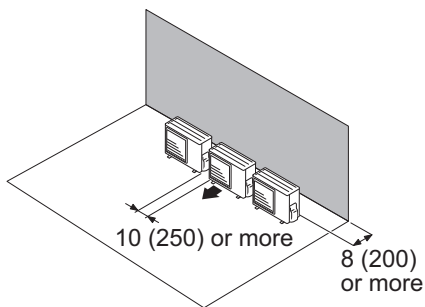

Obstacles at front only

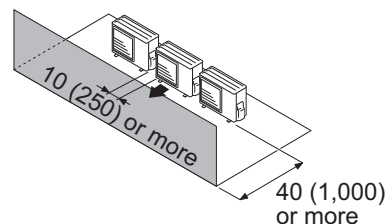


Obstacles at front and rear

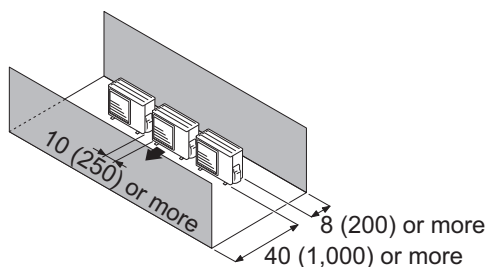

- **When an obstruction in the upper space:**

Unit: in (mm)


Obstacles at rear and above.

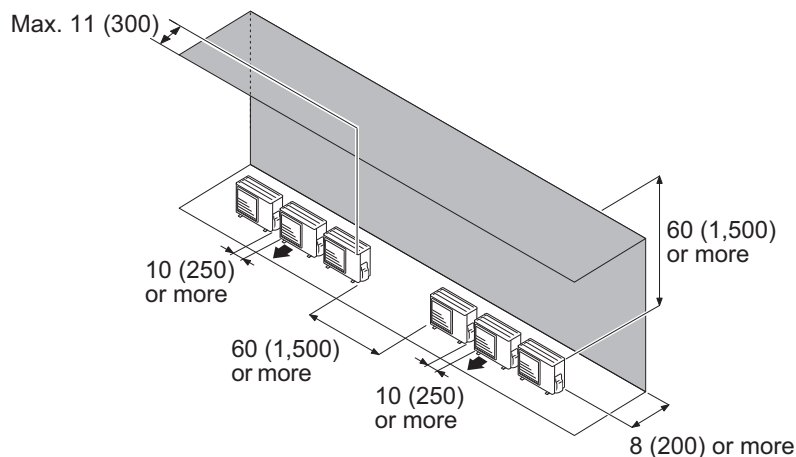



● Outdoor units installation in multi-row

Unit: in (mm)

Single parallel unit arrangement

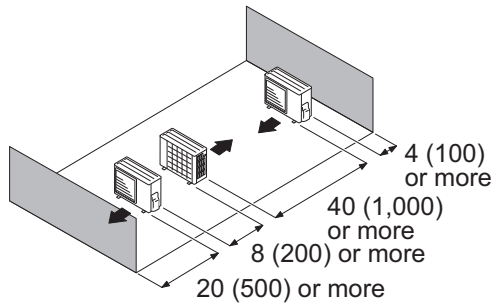

Multiple parallel unit arrangement

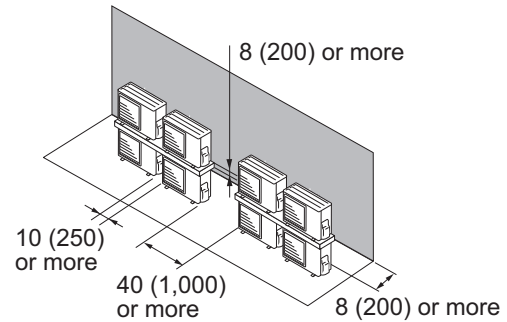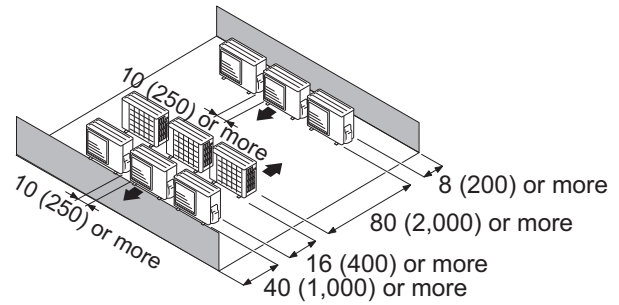


NOTES:

- If the space is larger than stated above, the condition will be the same as when there is no obstacle.
- When installing the outdoor unit, be sure to open the front and left side to obtain better operation efficiency.


⚠ CAUTION

- Do not install the outdoor unit in two-stage where the drain water could freeze. Otherwise the drainage from the upper unit may form ice and cause a malfunction of the lower unit.
- When the outdoor temperature is 32 °F (0 °C) or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold climate. (For reverse cycle model only.)
- In area with heavy snowfall, if the inlet and outlet of the outdoor unit is blocked with snow, it might become difficult to get warm, and it is likely to cause product malfunction. Construct a canopy and a pedestal, or place the unit on a high stand that is locally installed.

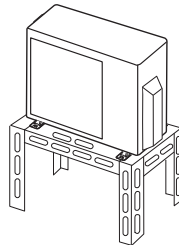

4. Refrigerant circuit

4-1. Models: AOUH09LPAS1 and AOUH12LPAS1

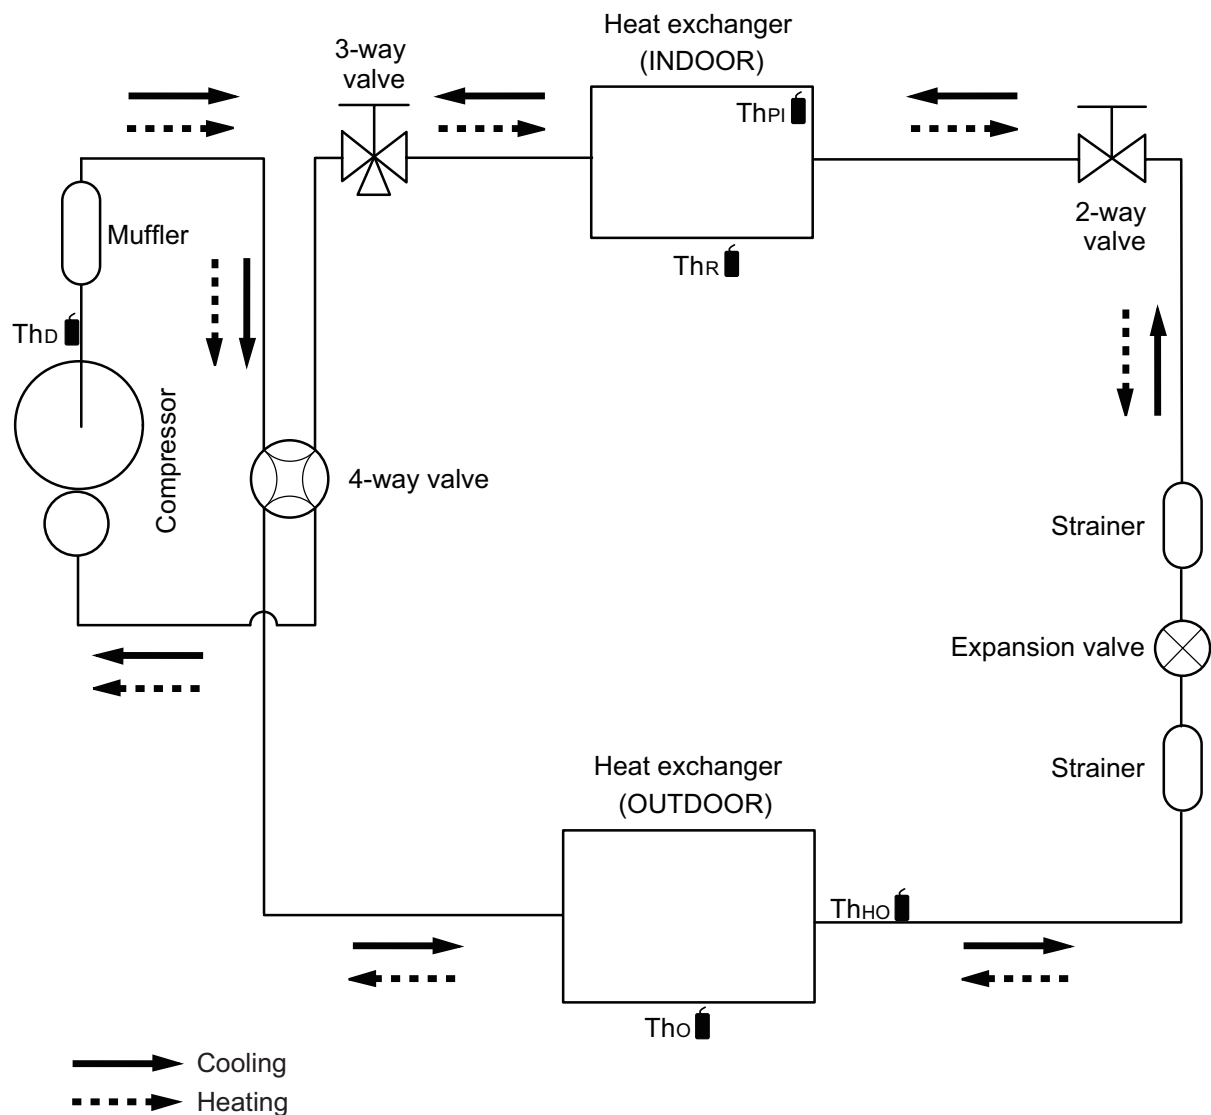

ThD : Thermistor (Discharge temperature)

ThO : Thermistor (Outdoor temperature)

ThHO : Thermistor (Heat exchanger out temperature)

ThPI : Thermistor (Pipe temperature)


ThR : Thermistor (Room temperature)

5. Wiring diagrams


5-1. Models: AOUH09LPAS1 and AOUH12LPAS1

OUTDOOR UNIT
AOUH09-12LPAS1

OUTDOOR UNIT
AOUH09-12LPAS1

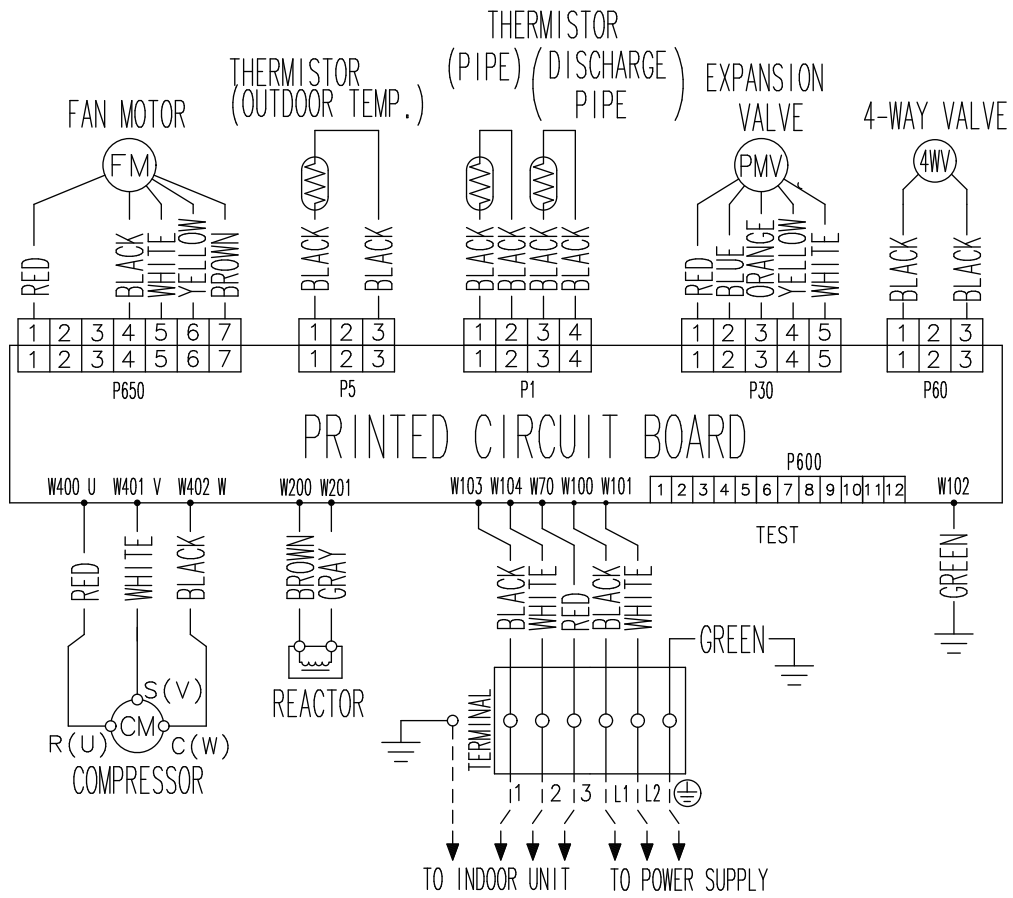

6. Capacity compensation rate for pipe length and height difference

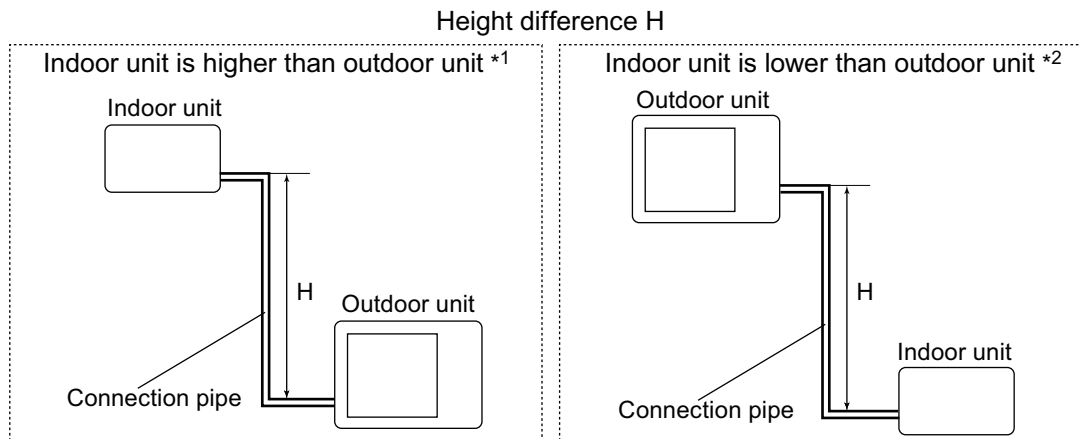

6-1. Model: AOUH09LPAS1

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length						
		m						
			ft	5 16	7.5 25	10 33	15 49	20 66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.880	0.918
		10	33	—	—	0.970	0.894	0.933
		7.5	25	—	0.988	0.974	0.898	0.937
		5	16	1.001	0.992	0.978	0.901	0.941
	0	0	1.009	1.000	0.985	0.909	0.949	
Indoor unit is lower than outdoor unit *2	-5	-16	1.009	1.000	0.985	0.909	0.949	
	-7.5	-25	—	1.000	0.985	0.909	0.949	
	-10	-33	—	—	0.985	0.909	0.949	
	-15	-49	—	—	—	0.909	0.949	

HEATING		Pipe length						
		m						
			ft	5 16	7.5 25	10 33	15 49	20 66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.866	0.855
		10	33	—	—	0.954	0.866	0.855
		7.5	25	—	1.000	0.954	0.866	0.855
		5	16	1.041	1.000	0.954	0.866	0.855
	0	0	1.041	1.000	0.954	0.866	0.855	
Indoor unit is lower than outdoor unit *2	-5	-16	0.994	0.995	0.949	0.862	0.851	
	-7.5	-25	—	0.993	0.947	0.860	0.849	
	-10	-33	—	—	0.944	0.857	0.847	
	-15	-49	—	—	—	0.848	0.838	

6-2. Model: AOUH12LPAS1

NOTE: Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.883	0.893
		10	33	—	—	0.956	0.897	0.907
		7.5	25	—	0.988	0.960	0.901	0.910
		5	16	1.021	0.992	0.964	0.904	0.915
		0	0	1.029	1.000	0.971	0.913	0.922
	Indoor unit is lower than outdoor unit *2	-5	-16	1.029	1.000	0.971	0.913	0.922
		-7.5	-25	—	1.000	0.971	0.913	0.922
		-10	-33	—	—	0.971	0.913	0.922
-15		-49	—	—	—	0.913	0.922	

HEATING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	-	-	-	0.901	0.884
		10	33	-	-	0.974	0.901	0.884
		7.5	25	-	1.000	0.974	0.901	0.884
		5	16	1.006	1.000	0.974	0.901	0.884
		0	0	1.006	1.000	0.974	0.901	0.884
	Indoor unit is lower than outdoor unit *2	-5	-16	1.001	0.995	0.969	0.896	0.880
		-7.5	-25	-	0.993	0.967	0.894	0.878
		-10	-33	-	-	0.965	0.892	0.876
-15		-49	-	-	-	0.883	0.867	

7. Additional charge calculation

7-1. Model: AOUH09LPAS1

Refrigerant type	R410A	
Refrigerant amount	lb oz	1 lb 9 oz
	g	700

■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.22 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge	oz	0	3.5	
	g	0	100	

7-2. Model: AOUH12LPAS1

Refrigerant type	R410A	
Refrigerant amount	lb oz	2 lb 2 oz
	g	950

■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.22 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge	oz	0	3.5	
	g	0	100	

8. Airflow

8-1. Model: AOUH09LPAS1

● Cooling

m ³ /h	1,630
l/s	453
CFM	959

● Heating

m ³ /h	1,630
l/s	453
CFM	959

8-2. Model: AOUH12LPAS1

● Cooling

m ³ /h	1,680
l/s	467
CFM	989

● Heating


m ³ /h	1,680
l/s	467
CFM	989

9. Operation noise (sound pressure)


9-1. Noise level curve

Model: AOUH09LPAS1

Cooling

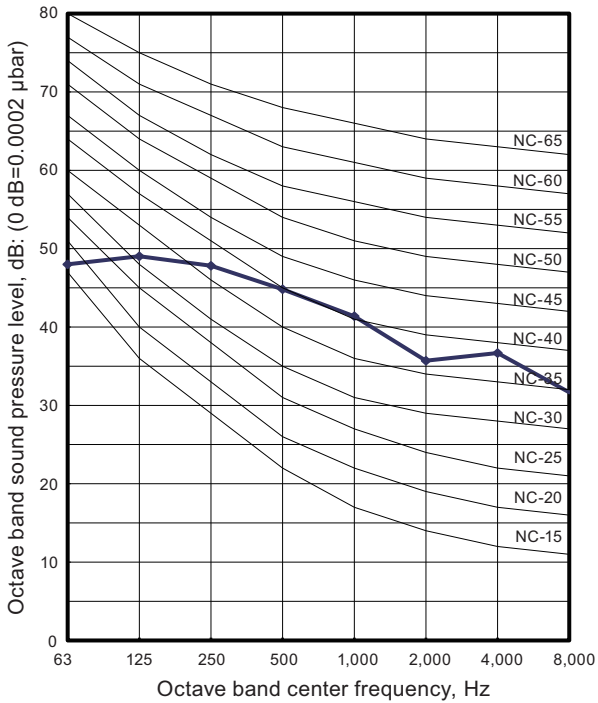


Heating

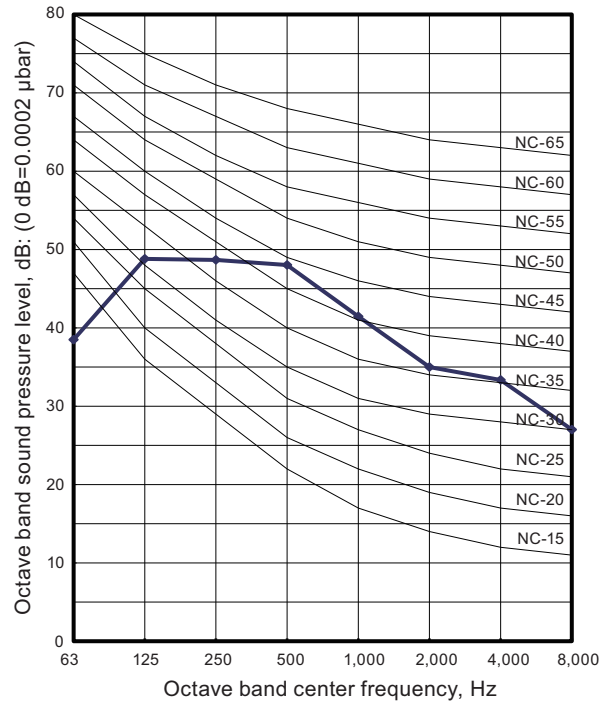


Model: AOUH12LPAS1

Cooling

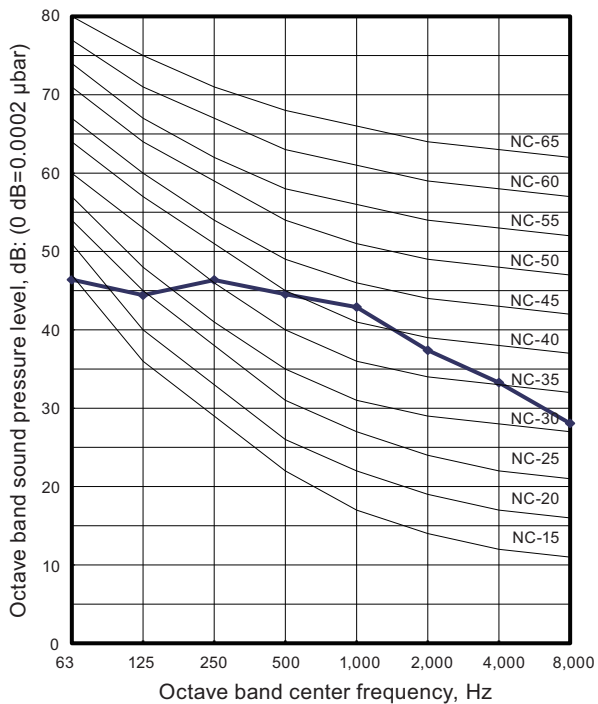


Heating

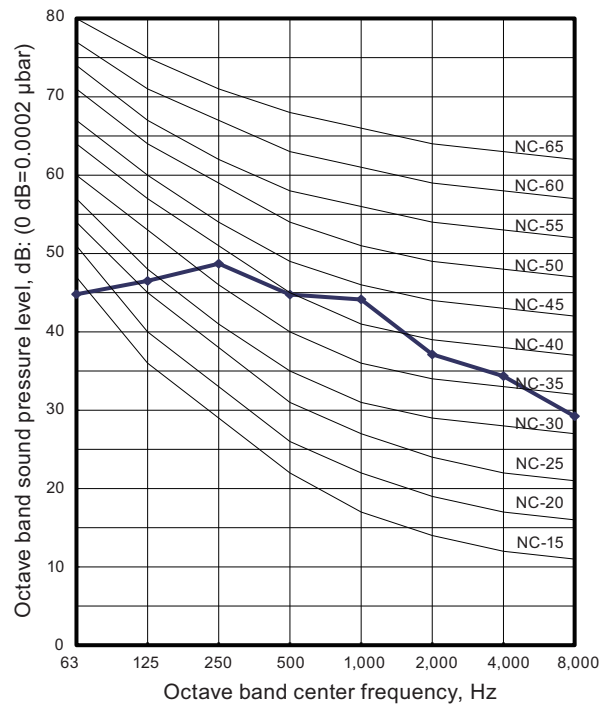

OUTDOOR UNIT
AOUH09-12LPAS1

OUTDOOR UNIT
AOUH09-12LPAS1

9-2. Sound level check point

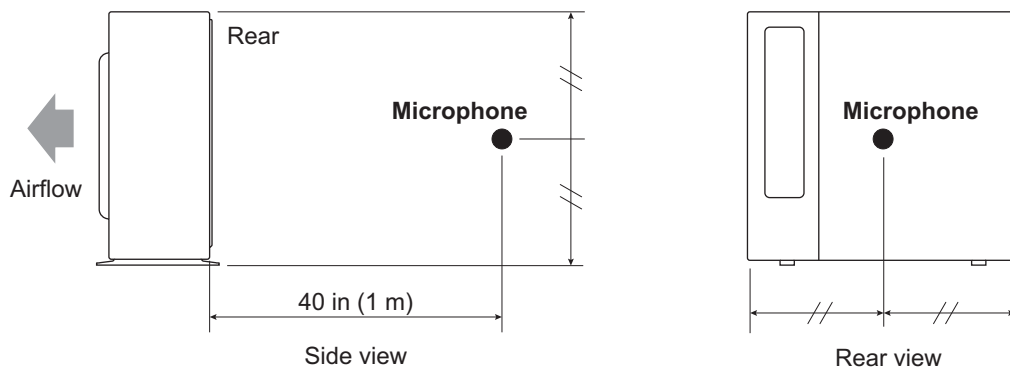

NOTE: Detailed shape of the actual outdoor unit might be slightly different from the one illustrated above.

10. Electrical characteristics

Model name			AOUH09LPAS1	AOUH12LPAS1
Power supply	Voltage	V	208/230~	
	Frequency	Hz	60	
MCA *1		A	9.7	
Starting current		A	3.7	4.9
Wiring spec. *2	MAX. CKT. BKR *3		A	15
	Power cable		AWG	14
	Connection cable *4	Size	AWG	14
		Limited wiring length	ft (m)	69 (21)

*1: Minimum Circuit Ampacity (Calculation based on UL60335-2-40)

*2: Selected sample based on Japan Electrotechnical Standards and Codes Committee E0005. As the regulations of wire size and circuit breaker differ in each country or region, select appropriate devices complied to the regional standard.

*3: Maximum Circuit Breaker

*4: Limit voltage drop to less than 2%. If voltage drop is 2% or more, increase cable conductor size.




11. Safety devices

Type of protection	Protection form		Model
			AOUH09LPAS1
Circuit protection	Current fuse (Main PCB)		250 V, 15 A
			250 V, 5 A
Fan motor protection	Thermal protection	Activate	217±32 °F (103±18 °C) Fan motor stop
		Reset	203±32 °F (95±18 °C) Fan motor restart
Compressor protection	Terminal protection program (Discharge temp.)	Activate	230 °F (110 °C) Compressor stop
		Reset	After 7 minutes Compressor restart
	Thermal protection program (Outdoor temp.) (Only in COOL or DRY mode)	Activate	5 °F (-15°C) Compressor stop
		Reset	14 °F (-10°C) Compressor restart

Type of protection	Protection form		Model
			AOUH12LPAS1
Circuit protection	Current fuse (Main PCB)		250 V, 15 A
			250 V, 5 A
Fan motor protection	Thermal protection program	Activate	217±32 °F (103±18°C) Fan motor stop
		Reset	203±32 °F (95±18°C) Fan motor restart
Compressor protection	Thermal protection program (Discharge temp.)	Activate	230 °F (110 °C) Compressor stop
		Reset	After 7 minutes Compressor restart
	Thermal protection program (Outdoor temp.) (Only in COOL or DRY mode)	Activate	5 °F (-15°C) Compressor stop
		Reset	14 °F (-10°C) Compressor restart

12. Accessories

12-1. Models: AOUH09LPAS1 and AOUH12LPAS1

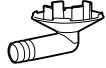Part name	Exterior	Q'ty	Part name	Exterior	Q'ty
Installation manual		1	Cable tie		2
Drain pipe		1			