





INSULATING PIPES WITH ARMAFLEX LAPSEAL TUBES

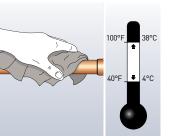



1. Clean all dust, dirt, oil and water from pipework using denatured alcohol where necessary. Install Armaflex when ambient temperature is between 40°F (4°C) and 100°F (38°C).







3. Adjust fitted Armaflex to ensure slit is easily accessible.

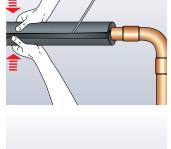



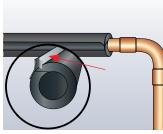


- 7. Remove the release liner on the outer lap, and apply even pressure to completely close the lap onto the Armaflex surface.



Note: Tight bends in pipes should be insulated with Armaflex rubber pre-fabricated fittings (Tee's and Elbows), rather than sliding the tube around elbows.

9. Seal all joints with Armacell 520 adhesive. Do not stretch when sealing joints. When gluing joints under compression, with no gaps present, the wet seal method should be applied.

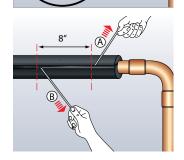


5. Remove the white release paper strip in 8" increments, by drawing it away from the insulation.



www.armacell.us



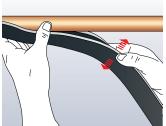

4. Locate the end of white release paper for the selfseal strip.

