DATE Oct. 2020

SERVICE PARTS LIST

Milwaukee

SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS

NUMBER

PACKOUT™ Rolling Tool Box Assembly
CATALOG NO. 48-22-8426 SERIAL
NUMBER

WIRING INSTRUCTION

48-22-8426 Includes:

48-22-8425	PACKOUT™ Large Tool Box Assembly	Page 3
48-22-8424	PACKOUT™ Medium Tool Box Assembly	Page 3
48-22-8430	PACKOUT™ Organizer Assembly	Page 4
48-22-8435	PACKOUT™ Compact Organizer Assembly	Page 4
48-22-8310	PACKOUT™ Small 10" Storage Tote	Page 5
48-22-8315	PACKOUT™ Medium 15" Storage Tote	Page 5
48-22-8320	PACKOUT™ Large 20" Storage Tote	Page 5

 $\boxed{00\,\boxed{0}} \ \boxed{\text{EXAMPLE:}} \\ \text{Component Parts (Small \#) Are Included When Ordering The Assembly (Large \#).} \\$

2(2x)

1 2

REVISED BULLETIN

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	43-62-8400T	Retractable Handle Grip Service Kit	(1)
2		Screw	(2)
3	43-62-8400	Retractable Handle Service Assembly	(1)
4		Screw	(2)
5	43-62-8426	Side Handle Svc. Kit (Contains 2 Side Handles and 4 P	ins) (1)
6		Pin `	(4)
7	45-94-8426	Wheel Svc. Kit (Contains 2 Wheels and 2 Locking Hex	Nuts) (1)
8		Locking Hex Nut	(2)
9	44-20-8400	Latch Šervice Assembly (Set of 2)	(1)
10	31-01-8400	Storage Tray	(1)
11	43-44-8400	Lid Gasket (Not Shown)	(1)
12	42-12-8426	Axle Svc. Kit (Contains 1 Axle and 2 Locking Hex Nuts)	(1)

*See page 6 thru 13 for Additional Storage Products:

48-22-8431	PACKOUT™ S-Organizer Assembly	Page 6
48-22-8436	PACKOUT™ S-Organizer Compact Assy.	Page 6
48-22-8450	PACKOUT™ Tool Box Assembly	Page 7
48-22-8321	PACKOUT™ Medium 15" Tool Bag	Page 8
48-22-8322	PACKOUT™ Large 20" Tool Bag	Page 8
48-22-8300	PACKOUT™ Tech Bag	Page 9
48-22-8301	PACKOUT™ Jobsite Backpack	Page 9
48-22-8302	PACKOUT™ Jobsite Cooler	Page 9
48-22-8410	PACKOUT™ Flat Dolly	Page 10
48-22-8422	PACKOUT™ Compact Toolbox	Page 11
48-22-8460	PACKOUT™ Compact Cooler	Page 11
48-22-8488	PACKOUT™ Customizable Work Surface	Page 12
18-22-8/15	PACKOUT™ 2 Wheeled Dolly	Page 13

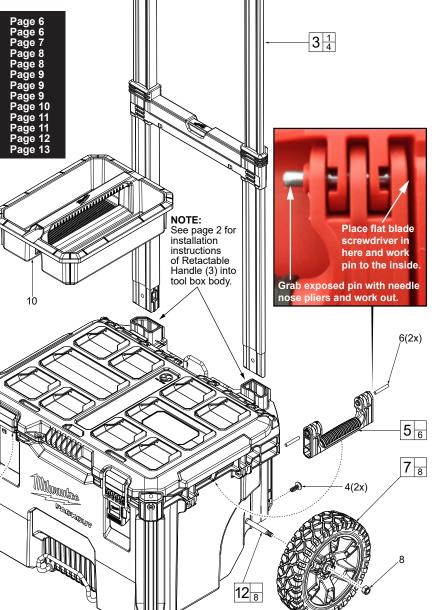


As an aid to removing a damaged Latch Assembly (9), use two large flat blade screwdrivers. Push blades between parts as shown. Twist both screwdrivers at same time to force the blades into opening and work the latch assembly over the two locking tabs.

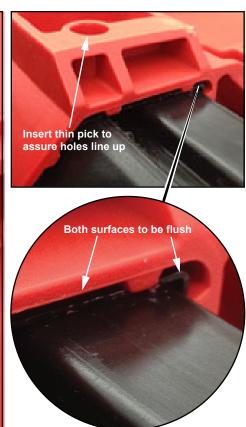
To install a new latch assembly, position entire latch assembly over locking tabs with the two top lugs partially inserted in 'catch cavity' of main housing. Engage latch bar onto lid and gently press latch lever to slide assembly over two locking tabs and into place.

This removal and installation process will be the same where other service latches are offered in this system.

MILWAUKEE TOOL • www.milwaukeetool.com 13135 W. LISBON RD., BROOKFIELD, WI 53005 Drwg. 7









As an aid to installation, collapse the Retractable Handle Assembly (3).


Properly orient the assembly and insert both sides into tool box channels.

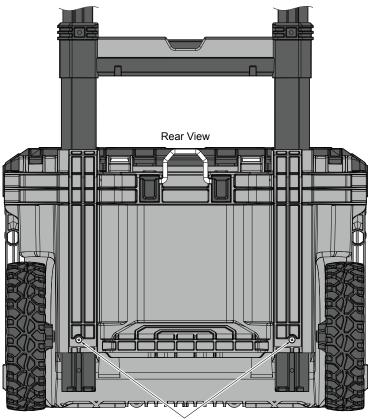Holes of Retractable Handle Assembly (3) must line up with holes on the back of tool box body prior to securing with screws (4).



Screws (4)

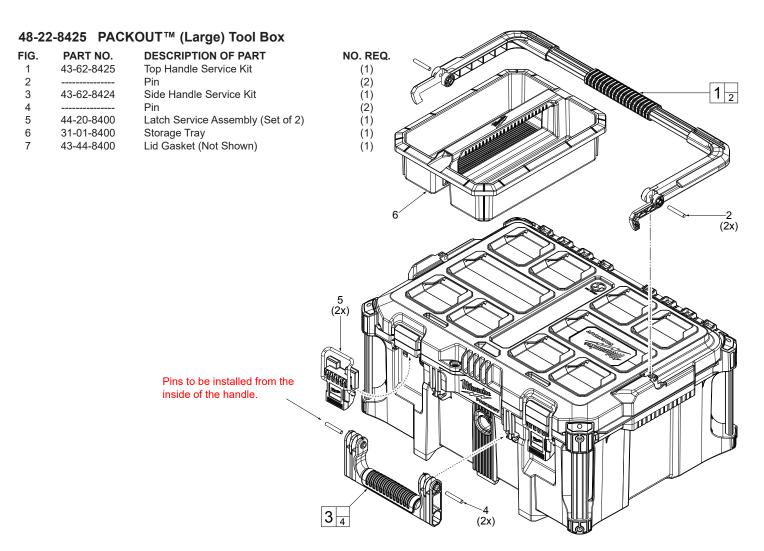


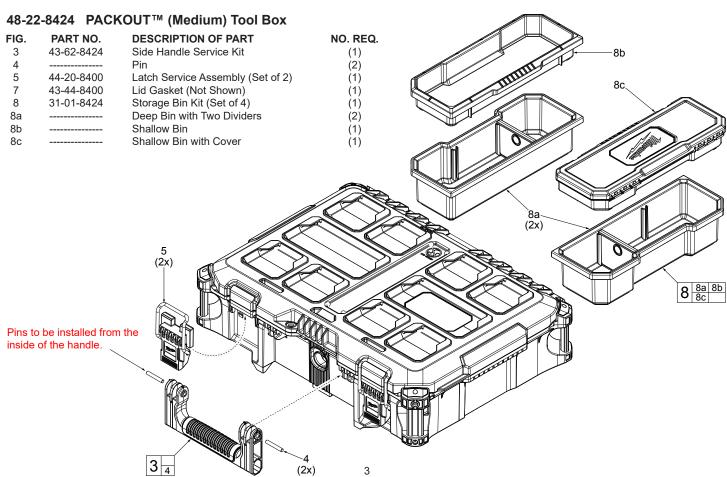

48-22	2-8430 PACI	KOUT™ Organizer		
FIG. 3 4	PART NO. 43-62-8430	DESCRIPTION OF PART Side Handle Service Kit Pin	NO. REQ. (1) (2)	
5 7	44-20-8430 43-44-8430	Latch Service Assembly (Set of 2) Lid Gasket (Not Shown)	(1)	
9 9a 9b	31-01-0501	5 Bin Kit (Set of 1) Large Bin Small Bin	(2) (1) (4) 9	9b (4x)
		s to be installed from the de of the handle.	4 (2x	

48-22-8435 PACKOUT™ Compact Organizer

FIG.	PART NO.	DESCRIPTION OF PART
3	43-62-8435	Side Handle Service Kit
4		Pin
7	43-44-8435	Lid Gasket (Not Shown)
9	31-01-0501	5 Bin Kit
9a		Large Bin
9b		Small Bin

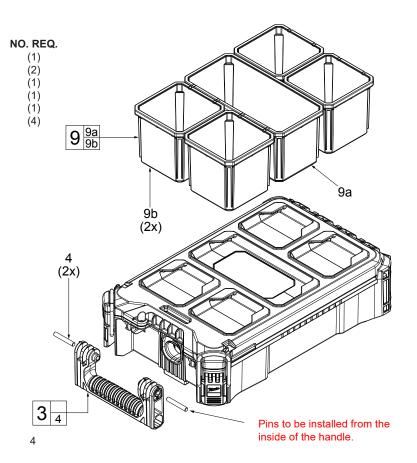

48-22-8310 10" PACKOUT™ (Small) Storage Tote 48-22-8315 15" PACKOUT™ (Medium) Storage Tote 48-22-8320 20" PACKOUT™ (Large) Storage Tote







FIG.	PART NO.	DESCRIPTION OF PART
1	45-56-8300	Shoulder Strap (For all three
2	44-20-8300	Locker Kit (For all three tote
	or	
3	44-20-0305	Locker Kit (For all three tote


tote models) (1) models) (1)

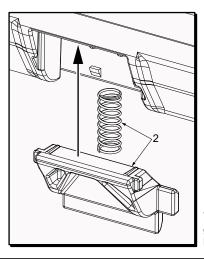
models)

(1)

SEE DIAGRAMS BELOW TO DETERMINE LOCKER SERVICE PART NEEDED.









No. 44-20-8300 Locker Kit For early production PACKOUT™ Storage Totes

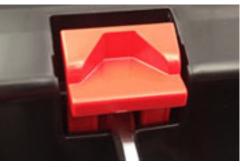To install a Locker Kit (2), align spring as shown and guide the tabs of locking carriage in channels of tote base. Push locking carriage upward to snap into place.



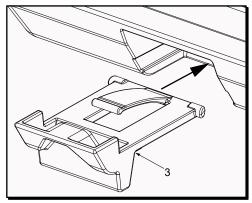
To remove a damaged locker system, flip tote over on the side and approach tote from the bottom of base. Insert a large flat blade screwdriver in middle of locking carriage as shown. Lightly pry carriage upward out of base opening. Remove and discard old locking carriage.






No. 44-20-0305 Locker For later production PACKOUT™ Storage Totes

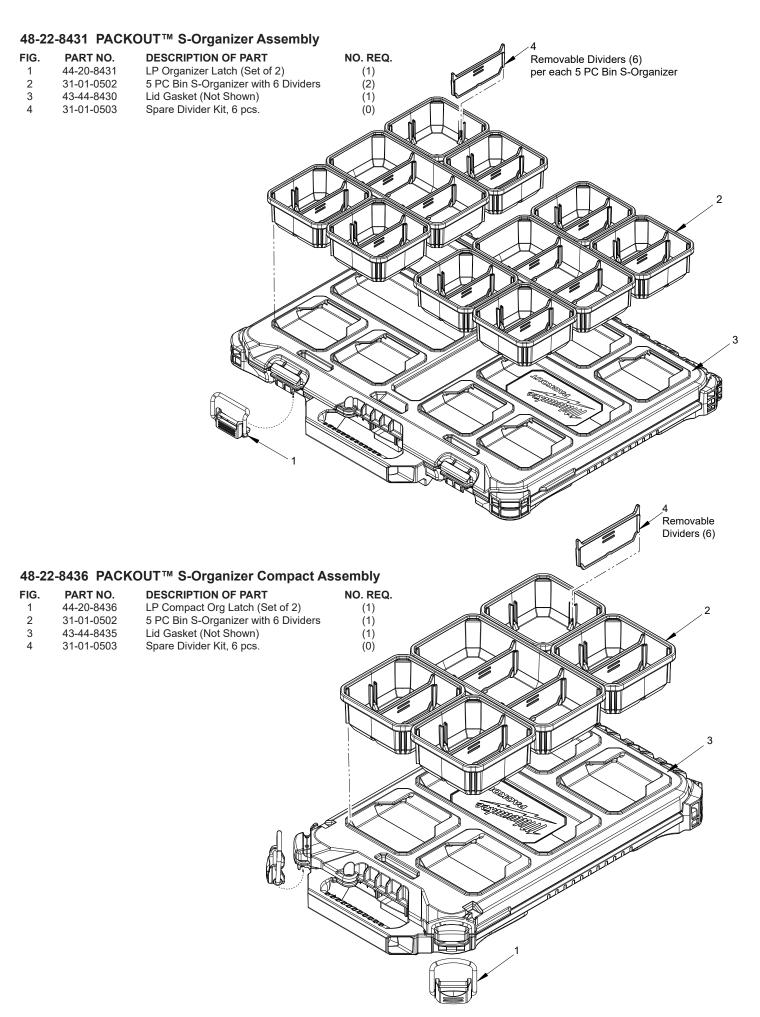To install a new Locker (3), guide the tabs of locking carriage in channels of tote base. Push locking carriage forward to snap into place.



48-22-8450 PACKOUT™ Tool Box Kit with Foam Dividers

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	43-62-8450	Kit Box Mono Block Handle with 2 Pins	(1)
2	44-20-8430	Latch Service Assembly (Set of 2)	(2)
3	43-44-8400	Lid Gasket (Not Shown)	(1)
4	48-22-8455	Foam Insert for PACKOUT™ Kit Box (Set of 2	2) (1)

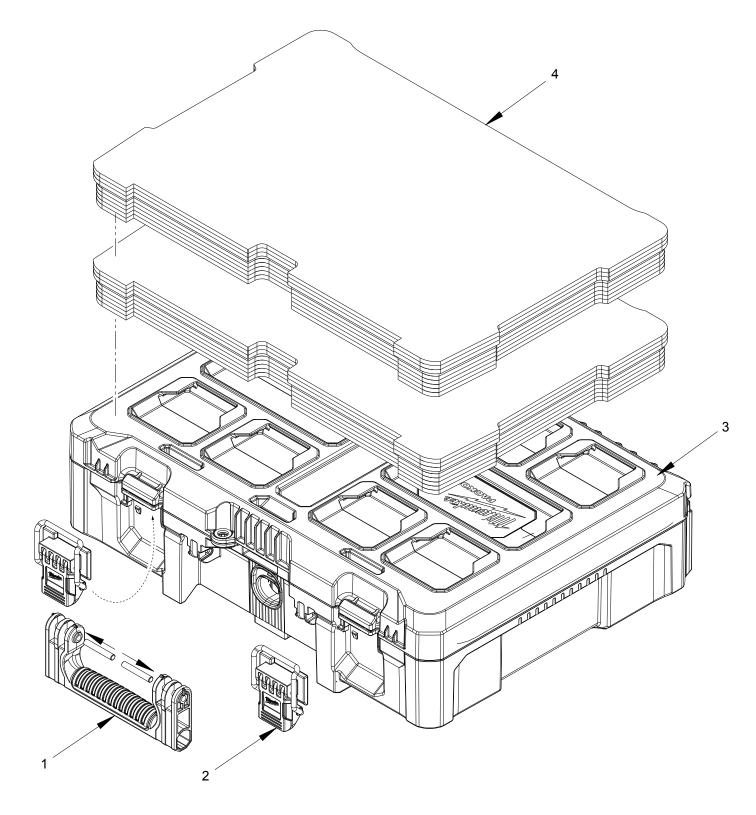



48-22-8322 20" PACKOUT™ (Large) Tool Bag*



*48-22-8321	15" PACKOUT™ (Medium) Tool Bag
*48-22-8322	20" PACKOUT™ (Large) Tool Bag

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	45-56-8300	Shoulder Strap (For both tote models)	(1)
2	44-20-8300	Locker Kit (For early versions of 48-22-8	321)
		See page two	(1)
3	44-20-0305	Locker (For 48-22-8322 and later version	าร
		of 48-22-8321) See page 5	(1)

SEE PAGE 5 FOR INSTRUCTIONS ON REMOVING SELECTION AND INSTALLING BOTH LOCKER SYSTEMS



48-22-8300 PACKOUT™ Tech Bag







48-22-8301 PACKOUT™ Jobsite Backpack







48-22-8302 PACKOUT™ Jobsite Cooler









FIG.	PART NO.	DESCRIPTION OF PART
1	45-56-8300	Shoulder Strap (For Cooler
2	44-20-0305	Locker System

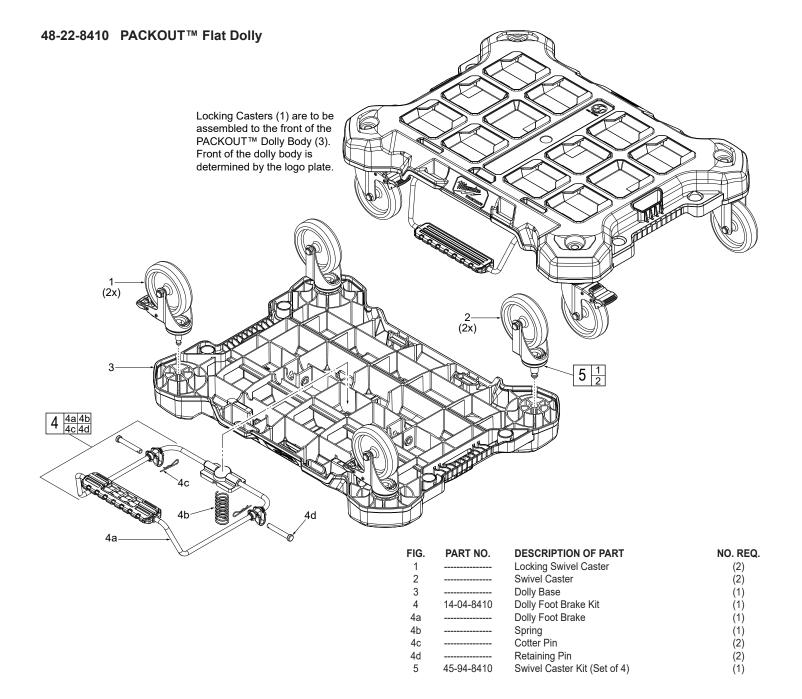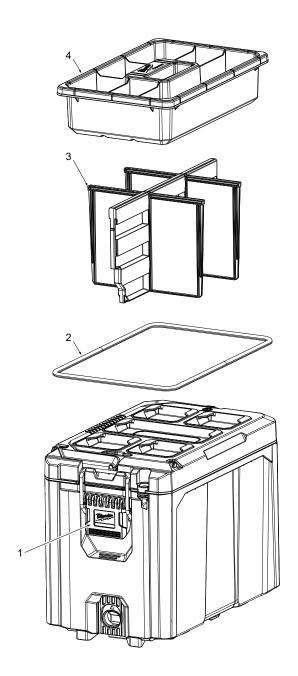r & Tech Bag) (1) (1)





Note: Tray, Dividers and Gasket illustrated outside of PACKOUT, is to be assembled on the inside.

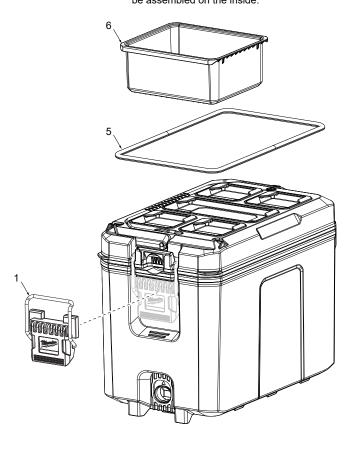


Fig.1



Fig. 2



Note:

Procedure for removal and installation of the 44-20-8422 Latch (1).

Removal:

- 1. Undo latch from PACKOUT lid.
 2. Insert a flathead screwdriver in-between latch assembly and PACKOUT base to pry over the tabs. (Fig.1)
 3. Pull metal latch down to remove.


- Insert Latch Assembly into channel.
 Attach the metal latch to the lid. (Fig.2)
 Close latch to secure Latch Assembly in place inside the channel.

48-22-8422 PACKOUT™ Compact Toolbox

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	44-20-8422	Latch Assembly	(1)
2	43-44-8422	Gasket	(1)
3	31-01-8423	Dividers	(1)
4	31-01-8422	Tray	(1)


48-22-8460 PACKOUT™ Compact Cooler

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	44-20-8422	Latch Assembly	(1)
5	31-01-8460	Tray	(1)
6	43-44-8460	Gasket	(1)

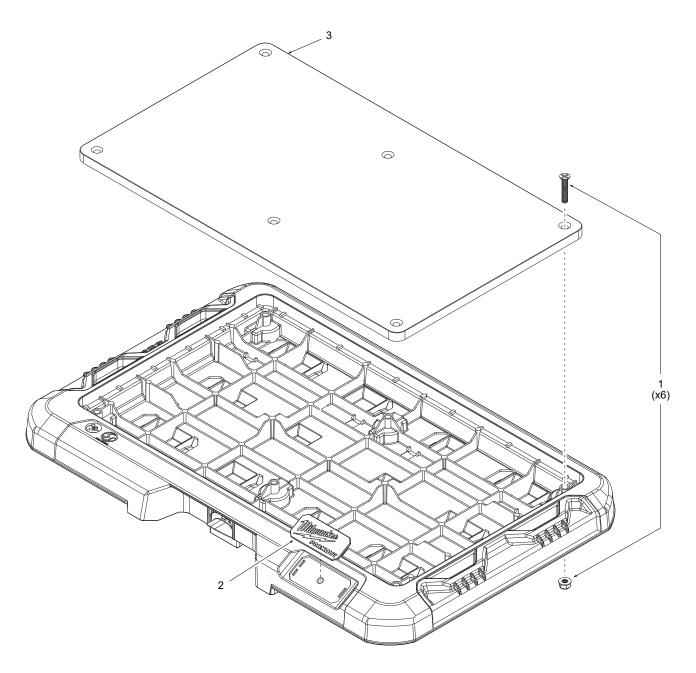

48-22-8488 PACKOUT™ Customizable Work Surface

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	14-46-8488	Hardware Kit 6 sets	(1)
2	31-01-8488	Logo Plate	(1)
3	45-64-8488	Wood Top	(1)

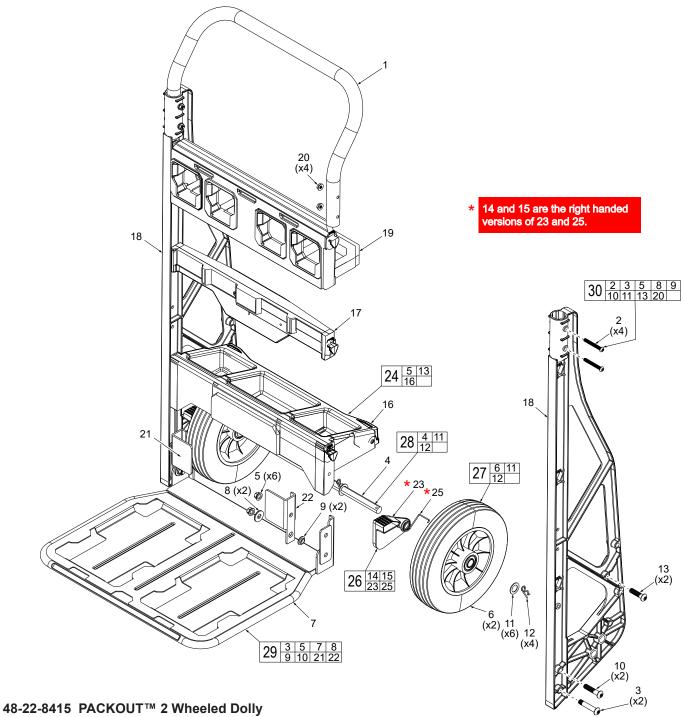

Logo Cross Member Side Frame

Handle Nut

PACKOUT Cross Member

Right Lock/Fender Assembly

17

18

19 20

21

31-86-8415

31-10-8415

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.				
1		Handle	(1)				
2		20 x 1.875" Bolts	(4)				
3		3/8-16 x 2 Bolts	(2)	FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
4		Axle	(1)	22		Left Lock/Fender Assembly	(1)
5		3/8-16 Lock Nut	(6)	23		Toe Plate Lock Left	(1)
6		Wheel	(2)	24	31-01-8415	Bottom Tray Kit	(1)
7		Base Plate	(1)	25		Left Spring	(1)
8		Washer	(2)	26	31-52-8415	Toe Plate Lock Kit	(1)
9		Nylon Shoulder Washer	(2)	27	45-94-8415	Wheel Kit	(1)
10		3/8-16 x 1.75" Bolts	(2)	28	42-12-8415	Axle Kit	(1)
11		5/8" Bushing Washers	(6)	29	42-36-8415	Toe Plate Kit	(1)
12		Hitch Pin	(4)	30	14-46-8415	Hardware Kit	(1)
13		3/8-16 x 1.5" Bolts	(2)				()
14		Right Spring (Not Shown)	(1)				
15		Toe Plate Lock Right (Not Shown)	(1)				
16	31-01-8415	Bottom Tray	(1)				
			1.1				

13

(1) (2) (1)

(4)

(1)