

Installation • Operation • Maintenance **GUIDE**

WHOLE HOUSE HEPA FILTRATION SYSTEMS

PREMIER^{ONE}
TM

H.E.P.A. Air Cleaner WHOLE HOUSE HEPA FILTRATION SYSTEM

MODEL HP500



Pictured here with the optional collar mount kit

For residential installation only

Table of contents



Manufacturer Warranty

You benefit from a limited 7 year warranty on the motorized impeller and a 5 year limited warranty against manufacturing defects on other components. The limited warranty covers normal usage. It does not apply to malfunctions or failures as a result of improper installation, abuse, mishandling or misapplication or any other circumstances outside the manufacturer's control or consent.

Warranty from the manufacturer is for parts only, labor and shipping of the product is not covered under warranty.

† Warranty doesn't cover in any way or form the replaceable Pre-Filter, Carbon Filter or HEPA Filter.

1. Getting Started

GENERAL INFORMATION	PAGE
1.1 Unpacking and inspection	2
1.2 Technical data	3

2. Installation Guide

INFORMATION FOR INSTALLERS	PAGE
2.1 Planning the installation	4
2.2 Type of installation: Return to Return	4
2.3 Type of installation: Stand-Alone	5
2.4 Installing the unit	6

3. Owner's Operation Guide

INFORMATION FOR THE HOMEOWNER	PAGE
3.1 General Operating Information	9

4. Maintenance Guide

GENERAL MAINTENANCE INFORMATION	PAGE
4.1 Changing filters	10
4.2 Cleaning unit	10
4.3 Auxiliary relay control module	11

Box Content

Includes:

- Whole House HP 500
- Power cord, 5 FT
- Plenum seal, 7.5 FT
- Screws, (16) 8 x 32 x 1/2"
- Template



1.2. Technical Data

Dimensions and Clearance installation

Specifications


Model HP500	
Filtration Stage 1 & 2	Prefilter with Carbon (RPCF677)
Filtration Stage 3	HEPA filter (RHF562)
Weight	28 lbs (12.7 kg)
Plenum Mount Port Openings	16" x 3.5" (406mm x89mm)
Collar Mount Port Openings	8" (203mm) Round*
Installation type	Plenum, Wall* or Floor* Mounted
Electrical Supply	120 VAC @ 60 Hz
Power Consumption	134 W
Certification	cCSA _{US}
Air flow data	220-300 CFM.

* Installation requires kit No.CMK500


IMPORTANT INFORMATION

The manufacturer reserves the right to modify a product, without prior notice, whether in design, color or specifications, in order to offer at all times a quality product that is highly competitive. • Please consult local authorities to find out whether the installation of electrical products requires the services of a certified technician or electrician.

Return Air Plenum Installation

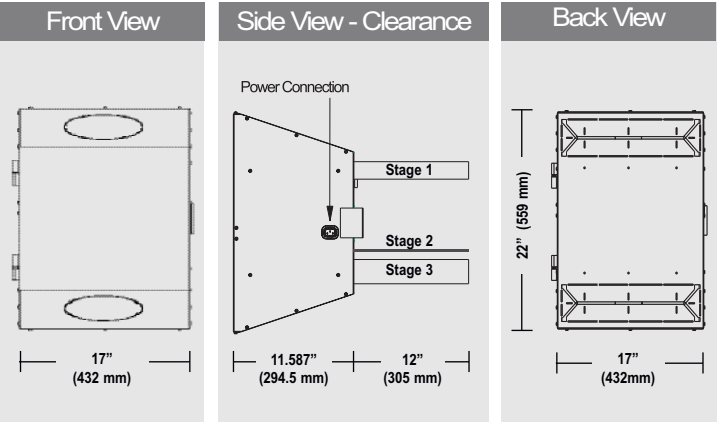

Return Air Plenum and Stand Alone Installations * With Collar Mount Kit

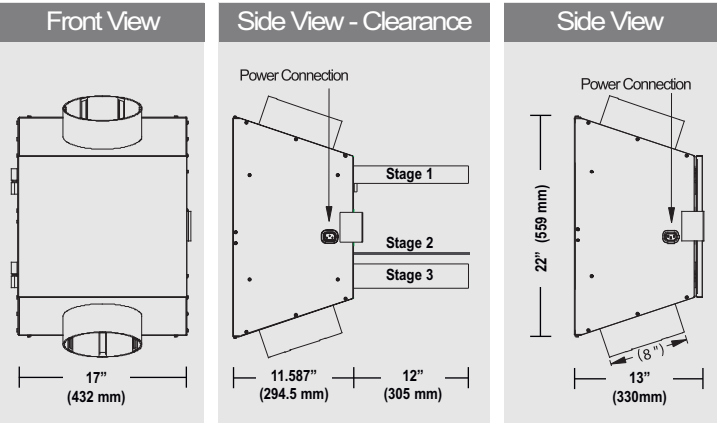

Installation GUIDE

2. Information for the Installer

Special Consideration

For integrated system installation

- Verify clearance on the ductwork to mount the unit using the Forced Air heating/cooling system
- Minimum clearance requirements for maintenance and service
- Electrical power requirements
- Interaction between the HEPA filter unit and other mechanical devices.

2.1 Planning the Installation

The Whole House HEPA unit is a versatile appliance with multiple installations configuration. It is recommended to take your time in planning the installation.

Several Installations are illustrated herein' for Whole House filtration applications:

- Return to return integrated with the forced air heating/cooling system.
- Central draw points using dedicated duct system
- Consult the manufacturer for other special applications.

Ducting Flair System installation

The Whole House HEPA Filtration system is designed to install directly onto the return air plenum of the forced air heating/cooling system. Choosing this type of installation eliminates the need to externally duct the HEPA filter unit to the plenum system. If you choose this type of installation, it is recommended that you run the fan on your forced air system continuously to maximize its cleaning ability.

TIPS to installer


The Whole House HEPA Filtration system does not replace the filter from the forced air heating/cooling system. Regular maintenance of this filter is necessary to permit the good operation of the forced air heating/cooling system.

Optional collar system installation


Using kit no. CMK500 the Whole House HEPA Filtration system can be converted to use 8 inch round collars for application requiring ducting. The kit includes two, 8 inch round collars, two mounting brackets for wall or floor mounting, installation guide and fasteners.

2.2 Type of Installation: Return to Return Integrated System

*Ducting Flair System
(Hepa Mounted on Duct)*

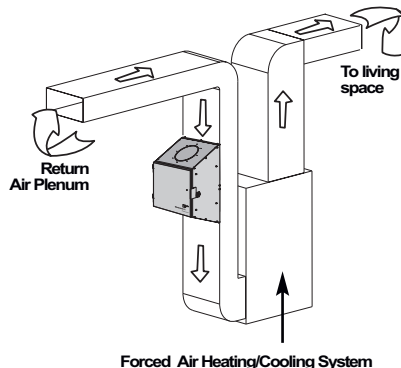

*Optional Collar System
(Hepa Mounted on Wall)*

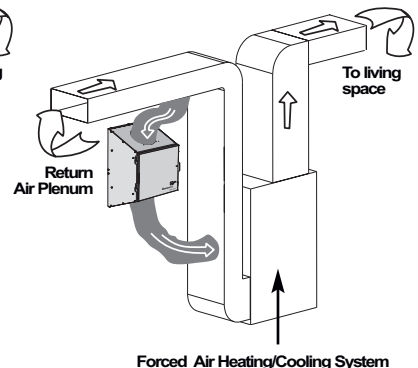

INSTALLATION SHOULD BE PERFORMED BY A CERTIFIED PROFESSIONAL.
Consult your HVAC product manufacturer if the usage of this product will affect the performance of your forced air heating / cooling system.

Installation GUIDE


2.3 Types of Installation: Stand-Alone

Stand Alone

Attic Installation

Ideal for homes without a forced air heating / cooling system. Allows for air filtration and circulation throughout the home.


HEPA system must be operated continuously whenever a part or all the system is located in an unconditioned space to avoid condensation in the ductwork below freezing (0°C, 32°F).

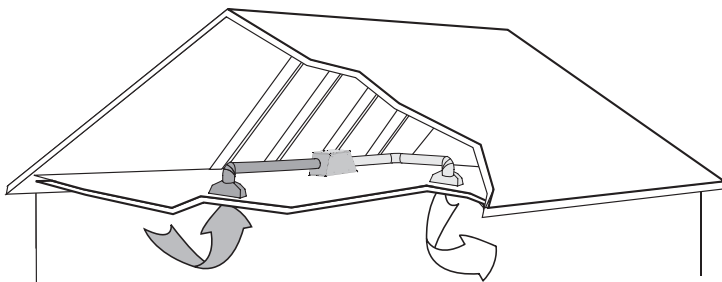

Stand Alone

Basement Installation

Ducting will usually consist of one return with grille from one side of the home, and one supply with grille at the opposite end of the home.

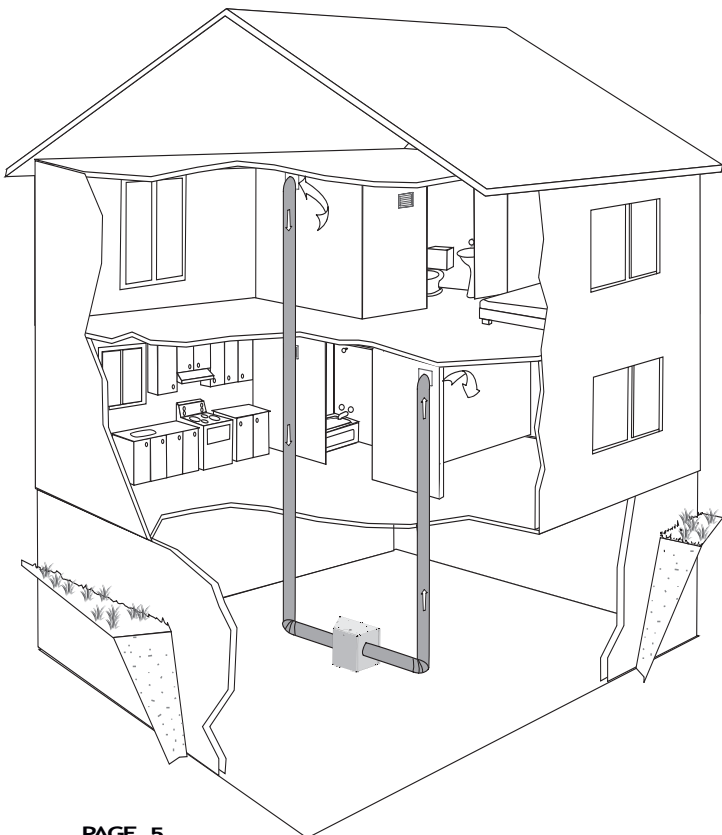

Installation GUIDE

2.4 Installing the unit

Tools required

- Phillips #2 or Robertson #1 screwdriver
- 3/32" drill bit
- Tin snips or metal shear
- Power Drill

Location

Return side connections is to be installed after the last branch on the return air plenum and minimum 2 linear ft distance from furnace.

A 5-ft power cord is supplied with the unit. If not available a 120VAC outlet needs to be supplied.

Note:

Refer to the Owner's Operation Guide (p.9) for details on how to remove the unit's door and filters

Step by step Installation

Steps involved in the preparation of the plenum mount system are as followed:

Step 1:

Preparing return air plenum

Find a location that satisfies both service and maintenance requirements and proceed to cut holes as illustrated below.

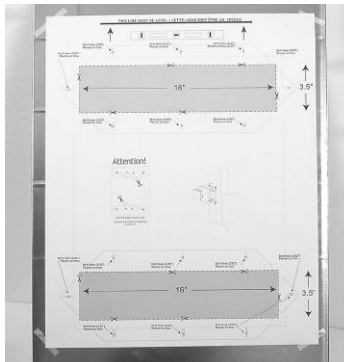


figure 2.1a - Tape template to return air plenum. Cut opening with metal shears and predrill for the securing screws.



figure 2.1b - Remove template.

Step 2:

Preparing ducting flairs

Remove the door and filters and proceed to cut the insulation as illustrated below.

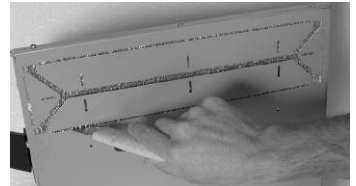


figure 2.2a - Cut the insulation along the inside edge of both inlet and outlet ports to remove the insulation from the port openings.



figure 2.2b -One cut permits the clean removal of the insulation piece.



figure 2.2c -The unit should look like this when the foam piece is removed.

Installation GUIDE

2.4 Installing the unit (Continued)

Tips to installer

Interlocking the HEPA filtration unit with the forced air heating / cooling system is possible using an auxiliary relay. Refer to page 11 of this guide for example.

Please consult local authorities to find out whether the installation of electrical products requires the services of a certified technician or electrician.

Step 2:(Continued)

Cut the four metal tabs to release the mounting flairs for the inlet and outlet ports.

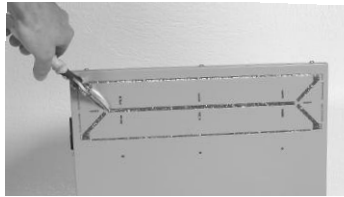


figure 2.2d



figure 2.2e

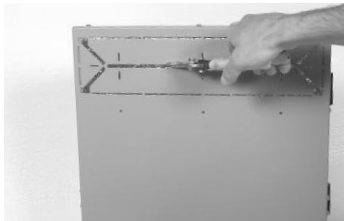


figure 2.2f

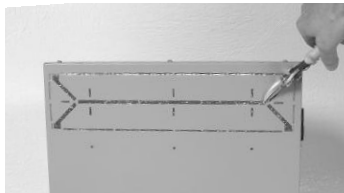


figure 2.2g

Step 2:(Continued)

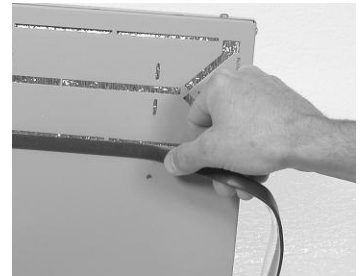


figure 2.2h - Apply plenum seal tape all around both openings on the back of the unit.

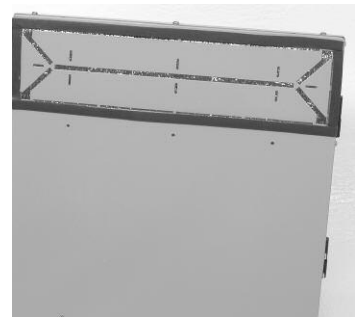


figure 2.2i



figure 2.2j- Bend tabs outward approximately 90 degrees.

Installation GUIDE

2.4 Installing the unit (Continued)

Tips to installer

It is recommended that the filtration unit have a devoted receptacle with 115V. It is not recommended to connect unit with an extension cord. If no receptacle is available please call an electrical contractor to have one installed.



**MAKE SURE TO INSTALL
FILTER ACCORDING TO
AIR FLOW DIRECTION FOR
MAXIMUM PERFORMANCE**

Check for this symbol on each
filters and it is located on the
unit's motor plate.

Step 3: Mount Hepa



figure 2.3a - Align unit into place.



figure 2.3b - Unfold the ducting flairs
completely to sandwich the return air plenum
between the ducting flair and the filtration unit.

Step 3: (Continued)



figure 2.3c - Install unit as usual using all
supplied fastening hardware.

Step 4: Finishing



figure 2.4a - Remove protective plastic covers
from all filters and replace them in their prop-
er location (Stage 1, 2 and 3).



figure 2.4b - Replace door and insert power
cord into the receptacle of the filter units and
the other end into wall outlet.

Owner's Operation GUIDE

3. General Operating Information

**Door
Switch**



**Mode
Selector**

- II
- I



Operations

Maximum Filtration



Normal Filtration



Function

The Whole House HEPA system is comprised of a ventilator, speed selection switch, 3 stages of filtration and the cabinet enclosure system. The ventilator pulls air through the pre-filter and pushes the same air through the impregnated carbon pad for odor control and finally the last stage of filtration is the HEPA filter which removes 99.97% of particles 0.3µm in size.

Operation Mode Options

The unit features two speeds of operation for your convenience. The speed selection switch is located on the front of the motor assembly. At lowest speed the unit will provide 220 CFM of clean air while at highest speed, the unit will provide 300 CFM of clean air. It is recommended that the unit be operated on highest speed at all times to maximize the benefits of the HEPA filtration system. If for some reason the filtration needs are not as important then one might operate the unit at low speed.

An access door is provided at the front of the unit to permit access to the filters and speed selection switch. Opening the latch on the right side of the unit will permit the door to swing open. A safety door interlock switch cuts the power to the motors for your safety. If needed the door can be removed from the cabinet hinges by holding the top part of the door with one hand and gently taping on the bottom edge of the door with the other hand to release the door from its hinges.



Recommended Operation

The return plenum mount model operates in conjunction with your forced air heating/cooling system. A forced air distribution system continuously circulates the same air inside your home. The whole house HEPA filtration system operates on the principle of bypass filtration, which means that a portion of the air being returned into the furnace is filtered on each pass. Over time all the air in the home gets cleaned. It is recommended that the furnace blower be in operation whenever the filtration system is in operation.

For stand-alone attic installation, the HEPA filtration system must be operated continuously whenever a part of all the system is located in an unconditioned space to avoid condensation in the ductwork below freezing (32°F, 0°C).

Maintenance of the unit should be performed at regular intervals to keep the benefits of the HEPA filtration unit.

Maintenance GUIDE

4. General Maintenance Information

When should I Service my Unit?

service and accessories

Detailed maintenance information is located on the front decal on motor plate.

PRE-FILTER AND CARBON FILTER

Replace filters every 3 to 6 months or as needed.

HEPA FILTER

Replace filter every 1 to 3 years or as needed. Check regularly to maintain maximum performance from your HVAC system.

For replacement filters, contact your local HVAC contractor.

Note

to installer

IMPORTANT : ALWAYS UNPLUG UNIT BEFORE SERVICING

4.1 Changing Filters

After opening the unit's door, grasp both edges of filter and pull with equal force to slide out the filter.



4.2 Cleaning


Once a year or as needed, clean the interior of the unit (Wall and motor plates) using mild non-abrasive soap and water. It is recommended to use products that are environmentally friendly.



4.3 Troubleshooting

Troubleshooting	Suggestions
Unit does not operate	<ul style="list-style-type: none">• Is power cord fully inserted in the unit's connector?• Is outlet powered?• Is door interlock switch operating?
Unit operates only on one speed.	Possible loose wire inside electrical box, contact your local contractor.
Unit vibrates	Check for excessive dust buildup or missing balancing weight on the impeller wheel.

4.4 Electrical Wiring Diagram

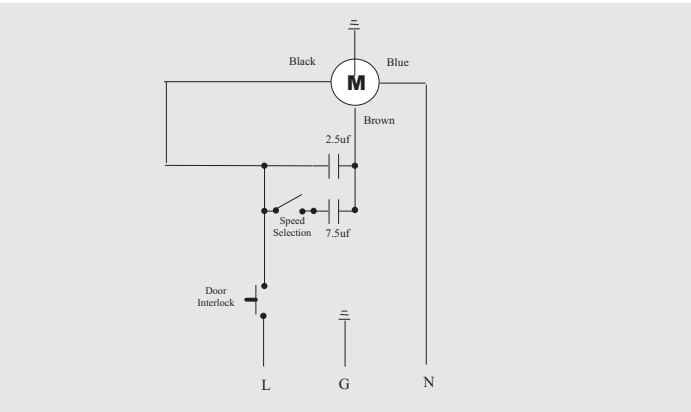

Contact

For Technical Support


- Toll Free: 1-800-982-1840

Warning:

Instructions listed for interlocking the filtration unit to a furnace is an example only. Actual wiring of interlock connection may vary depending on the system

Wiring the HP500 Air Cleaner to an ICP 80% or 90 % +/-Furnace


The wiring together of the HP 500 Air cleaner onto an ICP electronic fan control (EFC) board is as simple as 1-2-3. Control boards on different brands of furnaces vary but in principal are all quite similar.

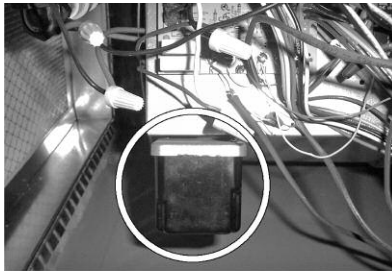

Step 1:

Turn-off electric power to furnace and use a 120V coil SPST N/O relay.

Mount relay to a “ ” knockout.

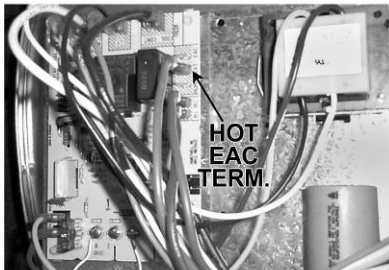

Step 2:

Wire the HOT EAC terminal on the furnace's EFC board to one side of the 120V coil on the relay. Wire the other side of the 120V coil back to a spare common terminal on the EFC board.



Step 3:

Wire 120V HOT from blower door safety switch (use a spade terminal splitter similar to Johnstone #G21-414) to one side of the open contact on the relay (red wires on L38-180). Wire from the relay to a receptacle you mount in a 2X4 handy-box on the outside of the furnace. Wire the common side of the receptacle to the common terminal on the furnace EFC board.



1-800-982-1840

www.premieroneproducts.com